

[Manuals.plus](#) /

› [NEEWER](#) /

› NEEWER Basics X12B Aluminum Alloy Lifiable Teleprompter 12" User Manual

NEEWER X12B

NEEWER Basics X12B Aluminum Alloy Lifiable Teleprompter 12" User Manual

Model: X12B

INTRODUCTION

The NEEWER Basics X12B Teleprompter is designed to assist with video recording, live streaming, and presentations by displaying scrolling text in front of your camera lens. This device features a no-assembly design, intelligent remote control, and app compatibility for a streamlined user experience. Its aluminum alloy construction ensures durability while maintaining a lightweight profile.



Image: The NEEWER Basics X12B Teleprompter setup, including a camera mounted behind the beam splitter glass, a tablet displaying text, the remote control, a cleaning cloth, and the portable carry bag.

Image: Demonstrates the versatility of the NEEWER X12B Teleprompter for various applications, showing it in use for live broadcasting and video recording scenarios.

WHAT'S IN THE BOX

- 1 x NEEWER Basics X12B Teleprompter
- 1 x RT113 Remote Control (AAA battery not included)
- 1 x Portable Carry Case
- 1 x Cleaning Cloth

SETUP INSTRUCTIONS

The NEEWER Basics X12B Teleprompter features an installation-free design for quick setup.

Initial Setup

1. **Remove from Case:** Carefully take the teleprompter out of its portable carry case.
2. **Mount to Tripod:** Attach the teleprompter to a tripod using the bottom screw mount. Ensure it is securely fastened.
3. **Unfold and Use:** Unfold the teleprompter's structure until it is fully extended and ready for use.

NO ASSEMBLY NEEDED

The NEEWER Basics X12B All in One Teleprompter is upgraded with an installation free design.



1 Remove from the case



2 Mount it to a tripod via the bottom screw



3 Unfold it and use

Image: A visual guide illustrating the three simple steps for setting up the NEEWER X12B Teleprompter: removing it from the case, mounting it to a tripod, and unfolding it for immediate use.

Camera and Device Placement

The teleprompter is designed to keep your camera lens centered for optimal eye contact with the audience.

- **Camera Mounting:** Place your DSLR or mirrorless camera on the adjustable platform behind the beam splitter glass. Adjust the camera's position to ensure the lens is centered within the teleprompter's opening.
- **Device Compatibility:** The teleprompter is compatible with iPads, tablets, and smartphones. Place your

device on the tray below the beam splitter glass.

- **Adjustable Platform:** The aluminum alloy construction allows for adjustments in width (up to 22cm) and extension height (up to 7cm) to accommodate various photography equipment and ensure the lens remains centered.

ALWAYS KEEP LENS CENTERED

The adjustable aluminum alloy construction makes it suitable for various photography equipment by keeping the lens always centered.



Image: A detailed view of the NEEWER X12B Teleprompter's adjustable platform, highlighting the adjustable width (22cm) and extension height (7cm) for precise camera positioning.

WIDE COMPATIBILITY

Fit all models of smartphones and tablets up to 9.84" x 8.68"/25cm x 22cm.



Mirrorless Cameras/DSLR



✓ Compatible with Smartphones



✓ Compatible with iPad / iPad Air / iPad Pro 11"



✗ Not compatible with iPad Pro 12.9"

Note: Only X12B teleprompter included.

Image: Illustrates the wide compatibility of the NEEWER X12B Teleprompter, showing it can be used with various smartphones, iPads/iPad Air/iPad Pro 11", and mirrorless/DSLR cameras. Note: Not compatible with iPad Pro 12.9".

OPERATING INSTRUCTIONS

Using the NEEWER Teleprompter App and Remote Control

The NEEWER X12B Teleprompter is controlled via the NEEWER Teleprompter App and the included RT113 remote control.


- 1. Download the App:** Download the 'NEEWER Teleprompter' app from your device's app store. The app is compatible with iOS 11.0/Android 6.0 and later.
 - For iOS: [NEEWER Teleprompter App \(iOS\)](#)
 - For Android: [NEEWER Teleprompter App \(Android\)](#)
- 2. Pair Remote:** Insert an AAA battery (not included) into the RT113 remote. Pair the remote with your smartphone or tablet via Bluetooth within the NEEWER Teleprompter App, or directly through your device's

Bluetooth settings.

3. **Load Script:** Input or paste your script into the NEEWER Teleprompter App.
4. **Control Playback:** Use the RT113 remote to control the script playback:
 - **Play/Pause:** Start or stop the script scrolling.
 - **Adjust Scroll Speed:** Increase or decrease the scrolling speed to match your speaking pace.
 - **Turn Script Pages:** Navigate through different sections or pages of your script.
 - **Change Font Size:** Adjust the text size for optimal readability on the 12" HD display.

INTELLIGENT REMOTE CONTROL

Remote control via the included RT113 remote (battery not included) and the NEEWER Teleprompter App.

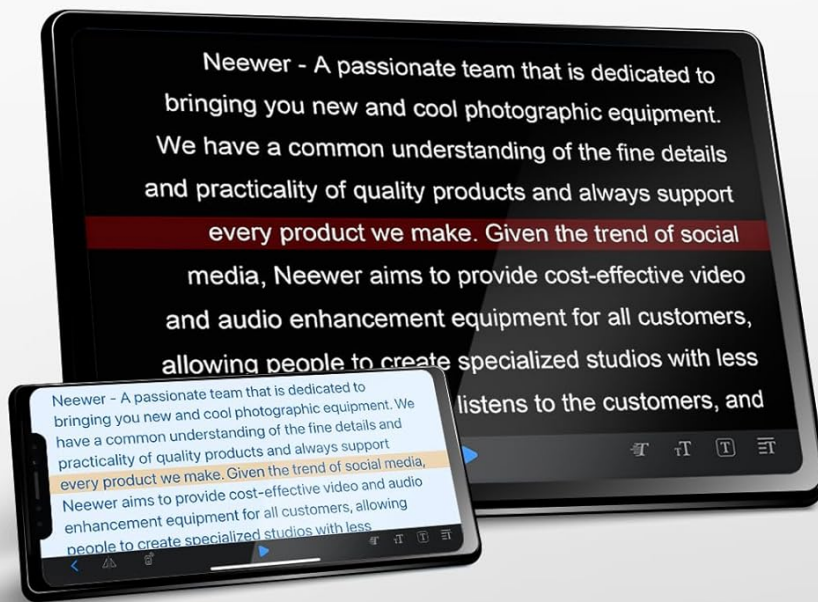

Play/Pause



Change Font Size



Adjust Scroll Speed



Page Up/Down



iOS



Android



NEEWER
Teleprompter



Pair with the upgraded "NEEWER Teleprompter" app.

Image: Displays the NEEWER Teleprompter App interface on a tablet and smartphone, alongside the RT113 remote control with labeled buttons for play/pause, font size adjustment, and scroll speed/page navigation. QR codes for app download are also shown.

Reading Experience

The teleprompter features a high-quality beam splitter glass with 75% light transmittance, ensuring clear text reflection.

- **Clear Display:** The 12" high-definition display provides clear and crisp text.
- **Reading Distance:** Text can be read clearly from up to 10 feet (3 meters) away.
- **Adjustable Hood:** The adjustable hood helps to minimize glare and improve text visibility in various lighting

conditions.

CLEAR & EASY TO READ

The multi coated glass ensures clear text reflection on the 12 inch high definition display.



Image: Highlights the clear text reflection on the 12-inch HD display of the NEEWER X12B Teleprompter, detailing its 75% light transmittance, 25% reflectivity, and 10ft reading distance.

Official Product Video

Your browser does not support the video tag.

Video: An official product video demonstrating the features and usage of the NEEWER Basics X12B Teleprompter, including its setup and operation.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your NEEWER Basics X12B Teleprompter.

- **Cleaning the Glass:** Use the provided cleaning cloth or a soft, lint-free microfiber cloth to gently wipe the beam splitter glass. Avoid abrasive materials or harsh chemicals that could scratch or damage the coating.
- **General Cleaning:** Wipe down the aluminum alloy frame and other surfaces with a dry or slightly damp cloth to remove dust and fingerprints.

- **Storage:** When not in use, fold the teleprompter flat and store it in the durable carry case. This protects the device from dust, scratches, and impacts during transport or storage.
- **Battery Replacement:** Replace the AAA battery in the RT113 remote control as needed to ensure consistent performance.

CARRY CONFIDENCE IN THE CASE

Protect and store the X12B teleprompter with the included portable case.



Image: The NEEWER X12B Teleprompter securely packed inside its portable carry case, demonstrating its compact storage and transport capabilities.

TROUBLESHOOTING

If you encounter issues with your NEEWER Basics X12B Teleprompter, refer to the following common solutions:

- **Text Not Clear/Visible:**
 - Ensure the beam splitter glass is clean and free of smudges.
 - Adjust the brightness of your tablet/smartphone screen.
 - Check ambient lighting conditions; use the adjustable hood to reduce glare.
 - Verify that the text size in the app is appropriate for your reading distance.

- **Remote Control Not Responding:**

- Check if the AAA battery in the RT113 remote needs replacement.
- Ensure the remote is properly paired with your device via Bluetooth. Try re-pairing if necessary.
- Confirm that the NEEWER Teleprompter App is open and active on your device.

- **Camera Lens Not Centered:**

- Adjust the camera mounting platform's width and height to align the lens with the teleprompter's opening.
- Ensure your camera is securely fastened to the platform.

- **App Issues:**

- Ensure your device's operating system (iOS 11.0+/Android 6.0+) is compatible with the app.
- Try restarting the app or your device.
- Check for app updates in your device's app store.

SPECIFICATIONS

Feature	Specification
Model Number	X12B
Product Dimensions	14.8 x 5.12 x 14.06 inches
Item Weight	5.68 pounds
Display Size	12 inches (HD)
Light Transmittance	75%
Reading Distance	Up to 10 feet (3 meters)
Material	Aluminum Alloy
Connectivity Technology	Bluetooth
App Compatibility	iOS 11.0+ / Android 6.0+
Remote Control	RT113 (requires 1x AAA battery)

WARRANTY AND SUPPORT

NEEWER products are designed for reliability and performance. For warranty information, technical support, or service inquiries, please visit the official NEEWER website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

Manufacturer: NEEWER

Website: [NEEWER Official Store on Amazon](#)

