

Manuals.plus /

› MUDDY /

› Muddy CRV3 HD SD Card Viewer Instruction Manual

MUDDY CRV3 HD SD Card Viewer

Muddy CRV3 HD SD Card Viewer Instruction Manual

Model: CRV3 HD SD Card Viewer | Brand: MUDDY

INTRODUCTION

The Muddy CRV3 HD SD Card Viewer is designed for easy viewing of SD card captures with its high-definition, 4.3-inch color LCD screen. This device features durable, water-resistant housing, intuitive menu operation, and adjustable settings for optimal performance in outdoor environments. It supports 1080P video playback for SD cards up to 32GB and is powered by four AA batteries (not included).

WHAT'S IN THE BOX

- SD Card Reader/Viewer with 4.3" LCD Screen
- Wrist Lanyard

KEY FEATURES

- **1080P Video Playback:** Supports high-definition video playback.
- **4.3" Color LCD Screen:** Provides a clear display for viewing media.
- **Intuitive Menu Operation:** Easy-to-navigate menu for user convenience.
- **Headphone Jack for Audio:** Allows for private audio monitoring.
- **Adjustable Brightness & Volume:** Customize display and sound levels.
- **Image Management:** Options to View, Transfer, and Delete images.
- **Durable Water-Resistant Housing:** Built to withstand outdoor conditions.
- **Micro USB Slot:** For connectivity and data transfer.
- **SD Card Slot:** Supports SD cards up to 32GB.

- **Power Source:** Operates on 4 AA Batteries (not included).

SETUP

1. Battery Installation

The Muddy CRV3 HD SD Card Viewer requires four (4) AA batteries (not included) for operation. To install batteries:

1. Locate the battery compartment on the back of the device.
2. Turn the locking tab counter-clockwise to unlock and open the battery cover.
3. Insert four AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery cover and turn the locking tab clockwise to secure it.



Image: Rear view of the Muddy CRV3 HD SD Card Viewer showing the circular locking tab for the battery compartment. The compartment is opened to reveal four AA batteries.

2. SD Card Insertion

The device supports SD cards up to 32GB. To insert an SD card:

1. Locate the SD card slot on the side of the viewer.
2. Gently insert the SD card into the slot with the metal contacts facing down until it clicks into place.
3. To remove, push the SD card inward until it clicks, then release to eject.



Image: Side view of the Muddy CRV3 HD SD Card Viewer highlighting the SD card slot and Micro USB port.

OPERATING INSTRUCTIONS

1. Power On/Off

- **To Power On:** Press and hold the **POWER** button located on the right side of the device until the screen changes color and the Muddy logo appears. The device will then initialize the SD card and display the main menu.
- **To Power Off:** Press and hold the **POWER** button until the "POWER OFF" message appears on the screen, then release.

2. Menu Navigation

The Muddy CRV3 features an intuitive menu system. Use the directional arrow buttons (**UP**, **DOWN**, **LEFT**, **RIGHT**) to navigate through options. An orange border will highlight the currently selected item.

- Use the directional buttons to move the orange border to your desired menu icon.
- Press the **ENTER** button to confirm your selection.
- Press the **MENU** button to go back to the previous screen or exit a function.

3. Viewing Images and Videos

From the main menu, select the appropriate icon to view images or videos stored on your SD card.

- Select the "View Images" icon (typically represented by a picture frame) and press **ENTER**.
- Use the directional buttons to scroll through thumbnails.
- Press **ENTER** to view a selected image or play a video in full screen.
- For videos, the device supports 1080P playback. Use the directional buttons for play/pause/fast-forward/rewind if available.
- To return to the thumbnail view, press **MENU**.

4. Managing Files (View/Transfer/Delete)

The device allows basic file management directly on the viewer.

- While viewing an image or video, access the options menu (usually by pressing **MENU** or a dedicated button) to find options like "Delete" or "Transfer".
- Follow on-screen prompts to perform desired actions. Be cautious when deleting files as this action is often irreversible.
- For transferring files, connect the Micro USB slot to a computer using a compatible cable. The device should appear as a removable drive.

5. Adjusting Settings

From the main menu, select the "Settings" icon (typically a gear symbol) to adjust various parameters.

- **Brightness:** Adjust the screen brightness for better visibility in different lighting conditions.
- **Volume:** Control the audio output volume, especially when using the headphone jack.
- Other settings may include date/time, language, and device information.

Your browser does not support the video tag.

Video: A user demonstrates the functions of the Muddy CRV3 HD SD Card Viewer, including navigating menus, viewing images, and adjusting settings.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the screen and exterior of the device. Avoid abrasive cleaners or solvents.
- **Water Resistance:** The device features durable water-resistant housing. However, it is not designed for submersion. Ensure battery compartment and port covers are securely closed to maintain water resistance.
- **Storage:** When not in use for extended periods, remove batteries to prevent leakage and store the device in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low or dead batteries; incorrectly inserted batteries.	Replace with fresh AA batteries; ensure correct polarity.
SD card not detected.	SD card not inserted correctly; incompatible SD card; faulty SD card.	Re-insert SD card until it clicks; ensure card is up to 32GB; try a different SD card.
Cannot view images/videos.	Corrupted files on SD card; unsupported file format.	Try viewing files on a computer; ensure files are standard image/video formats.
No audio from headphone jack.	Volume too low; faulty headphones.	Adjust volume in settings; try different headphones.

SPECIFICATIONS

- **Model Name:** CRV3 HD SD Card Viewer
- **Screen:** 4.3" Color LCD Screen
- **Video Playback:** 1080P
- **SD Card Support:** Up to 32GB
- **Connectivity:** Micro USB
- **Audio:** Headphone Jack
- **Power:** 4 AA Batteries (not included)
- **Housing:** Durable, Water-Resistant
- **Dimensions (L x W x H):** 9.26" x 8.43" x 2.95"
- **Manufacturer:** GSM Outdoors
- **UPC:** 888151030974

WARRANTY AND SUPPORT

MUDDY is committed to quality, durability, and functionality. For warranty information or technical support, please refer to the product packaging or visit the official MUDDY website. Keep your purchase receipt for any warranty claims.