



Manuals.plus /

› Haier /

› Haier HWD105-B14959S8U1 10.5 Kg Front Load Washer Dryer User Manual

## Haier HWD105-B14959S8U1

# Haier HWD105-B14959S8U1 10.5 Kg Front Load Washer Dryer User Manual

Model: HWD105-B14959S8U1

## INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, installation, and maintenance of your Haier HWD105-B14959S8U1 10.5 Kg Front Load Washer Dryer. Please read this manual thoroughly before using the appliance and retain it for future reference.

## IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the appliance is properly grounded.
- Do not operate the appliance if it is damaged or malfunctioning.
- Keep children and pets away from the appliance during operation.
- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances.
- Unplug the appliance before cleaning or performing any maintenance.
- Ensure the power outlet is a 3-pin 16A type, as specified for this appliance.

## PRODUCT OVERVIEW

The Haier HWD105-B14959S8U1 is a fully automatic front-load washer dryer designed for efficient washing and drying of laundry. It features a Direct Motion Motor, AI Drying System, and various advanced functions for optimal fabric care.

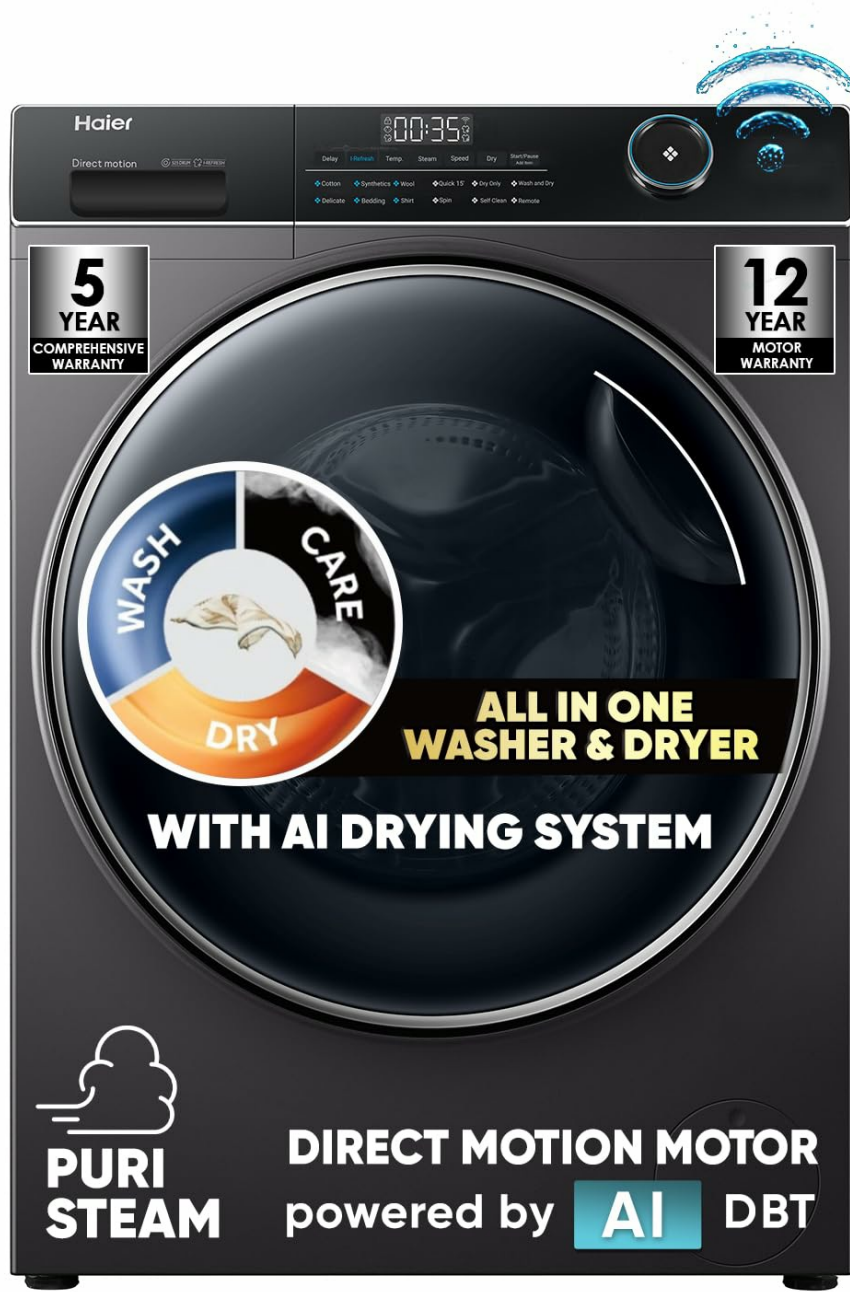


Image: Front view of the Haier HWD105-B14959S8U1 washer dryer, showcasing its dark jade silver finish and control panel.



Image: Overview of the Haier washer dryer, highlighting its 5-year comprehensive warranty, 12-year motor warranty, PuriSteam, Direct Motion Motor, and AI DBT technology.

## SETUP AND INSTALLATION

### Unpacking

Carefully remove all packaging materials. Inspect the appliance for any damage. Ensure all included components are present: 1 Washing Machine, 1 Bottom Plate, 1 Water Inlet Hose.

### Location Requirements

- Place the washer dryer on a firm, level surface.
- Ensure adequate space around the appliance for ventilation and maintenance.
- Avoid direct sunlight or heat sources.

### Electrical Connection

The appliance requires a 220 Volt power supply and a dedicated 16 Amp, 3-pin electrical outlet. Do not use extension cords or adapters.

### Water Connection

- Connect the provided water inlet hose to a cold water tap and the appliance's inlet valve.
- Ensure all connections are tight to prevent leaks.
- Position the drain hose correctly to allow for proper water drainage.

### Leveling the Appliance

Adjust the leveling feet at the bottom of the appliance to ensure it is stable and level. An unlevel machine can cause excessive vibration and noise during operation.

## OPERATING INSTRUCTIONS

### Control Panel Overview

The digital display shows program information, remaining time, and selected settings. Buttons allow for program selection, additional functions, and start/pause control.



Image: Close-up of the Haier washer dryer's control panel, showing the digital display and program selection dial.

### Loading Laundry

- Open the door and load laundry into the drum. Do not overload the machine. The maximum wash capacity is 10.5 kg, and drying capacity is approximately 7 kg.
- Close the door firmly.

### Adding Detergent and Softener

Add appropriate amounts of detergent and fabric softener to the dispenser tray. Refer to detergent packaging for

recommended dosages.

## Selecting a Wash Program

Turn the program selector dial to choose one of the 15 available wash programs:

- Cotton, Synthetics, Mix, Allergen, Baby care, Daily, Delicate, IRefresh, Quick 15, Sportswear, Jeans, Duvet, Self clean, Shirts, Spin.

## Additional Functions

Customize your wash cycle using additional functions:

- **Intense Function:** For heavily soiled items.
- **Extra Rinse:** Adds an additional rinse cycle.
- **Delay:** Delays the start of the wash cycle.
- **I-Time:** Adjusts wash duration.
- **PuriSteam:** Steam function for hygiene and wrinkle reduction.
- **Refresh:** Deodorizes clothes without a full wash.
- **Child Lock:** Prevents accidental changes to settings.
- **Memo Function:** Saves frequently used settings.

## AI Drying System

The integrated AI Drying System automatically adjusts drying parameters based on load and fabric type. It utilizes Condensor Dry for uniform drying, Sensor Dry to prevent over-drying, and Dual Cycle Technology for efficient performance and lint collection.



Image: Diagram illustrating the Condensor Dry, Sensor Dry, and Dual Cycle Technology features of the Haier washer dryer.

## Wi-Fi Control

The appliance can be controlled remotely via Wi-Fi. Download the Haier smart appliance application on your smartphone

and follow the in-app instructions for pairing and remote operation.



Image: Illustration of the Haier washer dryer being controlled via a smartphone application, demonstrating its Wi-Fi connectivity.

## MAINTENANCE AND CARE

---

### Cleaning the Dispenser Tray

Regularly remove and clean the detergent dispenser tray to prevent residue buildup.

### Cleaning the Drum

Use the "Self Clean" program periodically to maintain drum hygiene. The stainless steel drum is designed for easy cleaning.

### Cleaning the Lint Filter

For optimal drying performance, clean the lint filter after every drying cycle. Refer to the appliance diagram for its location.

### Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.

### Door Seal Care

Wipe the door seal after each wash to remove any trapped lint or moisture, preventing mold and odors.

## TROUBLESHOOTING GUIDE

---

Problem	Possible Cause	Solution
Appliance does not start	Power cord not plugged in; door not closed properly; power outage.	Check power connection; ensure door is latched; check household circuit breaker.
Excessive vibration/noise	Appliance not level; transport bolts not removed; overloaded drum.	Adjust leveling feet; ensure transport bolts are removed (during installation); reduce laundry load.
Water leakage	Loose hose connections; clogged drain hose.	Tighten water inlet/drain hose connections; clear any blockages in the drain hose.
Clothes not drying properly	Overloaded dryer; clogged lint filter; incorrect program selected.	Reduce load size; clean lint filter; select appropriate drying program.
Error code displayed	Specific malfunction.	Refer to the full user manual on the brand website or contact customer support with the error code.

For more detailed troubleshooting, please consult the complete user manual available on the Haier brand website.

## SPECIFICATIONS

<b>Model</b>	HWD105-B14959S8U1
<b>Type</b>	Fully Automatic Front Load Washer Dryer
<b>Wash Capacity</b>	10.5 Kilograms
<b>Drying Capacity</b>	7 Kilograms (approx.)
<b>Motor Type</b>	Direct Motion Motor
<b>Maximum Spin Speed</b>	1400 RPM
<b>Wash Programs</b>	15 (Cotton, Synthetics, Mix, Allergen, Baby care, Daily, Delicate, IRefresh, Quick 15, Sportswear, Jeans, Duvet, Self clean, Shirts, Spin)
<b>Drum Material</b>	Stainless Steel (525mm Super Drum)
<b>Special Features</b>	AI Drying System, AI DBT, PuriSteam, I-Refresh, Dual Spray, Wi-Fi Control, Child Lock, Memo Function, Intense Function, Extra Rinse, Delay, I-Time.
<b>Dimensions (WxDxH)</b>	50 cm x 59.5 cm x 85 cm
<b>Item Weight</b>	70 Kilograms
<b>Voltage</b>	220 Volts
<b>Amperage</b>	16 Amps
<b>Energy Rating</b>	5 Star (as per product title)



## FOR A CLEAN, Germ-Free Wash

**PuriSteam** for  
99.9% bacteria  
removal



**Refresh**  
deodorizes  
clothes in a snap



Combat  
Germs with  
**Anti-Bacterial Tech**



Image: Diagram showing the dimensions of the Haier washer dryer (595mm width, 500mm depth, 850mm height) and an example energy savings guide label.

## WARRANTY INFORMATION

Your Haier HWD105-B14959S8U1 Washer Dryer comes with the following warranty:

- **Comprehensive Warranty:** 5 Years
- **Motor Warranty:** 20 Years

To avail warranty services, please retain your Amazon invoice. The full terms and conditions of the warranty are available on the Haier brand website.

## CUSTOMER SUPPORT

For any queries, service requests, or technical assistance, please contact Haier Customer Care:

- **Customer Care Numbers:** 1800-102-9999 / 1800-102-9999
- **Email ID:** info@haierindia.com
- **Brand Website:** For the complete user manual and additional support, visit the official Haier website.

