

[Manuals.plus](#) /

› [Motorola](#) /

› Motorola Escape 220 Wireless Headphones User Manual

Motorola Escape 220

Motorola Escape 220 Wireless Headphones User Manual

Model: Escape 220

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

INTRODUCTION

This manual provides detailed instructions for the proper use and care of your Motorola Escape 220 Wireless Headphones. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.



Figure 1: Motorola Escape 220 Wireless Headphones.

1. Unboxing and Package Contents

Carefully remove all items from the packaging. Ensure the following components are present:

- Motorola Escape 220 Wireless Headphones
- USB Charging Cable
- 3.5mm Audio Cable
- User Manual (this document)



Figure 2: Diagram illustrating headphone controls and included cables (USB charging cable, 3.5mm audio cable).

2. Charging the Headphones

Before first use, fully charge your headphones. Connect the USB charging cable to the charging port on the headphones and to a compatible USB power source. The LED indicator will show charging status and turn off or change color when fully charged.

- **Charging Time:** Approximately 2-3 hours for a full charge.
- **Battery Life:** Up to 23 hours of playtime on a full charge.

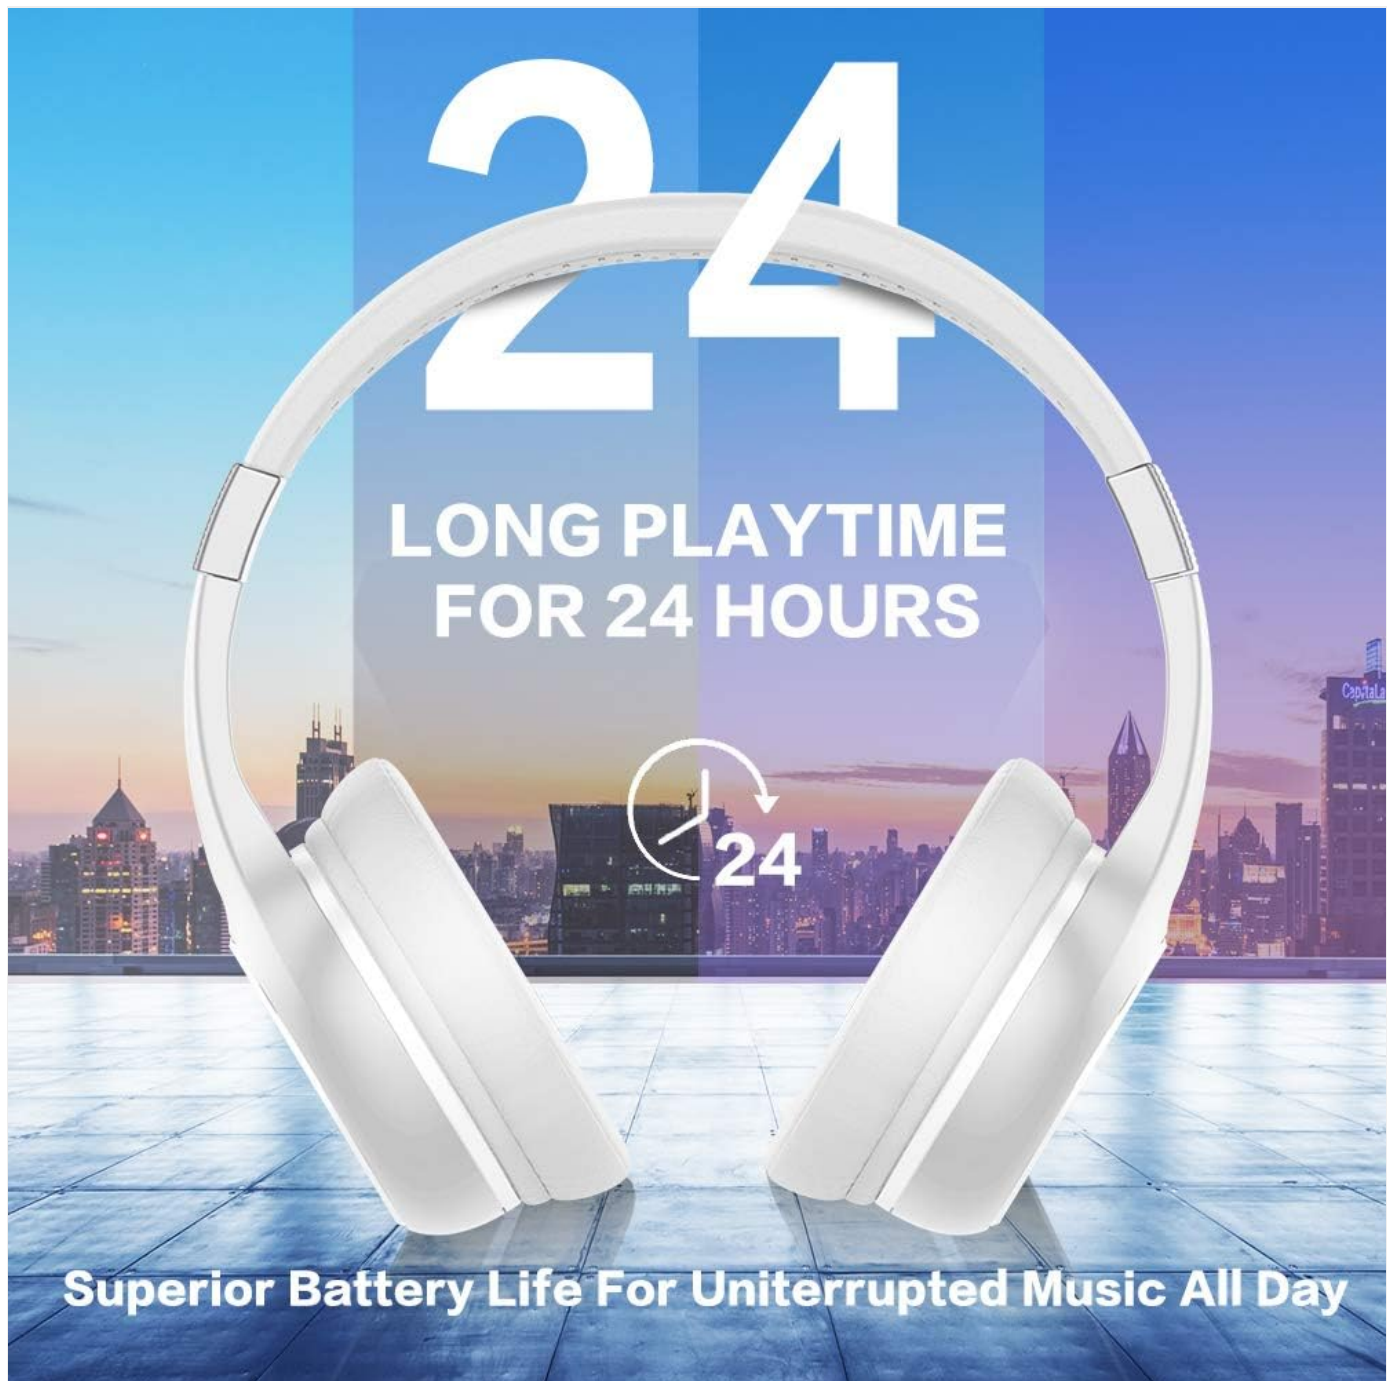


Figure 3: Visual representation of the headphones' extended battery life, offering up to 24 hours of continuous playback.

3. Bluetooth Pairing

1. Ensure the headphones are charged and powered off.
2. Press and hold the Power button until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "Escape 220" from the list of found devices.
5. Once connected, the LED indicator will typically show a solid blue light or flash slowly.

The headphones feature Bluetooth 5.0 for stable connectivity and auto-pairing technology for quick reconnection to previously paired devices.

AUTO PAIRING TECHNOLOGY

Button-free to pair and power on/off



Figure 4: A smartphone display demonstrating the Bluetooth pairing process, showing "Escape 220" as a connected device.

OPERATION

1. Power On/Off

- **Power On:** Press and hold the Power button for approximately 3 seconds.
- **Power Off:** Press and hold the Power button for approximately 3 seconds.

2. Music Playback

- **Play/Pause:** Press the Multi-function button once.
- **Next Track:** Press and hold the Volume Up button.
- **Previous Track:** Press and hold the Volume Down button.
- **Volume Up:** Short press the Volume Up button.
- **Volume Down:** Short press the Volume Down button.

3. Call Management

- **Answer/End Call:** Press the Multi-function button once.
- **Reject Call:** Press and hold the Multi-function button for 2 seconds.
- **Redial Last Number:** Double-press the Multi-function button.

4. Voice Assistant

The Motorola Escape 220 headphones are compatible with voice assistants such as Siri and Alexa. Activate your device's voice assistant by pressing the dedicated Voice Assistant button (if available) or by following your device's instructions for voice assistant activation with Bluetooth headphones.

5. Passive Noise Cancellation

These headphones utilize passive noise cancellation, which physically blocks external sounds through the design of the earcups. Ensure a proper fit over your ears for optimal passive noise isolation.

6. Folding for Storage

The headphones feature a compact, foldable design for easy storage and portability. Gently fold the earcups inward towards the headband when not in use.

COMPACT FOLD FOR EASY STORAGE

Unique Foldable Design Not Only Saves Space But
Also Makes It Portable



**BEST
NOISE-
CANCELING
HEADPHONES**



Figure 5: The Motorola Escape 220 headphones shown in their folded configuration, highlighting their compact design for convenient storage.

MAINTENANCE

1. Cleaning

To maintain the appearance and functionality of your headphones:

- Wipe the surfaces with a soft, dry, lint-free cloth.
- For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.
- Do not immerse the headphones in water.
- Pay attention to the ear cushions (made of foam or leather) and clean them gently to prevent damage.

2. Storage

When not in use, store the headphones in a cool, dry place, away from direct sunlight and extreme temperatures. Utilize

the foldable design for compact storage.

3. Battery Care

To prolong battery life, avoid fully discharging the headphones frequently. Charge them regularly, even if not in constant use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones fully.
Cannot pair with device.	Headphones not in pairing mode; Bluetooth off on device; device too far.	Ensure headphones are in pairing mode (flashing blue/red). Turn on Bluetooth on your device. Move device closer to headphones. Forget "Escape 220" on your device and re-pair.
No sound or low volume.	Volume too low on headphones or device; headphones not connected properly.	Increase volume on both headphones and connected device. Ensure headphones are correctly paired and connected.
Intermittent connection.	Interference; device too far; low battery.	Move closer to the connected device. Avoid environments with strong Wi-Fi or other Bluetooth signals. Charge headphones.

SPECIFICATIONS

Feature	Detail
Model Name	Escape 220
Connectivity Technology	Wireless (Bluetooth 5.0)
Earpiece Shape	Over Ear
Noise Control	Passive Noise Cancellation
Battery Life	Up to 23 Hours
Audio Driver Type	Dynamic Driver (40mm)
Frequency Range	20 Hz to 20,000 Hz
Control Type	Voice Control
Microphone	Included
Material	Plastic, Metal (headband/shell), Foam, Leather (ear cups)
Weight	12.6 ounces
UPC	657768985201

WARRANTY & SUPPORT

This product is offered as an Amazon Renewed item. Amazon Renewed products are professionally inspected and tested to work and look like new. They are eligible for replacement or refund under the [Amazon Renewed Guarantee](#) if you are not satisfied with your purchase.

For further assistance or support, please refer to the Amazon Renewed customer service portal or contact the seller directly through your Amazon order history.

© 2024 Motorola. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question