

[Manuals.plus](#) /

› [StuntCams](#) /

› StuntCams SC-4KBLT 4K High Definition Waterproof Bullet Camera User Manual

StuntCams SC-4KBLT

User Manual

STUNTCAMS 4K HIGH DEFINITION WATERPROOF BULLET CAMERA

Model: SC-4KBLT

Introduction

The StuntCams SC-4KBLT is a true 4K high-definition waterproof bullet camera designed for a wide range of applications. It features digital video recording, photo-shooting capabilities, and high-speed USB data transmission. This versatile camera is suitable for vehicle data recording, mountain climbing, skiing, cycling, parachuting, diving, fishing, hunting, and many other activities. It also includes WiFi connectivity, H.265 video compression technology, and a 120-degree wide-angle lens for comprehensive capture.

What's Included

Please verify that all items listed below are present in your package:

- 1 x 4K waterproof bullet camera
- 1 x Helmet Mount with Velcro Loops
- 1 x Handlebar Mount
- 1 x Tripod Adapter Mount
- 1 x Reset Key
- 1 x USB Charging Cable
- 1 x User Manual (this document)



Image: All components included with the StuntCams SC-4KBLT camera, including the camera unit, various mounts, USB cable, and reset key.

Setup

1. 1. Charging the Camera:

Before first use, fully charge the camera. Connect the provided USB Charging Cable to the camera's USB port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will show the charging status.

2. 2. Inserting a Micro TF Card:

The camera supports high-capacity Micro TF cards (not included). Locate the Micro TF card slot, typically under a protective cover. Gently insert the card with the contacts facing the correct direction until it clicks into place. Ensure the camera is powered off before inserting or removing the card.

3. 3. Mounting the Camera:

Utilize the included Helmet Mount, Handlebar Mount, or Tripod Adapter Mount based on your intended use. Securely attach the camera to the chosen mount. Ensure the camera is firmly fixed to prevent accidental detachment during activity.



Image: Front view of the StuntCams SC-4KBLT camera, showing the lens and waterproof design.



Image: Top view of the StuntCams SC-4KBLT camera, highlighting the power and mode buttons.

Operating Instructions

1. 1. Powering On/Off:

Press and hold the Power button (usually marked with a power symbol) for a few seconds to turn the camera on. Repeat the action to turn it off.

2. 2. Video Recording:

Once powered on, the camera typically defaults to video recording mode. Press the Record/Shutter button (often marked with a camera or record icon) to start recording. Press it again to stop recording. The camera supports video recording while charging.

3. 3. Photo Shooting:

If your camera has a dedicated mode button, press it to switch to photo mode. Then, press the Record/Shutter button to capture a still image.

4. 4. WiFi Connectivity and Live View:

The camera features WiFi connectivity. To use this feature, enable WiFi on the camera (refer to specific

button presses in the quick start guide if available). Then, download the dedicated StuntCams app on your smartphone or tablet. Connect your device to the camera's WiFi network. This allows for live view, remote control, and file transfer.

Maintenance

- **Waterproofing:**

The camera is IP66 waterproof. Ensure all ports and covers are securely closed before exposing the camera to water or moisture. Do not submerge the camera beyond its rated depth or for extended periods unless specifically designed for such use.

- **Cleaning:**

Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution to avoid scratches. Do not use harsh chemicals or abrasive materials.

- **Storage:**

When not in use, store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove the Micro TF card if storing for a long period.

Troubleshooting

Camera is unresponsive or frozen:

Use the provided Reset Key. Locate the small reset pinhole on the camera body. Insert the reset key into the pinhole and gently press until you feel a click. This will restart the camera without deleting data.



Image: Side view of the StuntCams SC-4KBLT camera, showing the 'WATER PROOF' label and general form factor.

Cannot connect to WiFi:

Ensure WiFi is enabled on the camera and your mobile device. Check that you have downloaded the correct StuntCams application. Try restarting both the camera and your mobile device. Ensure you are within the camera's WiFi range.

Video quality is poor:

Ensure the lens is clean and free from smudges or dirt. Check that you are recording in 4K resolution settings if available. Ensure adequate lighting conditions for optimal video quality.

Specifications

Feature	Detail
Brand Name	StuntCams

Feature	Detail
Model Name	SC-4KBLT
Product Dimensions	3 x 1 x 1 inches
Country of Origin	China
Color	Black
Connectivity Technology	USB, WiFi
Video Capture Resolution	4K
Video Capture Format	MP4
Photo Sensor Technology	CMOS
Flash Memory Type	Micro SD (supports high capacity)
Lens Angle	120 Degree Wide Angle
Waterproof Rating	IP66

Warranty and Support

For information regarding warranty coverage, technical support, or service inquiries, please refer to the official StuntCams website or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

Online resources and frequently asked questions may also be available on the manufacturer's support pages.