

[Manuals.plus](#) /

› [KikkaBoo](#) /

› KikkaBoo EDEN Stroller User Manual

KikkaBoo 31001030155

KikkaBoo EDEN Stroller User Manual

Model: 31001030155

1. INTRODUCTION

Thank you for choosing the KikkaBoo EDEN Stroller. This stroller is designed for modern families, offering a blend of style, comfort, and practicality. It is suitable for use from birth up to a child's weight of 22 kg. Featuring a lightweight aluminum frame, an innovative one-touch automatic folding system, and robust suspension, the EDEN stroller provides optimized mobility and comfort.

Please read this manual carefully before assembly and use to ensure the safe operation and proper maintenance of your stroller. Keep this manual for future reference.

2. SAFETY INFORMATION

- **WARNING:** Never leave your child unattended in the stroller.
- Always use the 5-point safety harness to secure your child.
- Ensure all locking devices are engaged before use.
- Do not exceed the maximum weight capacity of 22 kg.
- Do not place more than 4.5 kg in the storage basket.
- The stroller is not suitable for running or skating.
- Always engage the brake when placing or removing your child from the stroller.
- Keep children away from moving parts during folding and unfolding.
- Regularly check the stroller for loose parts, damaged components, or signs of wear.

3. PACKAGE CONTENTS

Before assembly, please check that all components are present and undamaged:

- KikkaBoo EDEN Stroller Frame with Seat Unit
- Canopy
- Front Wheels (if not pre-attached)
- Rear Wheels (if not pre-attached)
- Bumper Bar
- Rain Cover
- User Manual



This image displays the KikkaBoo EDEN Stroller alongside its included rain cover, demonstrating how the stroller can be protected from adverse weather conditions.

4. SETUP

4.1 Unfolding the Stroller

1. Place the folded stroller on a flat surface.
2. Locate the automatic folding release mechanism (usually a button or lever on the handlebar).
3. Press the release and lift the handlebar firmly until the stroller frame locks into its open position. You should hear a click.
4. Ensure all locking mechanisms are securely engaged before placing a child in the stroller.

4.2 Attaching Wheels (if not pre-attached)

1. For front wheels: Insert the wheel axle into the designated slot on the front leg until it clicks into place. Pull to ensure it is secure.
2. For rear wheels: Slide the rear wheels onto the axle until they click into place. Pull to ensure they are secure.

4.3 Attaching the Canopy

1. Slide the canopy attachments onto the designated slots on the stroller frame near the handlebar.
2. Secure any additional fasteners (snaps or zippers) to the seat unit.

4.4 Attaching the Bumper Bar

1. Align the ends of the bumper bar with the receiving slots on the side of the seat unit.
2. Push firmly until it clicks into place. Ensure it is securely attached.

5. OPERATING THE STROLLER

5.1 Folding the Stroller (Automatic One-Touch)

1. Ensure the child is removed from the stroller.
2. Engage the rear brake.
3. Locate the automatic folding button/lever on the handlebar.
4. Press the button and gently push the handlebar forward and down. The stroller will automatically fold into a compact position.
5. Ensure the stroller is fully locked in its folded position before lifting or storing.

PRÁCTICO PLEGADO AUTOMÁTICO

Se puede **plegar en pocos segundos** usando una mano



This image demonstrates the practical automatic folding mechanism of the KikkaBoo EDEN Stroller, highlighting its compact size when folded and the ease of one-hand operation for storage or transport.

5.2 Adjusting the Seat Recline

The EDEN stroller features a 4-position adjustable backrest for your child's comfort.

1. Locate the recline adjustment mechanism on the back of the seat unit (usually a lever or strap).
2. Squeeze the lever or adjust the strap to select the desired recline position.
3. Ensure the backrest is securely locked in place before use.

5.3 Adjusting the Footrest

The footrest can be adjusted to 2 positions.

1. Locate the buttons or levers on either side of the footrest.
2. Press the buttons/levers and move the footrest to the desired position.
3. Release the buttons/levers to lock the footrest in place.



This image illustrates the adjustable comfort features of the KikkaBoo EDEN Stroller, including the multi-position reclining seat and the convenient one-touch rear brake for secure stopping.

5.4 Using the 5-Point Safety Harness

1. Place your child in the seat.
2. Bring the shoulder straps over your child's shoulders and the waist straps around their waist.
3. Insert the two buckle prongs into the central buckle until they click.
4. Adjust the straps to ensure a snug, secure fit without being too tight.
5. To release, press the button on the central buckle.

5.5 Engaging and Releasing the Brake

The stroller is equipped with a one-touch rear brake.

1. To engage the brake, press down firmly on the brake pedal located near the rear wheels.
2. To release the brake, lift the brake pedal upwards.


3. Always ensure the brake is fully engaged when the stroller is stationary.

5.6 Canopy Adjustment and Features

The canopy can be adjusted to provide optimal shade and protection. It includes a sun visor and an aeration opening on the back for improved airflow.



COMODIDAD PARA TI Y TU BEBÉ

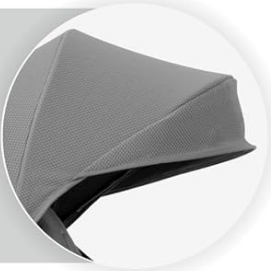

Dosel con
parasol



Cómodo asiento
para el bebé



Espacio de
almacenamiento
amplio

A detailed view of the KikkaBoo EDEN Stroller's key features, including the adjustable canopy with an integrated sun visor, the comfortable seating area for the child, and the ample storage basket located beneath the seat.

5.7 Maneuvering and Wheels

The stroller features 360° swivel front wheels and robust suspension on all wheels for smooth navigation.

- The front wheels can be locked for straight-line travel on rougher terrain.
- Unlock the front wheels for greater maneuverability in tight spaces.

TU COMPAÑERA DE PASEOS EN VERANO



Perfecta para clima caluroso



Manejable y fácil de guiar



Plegable con una mano



Cómoda para tu pequeño



This diagram illustrates the design elements that make the KikkaBoo EDEN Stroller lightweight and easy to maneuver, including its robust yet light metal frame, impact-absorbing wheels, front wheel suspension, and the protective canopy with a sun visor.

6. MAINTENANCE

6.1 Cleaning Instructions

- **Fabric Parts:** Hand wash only. Use mild soap and cold water. Do not bleach, tumble dry, or iron. Allow to air dry completely.
- **Frame:** Wipe the frame with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Wheels:** Periodically clean the wheels and axles to remove dirt and debris. Lubricate moving parts with a silicone-based lubricant if necessary.

6.2 Storage

- Store the stroller in a clean, dry place away from direct sunlight and extreme temperatures.
- Ensure the stroller is completely dry before storing to prevent mold or mildew.

7. TROUBLESHOOTING

- **Stroller does not fold/unfold smoothly:** Check for any obstructions in the folding mechanism. Ensure all parts are clean and free of debris.
- **Wheels are stiff or squeaky:** Clean the wheels and axles. Apply a silicone-based lubricant to the moving parts.
- **Brake not engaging:** Check for debris around the brake mechanism. Ensure the brake pedal is fully depressed.
- **Harness not securing:** Ensure the buckle prongs are fully inserted into the central buckle. Adjust straps for a snug fit.

If you encounter any issues not covered here, please contact KikkaBoo customer support or your retailer.

8. SPECIFICATIONS

Model Number:

31001030155

Gender:

Unisex

Maximum Supported Weight:

22 Kilograms

Main Material:

Aluminum

Care Instructions:

Hand wash only

Special Features:

Adjustable canopy, 5-point safety harness, Adjustable height, Lightweight, Foldable

Number of Items in Package:

1

Batteries Required:

No

Harness Type:

5 point

Seating Capacity:

1

Wheel Material:

Rubber

Folded Product Dimensions:

18.5" x 11.8" x 30.3" (47 x 30 x 77 cm)

Handlebar Type:

Plastic

Manufacturer:

Kikkaboo

Product Dimensions (L x W x H):

62 x 47 x 90 cm

Item Weight:

7.8 Kilograms

Frame Material:

Aluminum

Age Range (Description):

Toddler

Stroller Type:

Standard Stroller

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. If you require technical support or have questions regarding your KikkaBoo EDEN Stroller, please contact KikkaBoo customer service through their official website or the retailer from whom you purchased the product.

© 2024 KikkaBoo. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CV4QSKT6>

More documents and user manuals: <https://manuals.plus/>