

[Manuals.plus](#) /

> [Topyond](#) /

> Topyond 16-inch Rechargeable Electric Chainsaw User Manual

Topyond 2000W Brushless

Topyond 16-inch Rechargeable Electric Chainsaw User Manual

Model: 2000W Brushless

INTRODUCTION

Thank you for choosing the Topyond 16-inch Rechargeable Electric Chainsaw. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new tool. Please read this manual thoroughly before initial use and keep it for future reference.



Image: The Topyond 16-inch Rechargeable Electric Chainsaw, showcasing its main body, guide bar, and chain.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: Failure to follow these safety instructions may result in serious injury or death. Always prioritize safety when operating power tools.

- Always operate the chainsaw with the provided safety features to prevent accidents.

- Keep the chainsaw out of reach of children to avoid any potential hazards.
- Wear appropriate personal protective equipment (PPE) including safety glasses, gloves, hearing protection, and sturdy footwear.
- Ensure the work area is clear of bystanders, especially children and pets.
- Inspect the chainsaw for damage or loose parts before each use. Do not operate if damaged.
- Maintain a firm grip with both hands on the chainsaw handles during operation.
- Be aware of kickback and take precautions to avoid it.
- Do not operate the chainsaw in wet conditions or in the presence of flammable liquids or gases.
- Regularly maintain and lubricate the chainsaw for optimal performance and longevity.
- Use the chainsaw for its intended purpose (cutting wood and planks) and follow all safety guidelines in this user manual.



Pruning Shears Chainsaw

Baffles and protective covers prevent debris splatter. Manual control of the switch and lock button ensures safe use.

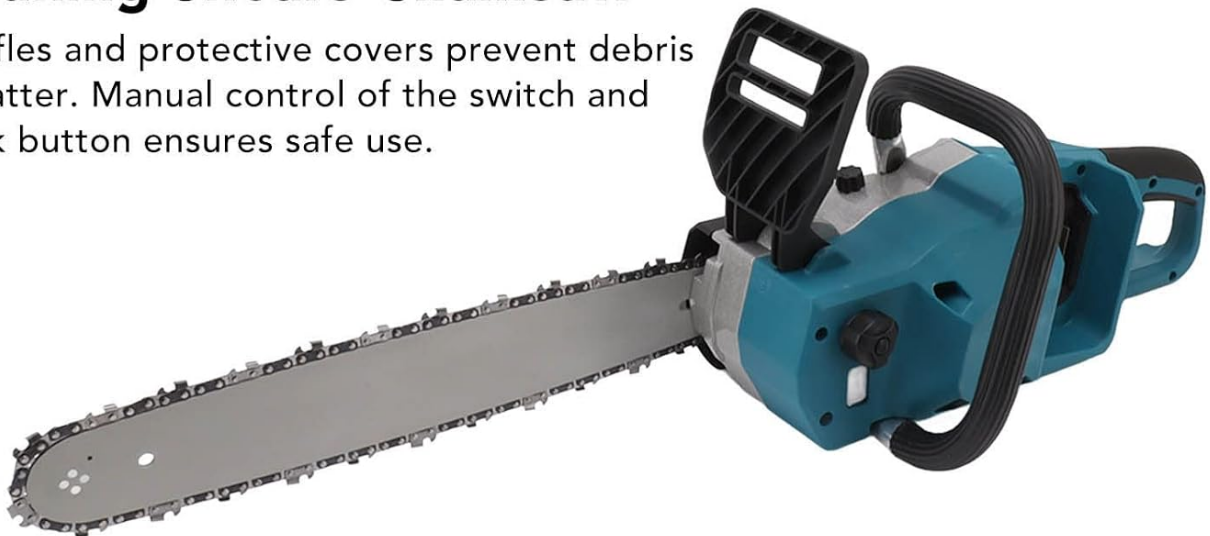


Image: The chainsaw in operation, demonstrating the baffle preventing debris splatter. Always ensure the baffle is correctly positioned for safety.

PRODUCT COMPONENTS

The Topyond 16-inch Electric Chainsaw package includes the following components:

- Electric Chainsaw Unit
- Guide Plate (16 inches)
- Chain
- Baffle
- Handle
- Screwdriver
- Screws (4 pieces)
- Additional Accessories (2 pieces)
- User Manual (this document)

Note: Batteries (2 x 21V Lithium Ion Battery) are shipped separately and are not included in the main package list provided.



Image: An overhead view of all included components: the chainsaw body, guide plate, chain, baffle, handle, screwdriver, and various screws and accessories.

SETUP AND ASSEMBLY

Before operating the chainsaw, proper assembly is crucial for safety and performance. Follow these steps carefully:

1. **Install the Guide Plate:** Align the guide plate with the mounting studs on the chainsaw body.
2. **Install the Chain:** Carefully place the chain around the sprocket and guide plate, ensuring the cutting edges are facing the correct direction. The chain should fit snugly but not be overly tight.
3. **Attach the Baffle:** Secure the baffle over the guide plate and chain assembly using the provided screws. This protective cover helps prevent debris splatter during operation.
4. **Attach the Handle:** Mount the auxiliary handle to the designated position on the chainsaw body and fasten it securely with the screws.
5. **Insert Batteries:** Ensure the chainsaw is switched off. Insert two fully charged 21V Lithium-Ion batteries into their respective compartments until they click into place.
6. **Check Chain Tension:** After assembly, verify the chain tension. The chain should be tight enough that it does not sag, but still loose enough to be pulled around the guide bar by hand. Adjust if necessary using the chain tensioning mechanism (refer to diagram if available on the tool).



Image: A user preparing to operate the chainsaw on cut logs, illustrating a typical setup scenario. Ensure all components are correctly assembled before use.

OPERATING INSTRUCTIONS

Follow these guidelines for safe and effective operation of your Topyond electric chainsaw.

1. **Pre-Operation Check:**

- Ensure all safety features are in place and functional.
- Verify chain tension and sharpness.
- Check battery charge level.
- Confirm the work area is clear and stable.

2. **Starting the Chainsaw:**

- Hold the chainsaw firmly with both hands.
- Engage the safety lock button, then press the trigger switch to start the motor.
- Allow the chain to reach full speed before making contact with the material.

3. **Cutting Techniques:**

- Always maintain a balanced stance.
- Let the chainsaw do the work; do not force it.
- For cutting branches, support the branch to prevent pinching the chain.
- Be mindful of kickback, especially when the tip of the guide bar contacts wood.
- For felling small trees, plan your escape route and make proper felling cuts.

4. **Automatic Refueling:** This chainsaw features an automatic refueling mode. Ensure the oil reservoir is filled with appropriate chain lubricant before use. The system will automatically lubricate the chain during operation. Regularly check the oil level.

5. **Stopping the Chainsaw:** Release the trigger switch. The chain will stop quickly. Engage the safety lock if the chainsaw is not in immediate use.



Electric Chainsaw

Handheld chainsaws will greatly simplify your work in gardens, gardening, outdoors, etc. It is very suitable for family and temporary work, even the elderly can easily control it.



Image: A user demonstrating the one-handed operation of the electric chainsaw for cutting a log, highlighting its ease of use.

MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your chainsaw.

- **Cleaning:** After each use, disconnect the battery and clean the chainsaw thoroughly. Remove sawdust, chips, and debris from the guide bar, chain, and motor housing. Use a brush or compressed air.
- **Lubrication:** Regularly check and refill the automatic chain oil reservoir with suitable chain lubricant. Proper lubrication is critical for chain and guide bar life.
- **Chain Sharpening:** A dull chain reduces cutting efficiency and increases the risk of kickback. Sharpen the chain regularly or replace it when necessary. Refer to a professional or specific chain sharpening instructions.
- **Chain Tension:** Periodically check and adjust chain tension. A loose chain can derail, and an overly tight chain can cause premature wear.
- **Battery Care:** Store batteries in a cool, dry place. Do not expose them to extreme temperatures. Charge batteries fully before storage and periodically during long storage periods.
- **Storage:** When not in use, store the chainsaw in a dry, secure location, out of reach of children. Ensure the guide

bar cover is in place.

TROUBLESHOOTING

This section addresses common issues you might encounter with your Topyond electric chainsaw.

Problem	Possible Cause	Solution
Chainsaw does not start	- Battery not inserted correctly - Battery discharged - Safety lock engaged	- Re-insert battery firmly - Charge battery - Release safety lock and press trigger
Chain not cutting efficiently	- Dull chain - Incorrect chain tension - Insufficient lubrication	- Sharpen or replace chain - Adjust chain tension - Refill oil reservoir
Chain derails frequently	- Loose chain tension - Worn guide bar or chain	- Adjust chain tension - Inspect and replace worn parts
Excessive vibration	- Loose components - Damaged chain or guide bar	- Check and tighten all screws and fasteners - Inspect and replace damaged parts

SPECIFICATIONS

Technical specifications for the Topyond 16-inch Rechargeable Electric Chainsaw:

- Item Type:** Electric Chainsaw
- Brand:** Topyond
- Material:** Alloys, Manganese Steel, Iron, Stainless Steel
- Weight:** Approximately 5.6 kg (12.32 pounds)
- Guide Plate Size:** 40.6 cm (16 inches)
- Battery (Not Included):** 2 x 21V Lithium Ion Battery
- Chain Speed:** 5 m/s
- Maximum Power:** 2000W
- No-load Speed:** 4800 r/min
- Purpose:** Cutting Wood and Planks

WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please refer to the documentation included with your purchase or visit the official Topyond website. Keep your purchase receipt as proof of purchase for warranty claims.

Manufacturer: Topyond

ASIN: B0CV5HZQM7

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CV5HZQM7>

More documents and user manuals: <https://manuals.plus/>