

Dynter SC1105

Dynter SC1105 High-Pressure Steam Cleaner User Manual

Model: SC1105

INTRODUCTION

The Dynter SC1105 high-pressure steam cleaner is a powerful and convenient device designed to effortlessly remove stubborn dirt and residue from various surfaces in your home. It provides thorough cleaning using only tap water, eliminating the need for harsh chemicals, making it an environmentally friendly cleaning solution.

With its 1150-watt motor and impressive 3.5 bar steam pressure, the SC1105 ensures immaculate results in your kitchen, bathroom, on floors, and even in grout. A full tank allows for up to 15 minutes of continuous cleaning. This manual will guide you through the safe and effective use of your new steam cleaner.

SAFETY INFORMATION

Please read all safety warnings and instructions carefully before using this appliance to avoid electric shock, fire, and/or serious injury.

- Always ensure the appliance is unplugged from the power outlet before filling with water or performing maintenance.
- Do not open the water tank cap while the appliance is in use or under pressure. Allow the unit to cool down completely before refilling.
- Keep out of reach of children and pets. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities.
- Never direct steam at people, animals, or electrical appliances. Steam is extremely hot and can cause severe burns.
- Use only tap water. Do not add cleaning solutions, perfumes, or other chemicals to the water tank, as this can damage the appliance and void the warranty.
- Ensure the power cord is not damaged and avoid kinking or stretching it.
- Do not immerse the appliance in water or other liquids.
- Always hold the steam cleaner by the handle.

PRODUCT OVERVIEW AND ACCESSORIES

Your Dynter SC1105 steam cleaner comes with a comprehensive set of accessories to tackle various cleaning tasks.

 


Image: The Dynter SC1105 steam cleaner shown with all included accessories, such as the measuring cup, funnel, various nozzles, and brushes, ready for different cleaning applications.

Included Accessories:

- **Measuring Cup:** For precise water dosage.
- **Funnel:** For easy and spill-free water refilling.
- **Nylon Brushes (2x):** For delicate surfaces.
- **Steam Brush:** For fabrics and upholstery.
- **Bent Nozzle:** Reaches narrow and hard-to-reach areas.
- **Straight Nozzle:** For concentrated steam application.
- **Window Squeegee:** For streak-free window cleaning.
- **Microfiber Cloth:** Absorbs dirt and moisture.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Fill Water Tank:** Ensure the appliance is unplugged. Unscrew the safety cap. Use the provided measuring cup and funnel to fill the water tank with clean tap water. Do not overfill. The maximum capacity is indicated on the device.
3. **Secure Cap:** Screw the safety cap back on tightly.
4. **Attach Accessory:** Select the appropriate accessory for your cleaning task and securely attach it to the nozzle.
5. **Plug In:** Plug the power cord into a grounded electrical outlet (230V).
6. **Heat Up:** The indicator light will illuminate, signaling that the unit is heating up. The steam cleaner heats up in approximately 60 seconds. Once the light turns off, the unit is ready for use.

OPERATING INSTRUCTIONS

The Dynter SC1105 is versatile and can be used for various cleaning applications. Always test on an inconspicuous area first.



Image: The Dynter SC1105 steam cleaner being used to clean a kitchen surface, demonstrating its powerful steam output.



Image: The Dynter SC1105 steam cleaner being used with a steam brush attachment to clean upholstery on a sofa, highlighting its versatility.

General Use:

1. Once the indicator light signals readiness, press and hold the steam trigger to release steam.
2. Direct the steam towards the surface you wish to clean. For stubborn dirt, hold the nozzle closer to the surface.
3. Move the steam cleaner slowly over the area.
4. Wipe away loosened dirt with a clean cloth (e.g., the included microfiber cloth).
5. Release the steam trigger to stop steam flow.

Specific Applications:

- **Kitchen:** Use the straight nozzle or a brush attachment for countertops, stovetops, and sinks.
- **Bathroom:** Ideal for tiles, grout, showers, and toilets. The bent nozzle is useful for corners and crevices.
- **Floors:** Attach the floor cleaning accessory (if included, or use a suitable brush) for hard floors.
- **Upholstery & Fabrics:** Use the steam brush attachment. Hold at a slight distance to avoid oversaturation.
- **Windows & Mirrors:** Use the window squeegee attachment for streak-free results.

Note: The device features a child safety lock for secure operation.

Maintenance

Regular maintenance ensures the longevity and optimal performance of your Dynter SC1105 steam cleaner.

1. **Cool Down:** Always unplug the appliance and allow it to cool down completely before cleaning or storing.
2. **Empty Water Tank:** After each use, carefully unscrew the safety cap and empty any remaining water from the tank.
3. **Clean Exterior:** Wipe the exterior of the steam cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.
4. **Clean Accessories:** Rinse accessories under running water and allow them to air dry completely before storing.
5. **Descaling (Optional):** If you notice reduced steam output or mineral buildup, descaling may be necessary. Consult a professional or refer to specific descaling instructions for steam cleaners. Do not use vinegar or harsh chemicals.
6. **Storage:** Store the steam cleaner and its accessories in a cool, dry place, away from direct sunlight and extreme temperatures. The compact design allows for easy storage.

Troubleshooting

Problem	Possible Cause	Solution
No steam or low steam output.	Water tank is empty; Unit not heated up; Mineral buildup.	Refill water tank; Wait for indicator light to turn off; Perform descaling if necessary.
Water spitting instead of steam.	Unit not fully heated; Overfilled water tank.	Allow more time for heating; Do not overfill the water tank.
Safety cap cannot be opened.	Unit is still under pressure or hot.	Unplug the unit and allow it to cool down completely. Release any remaining pressure by pressing the steam trigger until no more steam comes out.
Appliance does not turn on.	Not plugged in; Power outlet issue.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.

Specifications

Feature	Detail
Model Number	SC1105

Feature	Detail
Power/Wattage	1150 Watts
Voltage	230 Volts
Steam Pressure	3.5 Bar
Heating Time	Approx. 60 Seconds
Continuous Steam Time	Up to 15 minutes (per full tank)
Product Dimensions	14 x 26 x 23 cm
Color	White
Special Features	High-pressure steam cleaner, chemical-free cleaning with tap water, child safety lock.



Image: A visual representation of the Dynter SC1105 steam cleaner's dimensions, indicating its compact and portable size.

WARRANTY AND SUPPORT

Your Dynter SC1105 steam cleaner is designed for durability and performance. For any questions, technical support, or warranty claims, please refer to your purchase documentation or contact the seller directly.

Please note that the return policy typically allows for returns within 30 days of purchase, subject to the seller's terms and conditions.

© 2024 Dynter. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question