

Lamax Street2 (LMXST2)

Lamax Street2 Bluetooth Speaker User Manual

Model: Street2 (LMXST2)

INTRODUCTION

Welcome to the user manual for your Lamax Street2 Bluetooth Speaker. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your device. Please read this manual carefully before using the speaker and keep it for future reference.

SAFETY INFORMATION

To ensure safe and proper operation, please observe the following safety guidelines:

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Do not immerse the device in water. It is designed to be splash-resistant, not waterproof.
- Keep the speaker out of reach of children and pets.
- Use only approved charging cables and adapters to prevent damage and ensure safety.
- Do not attempt to disassemble, repair, or modify the speaker yourself. Contact qualified service personnel for assistance.

PRODUCT OVERVIEW

The Lamax Street2 is a portable Bluetooth speaker designed to deliver powerful sound with convenience. Its compact size, splash resistance, and long battery life make it ideal for various environments.



This image displays the front of the Lamax Street2 Bluetooth Speaker, showing its main body, control panel, and a sturdy carrying loop for portability.

Key features of your Lamax Street2 speaker include:

- **Super Sound:** Enjoy clear and powerful audio output.
- **15W Power:** Delivers robust sound performance.
- **Bluetooth 5.0:** For stable and efficient wireless connectivity.
- **True Wireless Stereo (TWS):** Pair two Street2 speakers for an immersive stereo experience.
- **Splash Resistance:** Designed to withstand splashes, making it suitable for outdoor use.
- **Long Battery Life:** Extended playtime for uninterrupted music.
- **Portable Design:** Features a fixed eyelet and carabiner for easy transport.

SETUP

1. Charging the Speaker

Before using your Lamax Street2 speaker for the first time, ensure it is fully charged.

1. Connect the provided charging cable to the speaker's charging port.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. It will typically turn off or change color once the speaker is fully charged.

2. Powering On/Off

To turn the speaker on or off:

- **Power On:** Press and hold the power button for approximately 3 seconds until you hear a power-on sound.
- **Power Off:** Press and hold the power button for approximately 3 seconds until you hear a power-off sound.

3. Bluetooth Pairing

To connect your Lamax Street2 to a Bluetooth-enabled device:

1. Ensure the speaker is powered on and in pairing mode. The LED indicator will typically flash rapidly.
2. On your smartphone, tablet, or other Bluetooth device, enable Bluetooth and search for available devices.
3. Select "LAMAX Street2" from the list of found devices.
4. Once connected, the speaker will emit a confirmation sound, and the LED indicator will stop flashing and remain solid.

4. True Wireless Stereo (TWS) Pairing

To pair two Lamax Street2 speakers together for a stereo sound experience:

1. Ensure both Lamax Street2 speakers are powered on and are not connected to any other Bluetooth device.
2. On one of the speakers, press and hold the TWS button (often indicated by a chain-link icon) for 2-3 seconds.
3. The speakers will automatically search for and pair with each other. A confirmation sound will indicate successful TWS pairing.
4. Now, connect your primary device (smartphone, etc.) to the primary speaker via Bluetooth as described in the "Bluetooth Pairing" section.

OPERATING THE SPEAKER

Basic Controls

- **Power Button:** Press and hold for 3 seconds to turn the speaker on or off.
- **Play/Pause Button:** Press once to play or pause audio playback.
- **Volume Up (+):** Press once to increase the volume. Press and hold to skip to the next track.
- **Volume Down (-):** Press once to decrease the volume. Press and hold to skip to the previous track.
- **Call Button (if available):** Press once to answer an incoming call or end an ongoing call. Press and hold to reject an incoming call.

Connectivity Options

- **Bluetooth:** The primary method for wireless audio streaming from your devices.

MAINTENANCE

Proper care and maintenance will extend the life of your Lamax Street2 speaker.

- **Cleaning:** Gently wipe the speaker's surface with a soft, dry, lint-free cloth. Do not use abrasive cleaners, solvents, or chemical sprays.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To maintain optimal battery performance, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in active use.

TROUBLESHOOTING

If you encounter issues with your Lamax Street2 speaker, refer to the following table for common problems and solutions.

Problem	Solution
Speaker does not turn on.	Ensure the battery is charged. Connect the speaker to a power source and try again.
Cannot pair via Bluetooth.	Ensure the speaker is in Bluetooth pairing mode (flashing LED). Turn off and on your device's Bluetooth. Move closer to the speaker and ensure no other devices are connected.
No sound or low volume.	Check volume levels on both the speaker and your connected device. Ensure the speaker is correctly paired and not muted.
Poor sound quality or intermittent connection.	Move your device closer to the speaker to minimize interference. Ensure there are no major obstacles between the devices. Disconnect and re-pair the Bluetooth connection.

SPECIFICATIONS

Technical specifications for the Lamax Street2 Bluetooth Speaker:

- **Model Name:** Street2
- **Manufacturer Reference:** LMXST2
- **Brand:** Lamax
- **Connectivity Technology:** Bluetooth 5.0
- **Output Power:** 15 Watts
- **Audio Output Mode:** Stereo
- **Mounting Type:** Table Mount
- **Power Source:** Battery Powered
- **Special Features:** Bluetooth, Splash Resistance
- **ASIN:** B0CV5TH488

WARRANTY AND SUPPORT

The Lamax Street2 Bluetooth Speaker is covered by a limited warranty. For detailed information regarding warranty terms, conditions, and duration, please refer to the warranty card included with your product or visit the official Lamax website.

For technical assistance, troubleshooting, or to inquire about warranty claims, please contact Lamax customer support. You can typically find contact information on the official Lamax website or through the retailer where you purchased the product.

