

Milex MPP0030

Milex MPP0030 Digital Power Pressure Cooker Instruction Manual

Model: MPP0030 | Brand: Milex

1. INTRODUCTION AND IMPORTANT SAFEGUARDS

Welcome to the Milex MPP0030 Digital Power Pressure Cooker user manual. This guide provides essential information for the safe and efficient operation of your new appliance. Please read all instructions carefully before first use and retain this manual for future reference.

Important Safety Information

- Always ensure the lid is properly closed and locked before operating.
- Do not touch hot surfaces. Use handles or knobs.
- Close supervision is necessary when the pressure cooker is used near children.
- Do not place the pressure cooker on or near a hot gas or electric burner, or in a heated oven.
- Exercise extreme caution when moving a pressure cooker containing hot liquids.
- Never force the lid open. Ensure internal pressure is completely released before opening.
- Do not use the pressure cooker for purposes other than intended.
- This unit does not include a canning function. Do not attempt to use it for canning.

2. PRODUCT OVERVIEW

The Milex MPP0030 is a 6-litre digital power pressure cooker designed for efficient and convenient meal preparation. It features multiple pre-set functions and a digital display for easy control.



Figure 2.1: Front view of the Milex MPP0030 Digital Power Pressure Cooker.

Key Features:

- Hyper-pressurized cooking for enhanced flavor and nutrient retention.
- Quick and easy operation with push-button controls.
- Large 6-litre capacity.
- Adjustable cooking time.
- Digital LED display.
- Keep Warm function.
- 10 Pre-set functions for various dishes.

Components:

- Main Unit (housing, heating element)
- Removable Inner Pot (non-stick)
- Lid with Sealing Ring and Pressure Release Valve

- Control Panel with Digital Display
- Condensation Collector (usually at the back)
- Power Cord



Figure 2.2: Detailed view of the control panel and digital display.

3. SETUP AND FIRST USE

3.1 Unpacking

1. Carefully remove all packaging materials from the box.
2. Check that all components listed in Section 2 are present and undamaged.
3. Remove any protective films or stickers from the appliance.

3.2 Initial Cleaning

1. Wash the inner pot, sealing ring, and condensation collector with warm, soapy water. Rinse thoroughly and dry completely.

2. Wipe the exterior of the main unit with a damp cloth. Never immerse the main unit in water.

3.3 Assembly

1. Place the inner pot into the main unit. Ensure it sits correctly and is level.
2. Ensure the sealing ring is properly seated inside the lid.
3. Attach the condensation collector to the back of the main unit.

4. OPERATING INSTRUCTIONS

4.1 Basic Operation

1. Add ingredients and liquid to the inner pot. Do not exceed the MAX fill line.
2. Place the lid on the cooker, aligning the arrow on the lid with the arrow on the base. Rotate the lid clockwise until it locks into place.
3. Ensure the pressure release valve is in the 'Sealing' position (if applicable, refer to specific lid markings).
4. Plug the power cord into a grounded electrical outlet. The digital display will illuminate.

4.2 Using Pre-set Functions

The Milex MPP0030 features 10 pre-set functions for common dishes:

- **Soup:** For various soup recipes.
 - **Rice:** Ideal for cooking different types of rice.
 - **Slow Cook:** For extended cooking at lower temperatures.
 - **Yogurt:** For making homemade yogurt.
 - **Porridge:** Perfect for oatmeal and other porridges.
 - **Chicken/Meat/Seafood/Beans/Lentils:** Specific settings for these food types.
 - **Stew:** For hearty stews.
 - **Sauté:** For browning ingredients before pressure cooking.
 - **Steam:** For steaming vegetables, fish, etc.
1. Select the desired pre-set function by pressing the corresponding button or rotating the central knob.
 2. The display will show the default cooking time. You can adjust this time using the 'Time' button and +/- controls.
 3. Press 'Delay/Start' to begin the cooking process. The cooker will preheat, then begin pressure cooking.



Figure 4.1: The pressure cooker ready to prepare a meal.

4.3 Manual Time Adjustment

For recipes requiring specific cooking times not covered by pre-sets, use the 'Time' button to set your desired cooking duration manually.

4.4 Delay Start Function

The 'Delay/Start' button can also be used to set a delayed start time, allowing you to program cooking to begin at a later hour.

4.5 Keep Warm Function

After cooking is complete, the cooker will automatically switch to the 'Keep Warm' function to maintain food temperature until serving.

4.6 Pressure Release

Once cooking is complete and the pressure cycle finishes, there are two methods for pressure release:

- **Natural Release:** Allow the pressure to dissipate naturally. This is recommended for foamy foods or large

cuts of meat.

- **Quick Release:** Carefully turn the pressure release valve to the 'Venting' position. Steam will rapidly escape. Keep hands and face clear of the steam.

Only open the lid once the float valve has dropped, indicating all internal pressure has been released.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and safe operation of your Milex MPP0030 Digital Power Pressure Cooker.

5.1 Inner Pot

The inner pot is non-stick and should be washed with warm, soapy water and a soft sponge. Avoid abrasive cleaners or scouring pads that could damage the non-stick coating.



Figure 5.1: The inner pot is removable for easy cleaning.

5.2 Lid and Sealing Ring

Wash the lid and sealing ring with warm, soapy water. Inspect the sealing ring for any cracks or damage. Replace if necessary. Ensure the pressure release valve and anti-block shield are clear of food debris.

5.3 Exterior Unit

Wipe the exterior of the main unit with a damp cloth. Never immerse the main unit in water or rinse it under a tap. Ensure the condensation collector is emptied and cleaned regularly.

5.4 Dishwasher Safety

The Milex MPP0030 Digital Power Pressure Cooker is **not dishwasher safe**. All components should be hand-washed.

6. TROUBLESHOOTING

If you encounter issues with your pressure cooker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lid will not open after cooking.	Internal pressure has not fully released.	Ensure the float valve has dropped. If not, perform a quick release or wait for natural release. Do not force the lid.
Cooker is not building pressure.	Lid not properly sealed; sealing ring damaged or misplaced; pressure release valve in 'Venting' position; insufficient liquid.	Check lid alignment and sealing ring. Ensure pressure release valve is in 'Sealing' position. Add more liquid if necessary.
Food is undercooked.	Insufficient cooking time; not enough liquid; cooker did not reach full pressure.	Increase cooking time. Ensure proper pressure build-up. Verify liquid levels.
Error code on display.	Specific internal issue.	Refer to the specific error code in the full manual (if available) or contact customer support.

For issues not covered here, please contact Milex customer support.

7. SPECIFICATIONS

Detailed technical specifications for the Milex MPP0030 Digital Power Pressure Cooker:

Feature	Specification
Model Number	MPP0030
Capacity	6 Liters
Power / Wattage	1000 watts

Feature	Specification
Working Pressure	70kPa
Material	Stainless Steel
Colour	Silver
Dimensions (D x W x H)	34.2D x 36.5W x 34.2H centimetres
Item Weight	5.82 kg
Special Features	Automatic Shut-Off, Keep Warm Setting, Locking Lid
Dishwasher Safe	No

8. WARRANTY AND SUPPORT

For information regarding the product warranty, please refer to the warranty card included with your purchase or the retailer's terms and conditions. Keep your proof of purchase for warranty claims.

For technical support, spare parts, or service inquiries, please contact Milex customer service through their official website or the contact information provided in your product packaging.