

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Thomson](#) /

› [THOMSON MIC300IDABBT Bluetooth Micro Hi-Fi System User Manual](#)

Thomson MIC300IDABBT

THOMSON MIC300IDABBT Bluetooth Micro Hi-Fi System User Manual

Model: MIC300IDABBT

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your THOMSON MIC300IDABBT Bluetooth Micro Hi-Fi System. Please read this manual thoroughly before using the device and retain it for future reference.

SAFETY INSTRUCTIONS

- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Ensure proper ventilation. Do not block any ventilation openings.
- Place the unit on a stable, flat surface.
- Use only attachments/accessories specified by the manufacturer.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

PRODUCT OVERVIEW

The THOMSON MIC300IDABBT is a versatile micro Hi-Fi system offering multiple audio playback options and convenient features.



Figure 1: Front view of the THOMSON MIC300IDABBT Micro Hi-Fi System, showcasing the main unit with a smartphone placed on its top surface for wireless charging, and the included remote control. The display shows 'Bluetooth Connecté' (Bluetooth Connected).



Figure 2: Close-up of the THOMSON MIC300IDABBT front panel, showing the CD tray, control buttons, and the LCD display indicating 'DISC T-001 CD 00:01', signifying CD playback.

Main Components:

- Main Unit (with integrated speakers)
- Remote Control
- Power Cable
- 3.5mm AUX-IN Cable
- Telescopic Antenna

Key Features:

- Bluetooth 5.0 for wireless audio streaming
- DAB+ and FM Radio with 50 preset stations
- CD Player (supports CD/MP3)
- USB Playback (MP3 compatible)

- AUX-IN (3.5mm jack)
- Integrated Wireless Charger (10W)
- USB Charging Port (5V-1A)
- RCA Output
- Equalizer function
- LCD Display with Time display

SETUP

1. Unpacking

Carefully remove all components from the packaging. Ensure all listed items are present. Keep packaging materials for future transport or storage.

2. Power Connection

1. Connect the power cable to the AC IN socket on the rear of the main unit.
2. Plug the other end of the power cable into a standard 230V AC wall outlet.

3. Antenna Setup

Extend the telescopic antenna fully for optimal DAB+ and FM radio reception. Adjust its position for the best signal quality.

4. Remote Control Battery Installation

The remote control requires 2 x AAA batteries (not included). Open the battery compartment on the back of the remote control, insert the batteries according to the polarity markings, and close the compartment.

OPERATING INSTRUCTIONS

1. Power On/Off and Standby

Press the **POWER** button on the unit or remote control to turn the system on or off. In standby mode, the clock will be displayed.

2. Source Selection

Press the **SOURCE** button repeatedly on the unit or remote control to cycle through available modes: Bluetooth, CD, DAB+, FM, USB, AUX-IN.

3. Volume Control

Rotate the **VOLUME** knob on the unit or use the **VOL+/-** buttons on the remote control to adjust the sound level.

4. Bluetooth Operation

1. Select Bluetooth mode. The display will show 'Bluetooth' and 'Pairing'.
2. On your mobile device, enable Bluetooth and search for 'MIC300IDABBT'.
3. Select 'MIC300IDABBT' to pair. Once connected, the display will show 'Bluetooth Connected'.
4. You can now stream audio from your device to the Hi-Fi system.

5. CD Playback

1. Select CD mode.
2. Gently insert a CD into the CD slot with the label side facing up. The disc will be loaded automatically.
3. Playback will begin automatically. Use the playback control buttons (Play/Pause, Skip, Stop) on the unit or remote.

6. Radio Operation (DAB+/FM)

1. Select DAB+ or FM mode.
2. For DAB+: The system will automatically scan for available stations on first use. Use the **TUNE+/-** buttons to navigate through stations.
3. For FM: Press and hold **TUNE+/-** to auto-scan for the next available station. Press briefly to fine-tune.
4. To save a preset: Tune to the desired station, press and hold the **PRESET** button, select a preset number using **TUNE+/-**, and press **PRESET** again to confirm.
5. To recall a preset: Press the **PRESET** button briefly, then use **TUNE+/-** to select the desired preset.

7. USB Playback

1. Insert a USB flash drive (FAT32 format, max 32GB) into the USB port.
2. Select USB mode. The system will automatically detect and play MP3 files.
3. Use playback controls to navigate tracks.

8. AUX-IN Connection

Connect an external audio device (e.g., MP3 player) to the 3.5mm AUX-IN jack using the provided cable. Select AUX-IN mode to play audio from the connected device.

9. Wireless Charging

Place a Qi-compatible smartphone on the designated wireless charging area on top of the unit. Ensure the phone is centered for optimal charging. The charging indicator on the phone will confirm charging status.

10. USB Charging

Connect a USB charging cable to the USB charging port (5V-1A) on the rear of the unit to charge compatible devices.

11. Equalizer

Press the **EQ** button on the remote control to cycle through different equalizer presets (e.g., Flat, Classic, Rock, Pop, Jazz).

12. Setting the Clock

In standby mode, press and hold the **TIME SET** button on the remote. Use the **TUNE+/-** buttons to adjust hours and minutes, and **TIME SET** to confirm each setting.

MAINTENANCE

Cleaning

- Always unplug the unit from the power outlet before cleaning.

- Use a soft, dry cloth to clean the exterior surfaces.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

Storage

If the unit is not used for an extended period, unplug it from the power source and store it in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet faulty	Check power cable connection; Try a different outlet
No sound	Volume too low; Incorrect source selected; Mute activated	Increase volume; Select correct source; Deactivate mute
Bluetooth pairing fails	Device too far; Bluetooth not enabled on device; Incorrect device selected	Move device closer; Enable Bluetooth; Select 'MIC300IDABBT'
Poor radio reception	Antenna not extended/positioned correctly; Weak signal area	Extend and adjust antenna; Try moving the unit to a different location
CD not playing	CD inserted incorrectly; Disc scratched/dirty; Unsupported format	Re-insert CD correctly; Clean or replace disc; Ensure it's an audio CD or MP3 CD
Remote control not working	Batteries depleted/incorrectly inserted; Obstruction between remote and unit	Replace batteries; Check battery polarity; Remove obstructions

SPECIFICATIONS

- **Brand:** Thomson
- **Model Number:** MIC300IDABBT
- **Connectivity Technology:** Bluetooth 5.0
- **Supported Standards:** DAB+, FM, Bluetooth, MP3, CD
- **Speaker Type:** Stereo
- **Total Music Power:** 60W (Note: Some specifications list 50W, refer to product packaging for exact rating)
- **Power Source:** 230V AC (Cable Electric)
- **Wireless Charging Output:** 10W
- **USB Charging Output:** 5V-1A
- **Dimensions (L x W x H):** Approximately 40 x 30 x 40 cm
- **Item Weight:** 1000 Grams
- **Compatible Devices:** MP3 Player, Personal Computer, Tablet, Television, Smartphone
- **Color:** Wood, Black

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or contact your local Thomson service center. Keep your proof of purchase for any warranty claims.