

DOMO DO543FR

DOMO DO543FR Deli-fryer Air Fryer User Manual

Model: DO543FR

INTRODUCTION

Thank you for purchasing the DOMO DO543FR Deli-fryer Air Fryer. This appliance uses rapid hot air circulation to cook a variety of foods with significantly less oil than traditional frying methods. Please read this manual thoroughly before use to ensure safe and efficient operation. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Always place the appliance on a stable, heat-resistant surface, away from walls and other appliances, to allow for adequate air circulation.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Supervise children closely when the appliance is in use. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Do not operate the appliance if the plug, power cord, or the appliance itself is damaged. Contact authorized service personnel for repair.
- Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool completely before handling.
- Do not place anything on top of the appliance.
- Do not use accessories not recommended by the manufacturer, as this may cause injuries.
- Exercise extreme caution when moving an appliance containing hot oil or other hot liquids.
- The appliance features cool-touch walls and handle, but the interior and cooking surfaces will be hot during and immediately after use. Avoid contact with hot surfaces.
- This appliance is equipped with overheat protection. If the internal temperature exceeds a safe limit, it will automatically shut off.

PRODUCT OVERVIEW

Components

- Main Unit
- Removable Frying Basket
- Non-stick Grill Plate
- Digital Touch Control Panel
- Viewing Window
- Cool-touch Handle

Control Panel

The DOMO DO543FR features an intuitive digital touch control panel for easy operation.



Image: Close-up view of the digital touch control panel, displaying temperature, time, and various pre-set cooking icons.

- **Power Button:** To turn the appliance on/off.
- **Temperature Control:** Adjust temperature between 80°C and 220°C.
- **Timer Control:** Set cooking time up to 60 minutes.
- **Pre-set Programs:** 8 automatic programs for common dishes (e.g., fries, chicken, fish).
- **Shake Reminder:** An icon will illuminate to remind you to shake the basket for even cooking.
- **Start/Pause Button:** To begin or temporarily stop the cooking process.

SETUP

1. **Unpack:** Carefully remove all packaging materials and promotional labels from the appliance.
2. **Clean:** Before first use, clean the frying basket and grill plate with hot water, dish soap, and a non-abrasive sponge. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.

3. **Assemble:** Place the grill plate into the frying basket. Slide the assembled basket back into the main unit until it clicks securely into place.
4. **Placement:** Position the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm of free space around the back and sides of the appliance for proper ventilation.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet. The appliance is now ready for use.



Image: The DOMO DO543FR air fryer on a kitchen counter, illustrating its compact size and readiness for use.

OPERATING INSTRUCTIONS

General Operation

1. **Prepare Food:** Place your ingredients into the frying basket. Do not overfill the basket; ensure there is enough space for air to circulate. The maximum capacity is 8 liters or 2 kg of fries.
2. **Insert Basket:** Slide the frying basket back into the appliance.
3. **Power On:** Press the power button to turn on the display.
4. **Select Cooking Method:**
 - **Manual Setting:** Use the temperature and timer controls to set your desired cooking temperature (80-220°C) and time (up to 60 minutes).
 - **Pre-set Programs:** Select one of the 8 pre-programmed settings by tapping the corresponding

icon. The appliance will automatically set the optimal temperature and time for that food type.

5. **Start Cooking:** Press the Start/Pause button to begin the cooking process. The interior light will activate, and you can monitor progress through the viewing window.
6. **Shake Reminder:** For certain foods, the appliance will emit a sound and display a "shake" icon to remind you to shake the basket for even cooking. Carefully pull out the basket, shake the contents, and reinsert it. The cooking will resume automatically.
7. **End of Cooking:** Once the timer reaches zero, the appliance will beep, and the cooking process will stop. Carefully pull out the basket using the cool-touch handle.
8. **Serve:** Remove the cooked food from the basket. Use heat-resistant tongs or utensils. Be cautious of hot steam.



Image: The DOMO DO543FR air fryer in operation, showing fries cooking inside the basket, visible through the transparent viewing window. The digital display shows a temperature of 185°C.



Image: A detailed view of the air fryer's cool-touch handle and the viewing window, highlighting the visibility of food during the cooking process.

COOKING GUIDE

The following table provides general guidelines for cooking various foods. Cooking times and temperatures may vary based on food quantity, size, and desired crispness.

Food Item	Quantity	Temperature	Time	Notes
-----------	----------	-------------	------	-------

Food Item	Quantity	Temperature	Time	Notes
Frozen Fries	300-700g	180-200°C	15-25 min	Shake basket 2-3 times.
Fresh Fries	300-700g	180°C	20-30 min	Add 1/2 tbsp oil. Shake basket 2-3 times.
Chicken Drumsticks	2-4 pcs	180°C	18-25 min	Flip halfway.
Steak	150-300g	200°C	8-15 min	Flip halfway.
Vegetables (mixed)	200-500g	160-180°C	10-18 min	Lightly oil. Shake basket.

For best results, preheat the air fryer for 3-5 minutes at the desired cooking temperature before adding food.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your DOMO DO543FR air fryer.

- Unplug and Cool:** Always unplug the appliance and allow it to cool down completely before cleaning.
- Clean Basket and Grill Plate:** The frying basket and grill plate are non-stick. They can be washed with hot water, dish soap, and a non-abrasive sponge. For stubborn food residues, soak them in hot water for about 10 minutes before cleaning. They may also be dishwasher safe (check product specifications for confirmation).
- Clean Interior:** Wipe the interior of the appliance with a damp cloth. Do not use abrasive cleaners or metal scouring pads.
- Clean Exterior:** Wipe the exterior of the air fryer with a damp cloth.
- Storage:** Ensure all parts are clean and dry before storing the appliance. Store it in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in. Power outlet not working.	Ensure the power cord is securely plugged into a working outlet. Test the outlet with another appliance.
Food is not cooked evenly.	Basket is overfilled. Food not shaken or flipped.	Reduce the amount of food in the basket. Shake or flip food halfway through cooking, especially for smaller items like fries.
Food is not crispy.	Not enough oil (for fresh food). Temperature too low or time too short.	Lightly brush or spray fresh food with oil. Increase temperature or cooking time. Ensure food is dry before cooking.

Problem	Possible Cause	Solution
White smoke coming from appliance.	Grease residue from previous use. High-fat food cooking.	Clean the basket and grill plate thoroughly after each use. This is normal for high-fat foods; ensure proper ventilation.

SPECIFICATIONS

- **Brand:** DOMO
- **Model Number:** DO543FR
- **Color:** Black
- **Capacity:** 8 Liters
- **Power:** 1800 Watts
- **Voltage:** 230 Volts
- **Temperature Range:** 80°C - 220°C
- **Timer:** Up to 60 minutes with sound signal
- **Product Dimensions (L x W x H):** 38 x 29.5 x 30 cm
- **Weight:** 6 Kilograms
- **Material:** Plastic - Metal
- **Special Features:** 8 automatic programs, touch control screen, viewing window, cool-touch wall and handle, overheat protection.
- **Automatic Shut-off:** No (Timer function stops cooking, but unit remains powered until unplugged or manually turned off)
- **Country of Origin:** China



Image: The DOMO DO543FR air fryer with its key dimensions (length, width, height) clearly indicated.

WARRANTY AND SUPPORT

This DOMO DO543FR Deli-fryer Air Fryer comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

Spare Parts Availability: Spare parts for this appliance are available for a period of **2 years** from the date of purchase.

For technical support, service, or to inquire about spare parts, please contact your retailer or the DOMO customer service department. Contact information can typically be found on the DOMO official website or on your purchase receipt.