

EMKE XESFTR1360X1W-DEVC

EMKE Electric Towel Radiator 1320x600mm with Thermostat, White, 800W User Manual

Model: XESFTR1360X1W-DEVC

1. INTRODUCTION

Thank you for choosing the EMKE Electric Towel Radiator. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your new towel radiator. Please read this manual thoroughly before installation and use, and keep it for future reference.

This electric towel radiator, measuring 1320 x 600 mm and finished in white (RAL9016), operates at 800 W and is designed for an application area of approximately 8 m². It features an integrated thermostat for precise temperature control and a timer function for flexible heating schedules.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the power supply matches the voltage specified on the product label.
- Do not operate the radiator with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Do not immerse the radiator or its electrical components in water or other liquids.
- Keep the power cord away from heated surfaces.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not cover the radiator while it is operating, as this may cause overheating.
- Installation must be carried out by a qualified electrician in accordance with local wiring regulations.
- Ensure the radiator is securely mounted to the wall before connecting to power.

3. PACKAGE CONTENTS

Carefully unpack the box and ensure all items are present and undamaged. If any items are missing or damaged, please contact customer service.



Figure 3.1: Standard Accessories

This image displays the components included in the package: a heating rod (pre-installed), four wall brackets, four spacers, four wall plugs, four long screws, four bolts, and four small screws.

- Electric Towel Radiator (with pre-installed heating element and anti-freeze liquid)
- Mounting Kit (Wall brackets, spacers, wall plugs, screws, bolts)
- User Manual

4. SETUP & INSTALLATION

The towel radiator comes largely pre-assembled. The heating element is pre-installed with anti-freeze liquid. Follow these steps for installation:

4.1 Mounting the Radiator

1. Choose a suitable location on the wall, ensuring it is within reach of a power outlet and away from water splashes.
2. Mark the drilling points for the wall brackets. The wall distance is adjustable between 99 mm and 115 mm.
3. Drill holes at the marked points and insert the wall plugs.
4. Attach the wall brackets to the wall using the long screws.
5. Mount the towel radiator onto the wall brackets, securing it with the provided bolts and small screws.

4.2 Connecting the Thermostat

The heating rod with the thermostat should always be mounted at the bottom edge of the radiator for optimal performance and safety.

Figure 4.1: Heating Rod Installation

This image illustrates the correct placement of the heating rod at the bottom of the radiator (left panel) and incorrect placements (right panels, showing rod at top or side), emphasizing that the heating rod must always be installed at the bottom.

1. Ensure the main power supply is disconnected before proceeding.
2. The heating rod is already integrated into the radiator. Simply ensure its position at the bottom is correct.

3. Plug the power cord of the thermostat into a grounded electrical outlet. The 1.4m cable is designed to reach a socket on the right side.

5. OPERATING INSTRUCTIONS

The integrated thermostat allows for precise temperature control and timed operation.

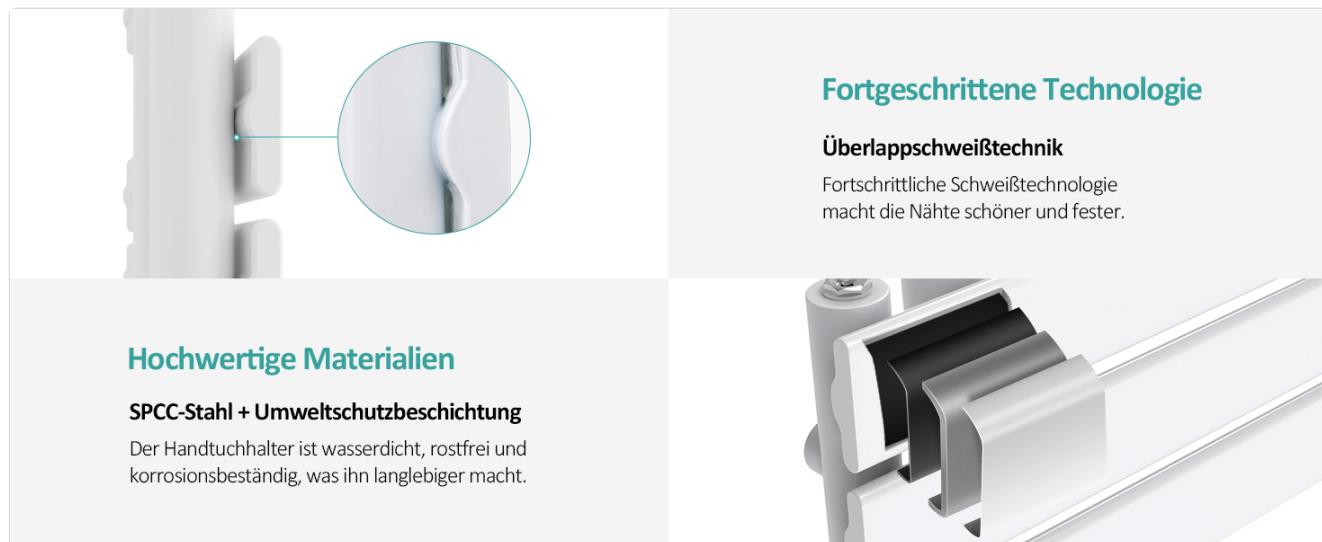


Figure 5.1: Thermostat Controls

This image shows the digital display and buttons on the thermostat. It indicates the temperature control range (30-70°C), timer settings (2H/4H/6H/8H), and a timer mode that maintains 65°C.

5.1 Power On/Off

- Press the power button (**Schaltertaste**) to turn the radiator on or off.

5.2 Temperature Adjustment

- Use the '+' (**Temperatur/Zeit: Aufstieg**) and '-' (**Temperatur/Zeit: Abstieg**) buttons to adjust the desired temperature.
- The temperature can be set precisely between 30°C and 70°C, in 5°C increments.

5.3 Timer Function

- Press the mode change button (**Moduswechsel**) to cycle through timer settings.
- Available timer durations are 2, 4, 6, or 8 hours.
- In timer mode, the radiator operates at maximum power and maintains a temperature of 65°C.

6. MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your towel radiator.

6.1 Cleaning

- Always disconnect the radiator from the power supply before cleaning.
- Wipe the surface of the radiator with a soft, damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.
- Ensure the radiator is completely dry before reconnecting to power.

6.2 Material Quality



Figure 6.1: Towel Radiator Structure

This image details the internal structure of the towel radiator, showing an inner coating, a low-carbon steel layer (SPCC steel), and an environmentally friendly spray coating. This construction ensures durability, corrosion protection, and efficient heat transfer.

The radiator is constructed from high-quality SPCC steel with an environmentally friendly coating, making it waterproof, rust-proof, and corrosion-resistant. This design ensures optimal thermal conductivity and a long service life.

7. TROUBLESHOOTING

If you encounter any issues with your EMKE Electric Towel Radiator, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Radiator does not heat up.	No power supply; Thermostat off; Faulty heating element.	Check if the plug is securely in the socket and the power outlet is working. Ensure the thermostat is turned on and set to a desired temperature. If the issue persists, contact customer support.
Temperature is inconsistent.	Incorrect thermostat setting; Room temperature fluctuations.	Adjust the thermostat to a higher or lower setting. Ensure the room is adequately insulated.
Radiator makes unusual noises.	Air in the system (unlikely for electric models); Loose mounting.	Ensure the radiator is securely mounted to the wall. If noises persist, disconnect power and contact customer support.

If the problem cannot be resolved using the above steps, please contact EMKE customer support for assistance.

8. SPECIFICATIONS

Feature	Detail

Feature	Detail
Manufacturer	EMKE
Model Number	XESFTR1360X1W-DEVC
Dimensions (L x W x H)	132 x 60 x 5.9 cm
Weight	24.7 kg
Color	White
Power	800 W
Application Area	Up to 8 m ²
Temperature Control Range	30°C - 70°C
Timer Settings	2H, 4H, 6H, 8H
Wall Distance (Adjustable)	99 mm - 115 mm
Cable Length	1.4 m
Country of Origin	China

9. WARRANTY & SUPPORT

EMKE products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official EMKE website.

For technical support, spare parts, or any questions not covered in this manual, please contact EMKE customer service through the retailer where you purchased the product or via the contact information provided on the official EMKE website.

Please have your model number (XESFTR1360X1W-DEVC) and purchase date ready when contacting support.