

[Manuals.plus](#) /

› [Daewoo](#) /

› Daewoo DW1191CA Portable Bluetooth Soundbox User Manual

Daewoo DW1191CA

Daewoo DW1191CA Portable Bluetooth Soundbox User Manual

Model: DW1191CA

1. INTRODUCTION

Thank you for purchasing the Daewoo DW1191CA Portable Bluetooth Soundbox. This device is designed to provide high-quality audio playback with versatile connectivity options. Please read this manual carefully before using the product to ensure proper operation and to maximize its lifespan. Keep this manual for future reference.



Image 1.1: The Daewoo DW1191CA Portable Bluetooth Soundbox, showcasing its camouflage design and integrated carrying handle.

2. PACKAGE CONTENTS

Ensure all items are present in the package:

- 1 x Daewoo DW1191CA Portable Bluetooth Soundbox
- 1 x Micro USB Charging Cable
- 1 x Audio Cable (AUX)
- 1 x User Manual

3. PRODUCT OVERVIEW (CONTROLS AND PORTS)

Familiarize yourself with the various parts and controls of your soundbox:



Image 3.1: Detailed view of the control panel, including buttons and input ports.

1. **Micro SD Card Slot:** Insert a Micro SD card for audio playback.
2. **USB Port:** Insert a USB flash drive for audio playback.
3. **DC 5V Charging Port:** Connect the Micro USB charging cable here.
4. **AUX Input:** Connect external audio devices using the provided audio cable.
5. **Previous Track / Volume Down (V-):** Short press for previous track, long press to decrease volume.
6. **Mode (M):** Press to switch between Bluetooth, FM Radio, USB, Micro SD, and AUX modes.
7. **Power Button:** Long press to power on/off. Short press to toggle RGB LED lighting.
8. **Play/Pause:** Press to play or pause audio. In FM mode, long press to auto-scan stations.
9. **Next Track / Volume Up (V+):** Short press for next track, long press to increase volume.

4. CHARGING THE DEVICE

The soundbox is equipped with a built-in rechargeable 1500 mAh lithium-ion battery.

- Connect the Micro USB charging cable to the DC 5V port on the soundbox and the other end to a USB power adapter (not included) or a computer's USB port.
- The charging indicator light will illuminate during charging.
- A full charge takes approximately 4.5 hours.
- Once fully charged, the indicator light may change or turn off, depending on the unit.
- A fully charged battery provides approximately 5 hours of playback time at moderate volume.

5. BASIC OPERATION

5.1 Power On/Off

- To power on, long press the **Power Button**.
- To power off, long press the **Power Button** again.

5.2 Mode Selection

- Press the **Mode (M) Button** to cycle through available modes: Bluetooth, FM Radio, USB, Micro SD, and AUX.

6. BLUETOOTH CONNECTION

The soundbox features Bluetooth version 5.0 with a transmission range of up to 10 meters (without obstacles).

1. Power on the soundbox. It will automatically enter Bluetooth pairing mode, indicated by an audible prompt.
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
3. Search for available Bluetooth devices and select "DW1191CA" from the list.
4. Once successfully paired, you will hear a confirmation sound.
5. You can now play audio from your device through the soundbox.

7. TRUE WIRELESS STEREO (TWS) PAIRING

TWS technology allows you to connect two DW1191CA soundboxes wirelessly for a stereo audio experience.

1. Ensure both DW1191CA soundboxes are powered on and in Bluetooth mode.
2. On one of the soundboxes (this will be the primary unit), long press the **Play/Pause Button** until you hear a pairing tone.
3. The two soundboxes will automatically connect to each other. Once connected, you will hear a confirmation sound.
4. Now, connect your Bluetooth device to the primary soundbox as described in Section 6.
5. Audio will now play in stereo through both connected soundboxes.

8. FM RADIO OPERATION

1. Press the **Mode (M) Button** to switch to FM Radio mode.
2. Long press the **Play/Pause Button** to initiate an automatic scan for FM stations. The soundbox will save all found stations.
3. Use the **Previous Track** and **Next Track** buttons to navigate between saved stations.

9. USB, MICRO SD, AND AUX PLAYBACK

9.1 USB / Micro SD Playback

- Insert a USB flash drive or a Micro SD card (pre-loaded with audio files) into the respective port.
- The soundbox will automatically switch to USB or Micro SD mode and begin playing audio. If not, press the **Mode (M) Button** to select the correct mode.
- Use the **Previous Track**, **Next Track**, and **Play/Pause** buttons to control playback.

9.2 AUX Playback

- Connect one end of the provided audio cable to the AUX input port on the soundbox and the other end to the audio output of your external device (e.g., MP3 player, laptop).
- Press the **Mode (M) Button** to switch to AUX mode.
- Control audio playback directly from your external device.

10. MAINTENANCE AND CARE

- Keep the soundbox away from water, moisture, and extreme temperatures.
- Do not expose the device to direct sunlight for extended periods.
- Clean the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid dropping or subjecting the soundbox to strong impacts.
- When not in use for a long time, charge the battery at least once every three months to maintain its lifespan.

11. TROUBLESHOOTING

Problem	Possible Solution
Soundbox does not power on.	Ensure the battery is charged. Connect the charging cable and try again.
No sound.	Check the volume level on both the soundbox and your connected device. Ensure the correct mode (Bluetooth, AUX, etc.) is selected.
Bluetooth device cannot find the soundbox.	Ensure the soundbox is in Bluetooth pairing mode. Move your device closer to the soundbox. Turn off and on Bluetooth on your device.
TWS pairing fails.	Ensure both soundboxes are DW1191CA models and are in Bluetooth mode before attempting TWS pairing. Try restarting both units.
Poor FM radio reception.	Relocate the soundbox to an area with better signal.

12. TECHNICAL SPECIFICATIONS



Image 12.1: Dimensions and weight of the Daewoo DW1191CA Soundbox.

Feature	Specification
Model	DW1191CA
Bluetooth Version	5.0
Transmission Distance	Up to 10 meters (without obstacles)
Speaker Size	3 inches (x2)
Output Power	60W RMS
Frequency Response	150 Hz - 15 kHz
Battery Capacity	1500 mAh
Playback Time	Approximately 5 hours
Charging Time	Approximately 4.5 hours
Charging Input	Micro USB DC 5V
Inputs	USB, Micro SD, AUX
Special Features	TWS (True Wireless Stereo), FM Radio, RGB LED Lighting
Dimensions (L x W x H)	28.7 cm x 11.2 cm x 12.7 cm
Weight	1.18 kg (1180 grams)
Material	Plastic

13. WARRANTY INFORMATION

This product comes with a 3-month warranty against manufacturing defects. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

13.1 Support

For technical support or warranty inquiries, please contact your retailer or the Daewoo customer service department.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CV8Z4YSH>

More documents and user manuals: <https://manuals.plus/>