

[Manuals.plus](#) /

› [Hyperkin](#) /

› Hyperkin Sriracha Pixel Art Bluetooth Controller User Manual

Hyperkin Pixel Art Bluetooth Controller

Hyperkin Sriracha Pixel Art Bluetooth Controller User Manual

MODEL: PIXEL ART BLUETOOTH CONTROLLER

Introduction

Thank you for purchasing the Hyperkin Sriracha Pixel Art Bluetooth Controller. This manual provides essential information for setting up, operating, and maintaining your controller. Please read these instructions carefully before use to ensure optimal performance and longevity of your device.

Package Contents

- Hyperkin Sriracha Pixel Art Bluetooth Controller
- USB-C Charging Cable
- User Manual (this document)

Controller Layout

Familiarize yourself with the buttons and features of your Hyperkin Sriracha Pixel Art Bluetooth Controller.



Image: Top view of the Hyperkin Sriracha Pixel Art Bluetooth Controller, showcasing the D-pad, analog sticks, A/B/X/Y buttons, Start, Select, and Hyperkin logo button. The controller features a red and black Sriracha pixel art design.

- **D-Pad:** Directional input for precise movement.
- **Left Analog Stick:** Primary movement control.
- **Right Analog Stick:** Camera control or aiming.
- **A/B/X/Y Buttons:** Standard action buttons.
- **L/R Buttons:** Left and Right shoulder buttons.
- **ZL/ZR Buttons:** Left and Right trigger buttons.
- **SELECT/MINUS Button:** Used for various system functions depending on the platform.
- **START/PLUS Button:** Used for various system functions depending on the platform.
- **HOME Button:** Returns to the system menu on compatible devices.
- **Screenshot Button:** Captures screenshots on compatible devices.
- **Hyperkin Button (H logo):** Power on/off and pairing indicator.
- **USB-C Port:** For charging and wired connection.

- **Reset Button (small hole):** For factory reset (requires a small pin).

Setup and Pairing

1. Charging the Controller

Before initial use, fully charge your controller. Connect the provided USB-C cable to the controller's USB-C port and the other end to a USB power source (e.g., computer, USB wall adapter). The LED indicator on the controller will show the charging status and turn off or change color when fully charged.

2. Pairing with Nintendo Switch

1. On your Nintendo Switch console, navigate to the HOME Menu.
2. Select **Controllers > Change Grip/Order**.
3. Press and hold the **H** (Hyperkin) button on the controller for approximately 3-5 seconds until the LED indicator begins to flash rapidly. This indicates pairing mode.
4. Once the controller is successfully paired, the LED indicator will remain solid, and the controller will appear on the Switch screen.

3. Pairing with PC, Mac, Android, iOS, and other Bluetooth-enabled devices



Image: The Hyperkin Sriracha Pixel Art Bluetooth Controller shown with various compatible devices including Nintendo Switch, PC, Mac, Android, and iOS devices, highlighting its broad compatibility.

1. Ensure Bluetooth is enabled on your PC, Mac, Android, or iOS device.
2. Press and hold the **H** (Hyperkin) button on the controller for approximately 3-5 seconds until the LED indicator begins to flash rapidly.
3. On your device, go to the Bluetooth settings and search for available devices.
4. Select "Hyperkin Pixel Art Controller" from the list of found devices.
5. Once connected, the LED indicator on the controller will remain solid.

Operating Instructions

Power On/Off

- To power on: Press the **H** button once.
- To power off: Press and hold the **H** button for 5 seconds.

Turbo Function

The controller features a Turbo function for rapid button presses.

- **To activate Turbo:** Press and hold the desired action button (A, B, X, Y, L, R, ZL, ZR), then press the **Turbo** button. The button will now auto-fire when held down.
- **To deactivate Turbo:** Repeat the activation process for the specific button.

Maintenance

To ensure the longevity and proper functioning of your controller, follow these maintenance guidelines:

- Keep the controller clean and dry.
- Avoid exposing the controller to extreme temperatures, humidity, or direct sunlight.
- Use a soft, dry cloth to clean the surface of the controller. Do not use harsh chemicals or abrasive materials.
- Store the controller in a safe place when not in use to prevent damage.

Troubleshooting

If you encounter any issues with your controller, please refer to the following common problems and solutions:

Problem	Solution
Controller does not power on.	Ensure the controller is fully charged. Connect it to a power source using the USB-C cable.
Controller does not pair with device.	Make sure Bluetooth is enabled on your device. Try resetting the controller by inserting a small pin into the reset hole on the back. Re-attempt pairing by holding the H button until the LED flashes rapidly.
Input lag or frequent disconnections.	Move closer to the connected device. Ensure there are no physical obstructions or strong wireless interference sources (e.g., Wi-Fi routers, other Bluetooth devices).
Buttons or analog sticks are unresponsive.	Try resetting the controller using the reset button. If the issue persists, ensure the controller is fully charged and re-pair it with your device.

Specifications

Connectivity	Bluetooth Wireless
Wireless Range	Up to 30 ft. (9 meters)
Compatibility	Nintendo Switch, Nintendo Switch OLED Model, Windows 10/11 PC, Chromebook, Mac, Android, iOS, Steam, Steam Deck, ROG Ally, Raspberry Pi, Amazon Games/Amazon Luna, Tesla
Dimensions	7.17 x 5.24 x 2.32 inches (approx. 18.2 x 13.3 x 5.9 cm)
Weight	9.9 ounces (approx. 280 grams)

Features

Turbo Function, Vibration Feedback, Highly Accurate Analog Sticks, Retro Design with Modern Ergonomics

Warranty and Support

Hyperkin products are designed for quality and reliability. This product comes with a limited manufacturer's warranty. For detailed warranty information, technical support, and customer service, please visit the official Hyperkin website or contact their support team directly.

Official Website: www.hyperkin.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question