

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Emerson](#) /

> [Emerson 7" Portable TV LCD Monitor – Rechargeable Battery Operated with HDMI, USB, AV Input, Digital Tuner, AC/DC, Remote, Antenna, Stand – Small Travel HD TV for Car, Camping, Kids, Streaming Devices](#)

Emerson ET-7000

Emerson 7" Portable TV LCD Monitor User Manual

Model: ET-7000

Brand: Emerson

INTRODUCTION

This manual provides comprehensive instructions for the Emerson 7" Portable TV LCD Monitor, Model ET-7000. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device. Please read this manual thoroughly before using the product.



Image: The Emerson 7-inch Portable TV, showing the screen displaying a basketball game, along with its remote control and external antenna.

WHAT'S IN THE BOX

Upon opening the package, please ensure all the following items are included:

- Emerson 7" Portable TV
- External Antenna
- A/V Cable
- Remote Control
- User Manual
- Stand
- AC Power Adapter
- DC Car Power Cord
- Antenna Extension Adapter



Image: A top-down view of all accessories and the portable TV laid out, including cables, adapters, remote, and stand.

KEY FEATURES

- **Fully Loaded Features:** Equipped with HDMI, USB, dual AV inputs, built-in speaker, full built-in digital tuner, headphone jack, Remote control and full-band digital TV tuner with ATSC & NTSC support.
- **Long-Lasting Rechargeable Battery:** Stay connected during power outages or on outdoor adventures. The built-in battery delivers hours of continuous play, plus it includes a 12V car charger for recharging anywhere.




0.79 lbs



4.6 in.

1.4 in.

8.1 in.

Image: The portable TV plugged into a car's cigarette lighter socket, demonstrating the car charging capability.



7" Portable TV with Multimedia Player

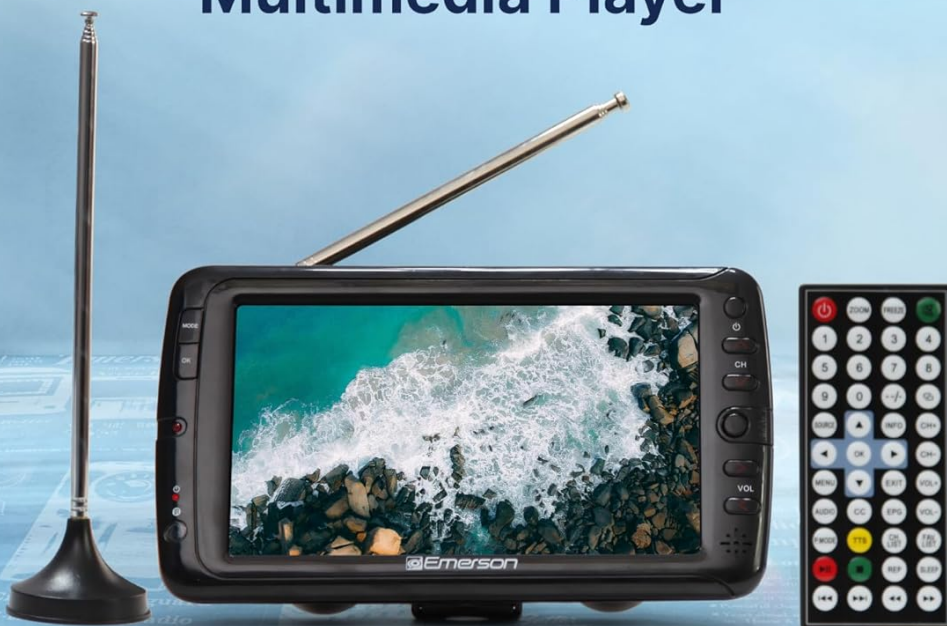


Image: A man sitting on his luggage at an airport, smiling while holding and watching the portable TV, highlighting its portability.

- **Wide Compatibility Across Devices:** Stream and connect with HDMI, USB, AV, and more. Works with Roku, Amazon Firestick, Chromecast, DVD players, Slingbox, game consoles, Apple TV, laptops, and even security camera systems.
- **Multi-purpose Display Functionality:** Use it as a portable TV, computer monitor, gaming monitor, and more! Supports a variety of formats including MP3, MP4, MKV, WMV, FLV, AVI, H.264, HEVC(H.265), MPEG, MPEG 1, MPEG 2, MPEG 3, XVID, JPEG, RMVB, MKY, 3G, and more—ideal for movies, gaming, or professional use.
- **Built for Travel & On-the-Go Use:** Compact and lightweight with a fold-out stand, it's the perfect size for camping, RV trips, car rides, tailgating, or keeping kids entertained on the road, indoor & outdoor use.

External Antenna Included

An external antenna to improve reception and clarity!



Image: A woman enjoying a cup of coffee while watching the portable TV inside an RV, with a scenic view outside the window.



Image: A child sitting comfortably on a large, fluffy bean bag, holding and watching the portable TV, illustrating its use for kids.

SETUP

1. Powering On

Connect the included AC power adapter to the DC 12V input port on the TV and plug it into a standard wall outlet. Alternatively, you can use the built-in rechargeable battery for portable use. Press the **POWER** button on the TV or remote control to turn the unit on.

2. Antenna Connection

For receiving over-the-air digital TV broadcasts, connect the external antenna to the **ANTENNA IN** port on the TV. Position the antenna for optimal reception. You may need to adjust its position during channel scanning or if signal quality is poor.

3. Initial Channel Scan

After connecting the antenna and powering on the TV for the first time, it is recommended to perform an auto channel scan. Navigate to the **MENU**, select **CHANNEL** or **SETUP**, and then choose **AUTO SCAN**. The TV will search for available digital and analog channels in your area. This process may take several minutes.

OPERATING INSTRUCTIONS

1. Basic Controls

- **Power:** Press the **POWER** button to turn the TV on or off.
- **Volume:** Use the **VOL+** and **VOL-** buttons to adjust the volume level.

- **Channel:** Use the **CH+** and **CH-** buttons to change channels.
- **Mute:** Press the **MUTE** button on the remote to temporarily silence the audio.

2. Input Selection

To switch between different video sources (e.g., TV tuner, HDMI, USB, AV), press the **SOURCE** or **INPUT** button on the remote control or the TV. Use the arrow buttons to select your desired input and press **OK**.

3. Media Playback (USB)

Insert a USB flash drive into the **USB** port. Select the USB input source. The TV's media player interface will appear, allowing you to browse and play compatible video, audio, and image files stored on the USB drive.

MAINTENANCE

1. Cleaning

To clean the screen and casing, use a soft, dry cloth. For stubborn marks, slightly dampen the cloth with water or a mild, non-abrasive cleaner specifically designed for electronics. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the surface.

2. Battery Care

To prolong the life of the built-in rechargeable battery, avoid fully discharging it frequently. Charge the battery regularly, even if the TV is not in constant use. Store the TV in a cool, dry place away from extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected; Battery discharged	Ensure AC adapter is securely plugged in; Charge the battery fully.
No signal / No channels	Antenna not connected or poorly positioned; No channel scan performed	Connect antenna securely; Adjust antenna position; Perform an auto channel scan.
No sound	Volume too low; Mute function activated	Increase volume; Press the MUTE button on the remote.
Poor picture quality	Weak signal; Antenna interference	Adjust antenna position; Try a different location for better reception.
Remote control not working	Batteries are dead or incorrectly inserted; Obstruction between remote and TV	Replace remote batteries; Ensure line of sight to the TV's IR sensor.

SPECIFICATIONS





Image: A diagram showing the dimensions of the portable TV: 8.1 inches (width), 4.6 inches (height), and 1.4 inches (depth), with a weight of 0.79 lbs.

Feature	Detail
Brand Name	Emerson
Model Number	ET-7000
Screen Size	7 Inches
Display Technology	LCD
Resolution	720p
Refresh Rate	60 Hz
Aspect Ratio	5:3
Item Weight	1.3 Pounds (0.59 kg)
Product Dimensions	1.02"D x 9.64"W x 6.42"H
Batteries	1 Lithium Ion battery (included)
Connectivity Technology	HDMI, USB, AV, AC/DC, Antenna Input
Special Features	Portable, Built-in Speaker, Rechargeable Battery, Built-in Digital Tuner, Tabletop Stand

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Emerson brand store. You can find additional support and product details by visiting the [Emerson Store on Amazon](#).