

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Animagic](#) /

› [Animagic Baby Garfield Interactive Plush Toy Instruction Manual](#)

## Animagic 931614.002

# Animagic Baby Garfield Interactive Plush Toy Instruction Manual

Model: 931614.002

## INTRODUCTION

---

This manual provides instructions for the Animagic Baby Garfield Interactive Plush Toy. This interactive plush toy is designed to provide an engaging play experience for children aged 2 years and older. It features interactive elements such as sounds and responses to actions like feeding and applying a sleep mask.

## SAFETY INFORMATION

---

- **Warning:** Not suitable for children under 24 months (2 years) due to potential small parts.
- Always supervise children during play.
- Keep batteries out of reach of small children.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Dispose of used batteries responsibly according to local regulations.

## WHAT'S IN THE BOX

---

- 1 x Animagic Baby Garfield Interactive Plush Toy
- 1 x Sleep Mask Accessory
- 1 x Food Accessory (e.g., hotdog or sandwich)
- 3 x AAA LR03 Batteries (may be pre-installed or included separately)

## SETUP

---

### 1. Battery Installation

1. Locate the battery compartment on the back or bottom of the plush toy.

2. Use a small screwdriver to open the battery compartment cover.
3. Insert 3 x AAA (LR03) batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the cover and secure it with the screw.

*Note: Batteries may be pre-installed. If so, remove the plastic pull tab from the battery compartment to activate the toy.*

## 2. Initial Activation

Remove Baby Garfield from its packaging. If the toy is in "Try Me" mode, locate the power switch (usually near the battery compartment) and slide it to the "ON" position for full functionality.



Image: Animagic Baby Garfield in its original packaging, highlighting the 'Try Me' feature and included accessories.

## OPERATING INSTRUCTIONS

## 1. Basic Interaction

Gently press or squeeze Baby Garfield to hear various sounds and phrases. The toy is designed to respond to touch, providing an interactive experience.



Image: A child gently petting the head of the Animagic Baby Garfield plush toy, demonstrating basic interaction.

## 2. Feeding Baby Garfield

Place the food accessory (e.g., hotdog or sandwich) near Baby Garfield's mouth. The toy will respond with eating sounds or phrases, indicating it is enjoying its meal.



Image: Animagic Baby Garfield plush toy holding a hotdog accessory, ready to be fed.



Image: Animagic Baby Garfield plush toy holding a sandwich accessory, demonstrating another feeding option.

### 3. Sleep Mode

Place the sleep mask accessory over Baby Garfield's eyes. The toy will respond with sleeping sounds or phrases, indicating it is ready for rest.



Image: Animagic Baby Garfield plush toy wearing its blue sleep mask, indicating sleep mode.

## MAINTENANCE

---

## Cleaning Instructions

To clean the Animagic Baby Garfield plush toy, gently wipe the surface with a damp cloth. Do not immerse the toy in water, as this may damage the electronic components. Use mild soap if necessary, and allow to air dry completely before further use.

## Battery Care

- Remove batteries if the toy will not be used for an extended period to prevent leakage.
- Replace all batteries at the same time.

## TROUBLESHOOTING

---

### No Sound or Interaction

- Check if the batteries are correctly installed with the correct polarity.
- Replace with fresh AAA batteries.
- Ensure the toy's power switch is in the "ON" position.
- If a plastic pull tab was present for "Try Me" mode, ensure it has been completely removed.

### Intermittent Sounds

- Batteries may be low. Replace them with new ones.
- Ensure the toy is not exposed to extreme temperatures or moisture.

## SPECIFICATIONS

---

| Feature                | Detail  |
|------------------------|---|
| Model Name             | Baby Garfield Feature Plush                         |
| Model Number           | 931614.002  |
| Brand                  | Animagic  |
| Dimensions (L x W x H) | 10.04" x 6.89" x 10.63" (25.5 cm x 17.5 cm x 27 cm) |
| Material Type          | Plush (Outer), Foam (Inner)                         |
| Power Source           | Battery   |
| Battery Type           | 3 x AAA (LR03) batteries                            |
| Recommended Age        | 24 months (2 years) and up                          |
| Additional Features    | Sound, Interactive                                  |

## WARRANTY AND SUPPORT

---

For warranty information or product support, please refer to the contact details provided on the product packaging or visit the official Animagic website. Keep your purchase receipt as proof of purchase for any warranty claims.

