

[manuals.plus](#) /› [Bissell](#) /› **BISSELL Crosswave Essential Corded 3-in-1 Vacuum Cleaner - Model S7195995 Instruction Manual**

Bissell S7195995

BISSELL Crosswave Essential Corded 3-in-1 Vacuum Cleaner - Model S7195995 Instruction Manual

1. INTRODUCTION

Thank you for purchasing the BISSELL Crosswave Essential Corded 3-in-1 Vacuum Cleaner, Model S7195995. This appliance is designed to vacuum, wash, and dry hard floors simultaneously, providing a comprehensive cleaning solution for your home. This manual contains important information regarding the assembly, safe operation, and maintenance of your machine. Please read all instructions carefully before use.

2. SAFETY INFORMATION

Always follow basic safety precautions when using an electrical appliance to reduce the risk of fire, electric shock, or injury. Read all instructions before using your BISSELL Crosswave Essential.

- Always connect to a properly grounded outlet.
- Do not immerse the appliance in water or other liquids.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not handle plug or appliance with wet hands.
- Turn off all controls before unplugging.
- Use only BISSELL cleaning formulas intended for this appliance.

3. PRODUCT OVERVIEW

The BISSELL Crosswave Essential is a versatile cleaning machine designed for hard floors. It combines vacuuming, washing, and drying functions into one convenient device.



Image 1: The BISSELL Crosswave Essential 3-in-1 Vacuum Cleaner in its upright position, showcasing its sleek design and integrated clean and dirty water tanks.

Key components include the handle, clean water tank, dirty water tank, and multi-surface brush roll. The

machine is designed for ease of use and effective cleaning on various hard floor types.

Product in Use



Image 2: The BISSELL Crosswave Essential being used to clean a hard floor, demonstrating its ability to pick up both dry debris and wet spills in a single pass.



Image 3: A close-up view of the BISSELL Crosswave Essential effectively cleaning up liquid and solid spills on a hard floor surface, highlighting its powerful suction and washing capabilities.

4. SETUP

4.1 Handle Assembly

1. Insert the handle into the main body of the machine until it clicks securely into place. Ensure it is firmly attached before use.

4.2 Filling the Clean Water Tank

1. Remove the clean water tank from the back of the machine.
2. Unscrew the cap at the bottom of the tank.
3. Fill the tank with warm tap water (up to 60°C / 140°F MAX) to the indicated fill line for water.
4. Add the appropriate BISSELL cleaning formula to the formula fill line. Use only BISSELL formulas to prevent damage and ensure optimal performance.
5. Securely replace the cap and reinsert the clean water tank into the machine until it clicks.

4.3 Connecting to Power

As this is a corded appliance, ensure the power cord is fully extended and plugged into a grounded electrical outlet before operation.

5. OPERATING INSTRUCTIONS

5.1 Powering On

Press the power button located on the handle to turn on the machine. The indicator lights will illuminate.

5.2 Cleaning Hard Floors

1. Ensure the machine is in the 'Hard Floor' mode (if applicable, check your model's specific settings).
2. Recline the machine to activate the brush roll and solution dispensing.
3. Hold the spray trigger to dispense cleaning solution onto the floor while moving the machine forward and backward. Release the trigger for dry passes to pick up excess water.
4. Move the machine at a steady pace of approximately 20 cm per second for effective cleaning.

5.3 Finishing Cleaning

When finished, return the machine to its upright position. The brush roll and suction will automatically turn off. Press the power button to completely switch off the machine and unplug it from the outlet.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your BISSELL Crosswave Essential.

6.1 Emptying the Dirty Water Tank

1. Remove the dirty water tank from the front of the machine.
2. Carefully remove the top of the tank and dispose of the dirty water and debris into a sink or toilet.
3. Rinse the dirty water tank thoroughly with clean water.

6.2 Cleaning the Brush Roll and Filter

1. Remove the brush roll window and then the brush roll.
2. Rinse the brush roll under running water to remove any hair or debris. Use the cleaning tool provided to remove stubborn dirt.
3. Remove the filter from the dirty water tank lid and rinse it under water.
4. Allow the brush roll and filter to air dry completely for at least 24 hours before reassembling. A wet filter can reduce suction performance.

6.3 Storage

Store the machine in a dry, protected area. Ensure all tanks are empty and clean, and components are dry before storage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Machine does not turn on	Power cord not securely plugged in.	Check plug and ensure it is fully inserted into a working outlet.
No solution dispensing	Clean water tank is empty or not properly seated.	Refill clean water tank and ensure it is securely in place.
Poor suction	Dirty water tank is full or filter is clogged.	Empty dirty water tank and clean the filter. Ensure filter is dry before reinserting.
Brush roll not spinning	Brush roll is jammed or not properly installed.	Remove brush roll and clear any obstructions. Reinstall correctly.

8. SPECIFICATIONS

- **Brand:** Bissell
- **Model Number:** S7195995
- **Product Dimensions:** 66.3 x 32.7 x 26.6 cm
- **Weight:** 7.87 kg
- **Power:** 560 W
- **Power Source:** Corded Electric
- **Cable Length:** 7.6 m
- **Clean Water Tank Capacity:** 0.82 L (820 ml)
- **Recommended Surfaces:** Hard Floors
- **Included Components:** Mop/Cloth

9. WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase replacement parts and cleaning formulas, please refer to the official BISSELL website or contact their customer service. Keep your purchase receipt as proof of purchase for warranty claims.