Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > CANDY /
- > CANDY CCT3L517EWK-1 Low Frost 50/50 Fridge Freezer User Manual

CANDY CCT3L517EWK

CANDY CCT3L517EWK-1 Low Frost 50/50 Fridge Freezer User Manual

Model: CCT3L517EWK

1. Introduction

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your CANDY CCT3L517EWK-1 Low Frost 50/50 Fridge Freezer. Please read these instructions carefully before using the appliance and keep them for future reference.





Image 1.1: Front view of the CANDY CCT3L517EWK-1 Low Frost 50/50 Fridge Freezer. This appliance features a clean white finish and a balanced 50/50 split between the refrigerator and freezer compartments.

2. SAFETY INFORMATION

For your safety and to ensure proper use, carefully read the following safety information before installing and using the appliance. Keep these instructions with the appliance for future reference.

- Ensure the appliance is unplugged before performing any maintenance or cleaning.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- This appliance is intended for household use only.

- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- The appliance must be positioned so that the plug is accessible.

3. SETUP

3.1 Unpacking

Carefully remove all packaging materials. Dispose of packaging responsibly, keeping plastic bags and other materials away from children.

3.2 Placement

Place the appliance on a firm, level surface. Ensure adequate ventilation around the unit. Do not place it in direct sunlight or near heat sources. The dimensions of the appliance are approximately 55 cm (D) \times 54.5 cm (W) \times 176 cm (H).

3.3 Door Reversibility

The door orientation of this appliance is reversible, allowing you to change the opening direction to suit your kitchen layout. Refer to the detailed instructions in the separate installation guide for the door reversal procedure.

3.4 Initial Power-On

After positioning the appliance, wait at least 4 hours before plugging it into the mains supply. This allows the refrigerant fluids to settle. Once plugged in, set the temperature control and allow the appliance to cool for several hours before loading with food.

4. OPERATING INSTRUCTIONS

4.1 Temperature Control

The refrigerator features a display on top, allowing intuitive temperature setting. You can adjust the temperature level by degree according to the food you wish to store. The display also allows you to activate the 'Super Cool' function for rapid cooling of newly added items.

4.2 Low Frost Technology

This appliance incorporates Low Frost technology, which significantly reduces the formation of frost within the freezer compartment. This makes cleaning the freezer drawers easier and quicker, reducing the frequency of manual defrosting.

4.3 hOn App Integration

Enhance your experience by downloading the hOn App. This application provides a complete set of connected functions designed to simplify your daily life. Get useful tips and hints via your smartphone and enjoy multiple features such as the Inventory Assistant, Smart Drink Assistant, and Smart Food Locator.

4.4 Door Alarm

The appliance is equipped with a door alarm that will sound if the refrigerator door is left open for an extended period. This feature helps to maintain optimal internal temperatures and conserve energy.

5. MAINTENANCE

5.1 Cleaning

Regularly clean the interior and exterior of your fridge freezer. Use a soft cloth and a mild, non-abrasive detergent. For the interior, a solution of baking soda and water is recommended. Ensure the appliance is unplugged before cleaning.

5.2 Defrosting

This appliance features a manual defrost system for the freezer. While Low Frost technology reduces ice build-up, occasional manual defrosting will be necessary to maintain efficiency. When the ice layer reaches approximately 3-5 mm thickness, defrost the freezer. Remove all food, unplug the appliance, and allow the ice to melt naturally. Clean and dry the interior before restarting.

6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Appliance does not operate.	No power supply; plug not inserted correctly.	Check power plug and wall socket.
Temperature is not cold enough.	Door not closed properly; excessive food load; temperature setting too high.	Ensure door is sealed; reduce food load; adjust temperature setting lower.
Excessive noise.	Appliance not level; contact with wall/furniture.	Adjust leveling feet; ensure adequate clearance.
Door alarm sounds frequently.	Door left ajar; door seal damaged.	Ensure door is fully closed; inspect and clean door seal.

7. SPECIFICATIONS

Key technical specifications for the CANDY CCT3L517EWK-1 Low Frost 50/50 Fridge Freezer:


Feature Spec	ification
--------------	-----------

Feature	Specification
Brand	CANDY
Model	CCT3L517EWK
Product Dimensions (D x W x H)	55 x 54.5 x 176 cm
Item Weight	52 kg
Total Capacity	252 litres
Cooling Capacity (Fridge)	101 litres
Freezer Capacity	151 litres
Annual Energy Consumption	218 Kilowatt Hours Per Year
Energy Efficiency Rating	E
Installation Type	Freestanding
Defrost System	Manual
Door Orientation	Reversible
Number of Shelves	2 (Glass)
Number of Drawers	1
Voltage	230 Volts
Colour	White



Candy

CCT3L517EWK-1

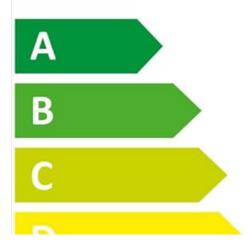

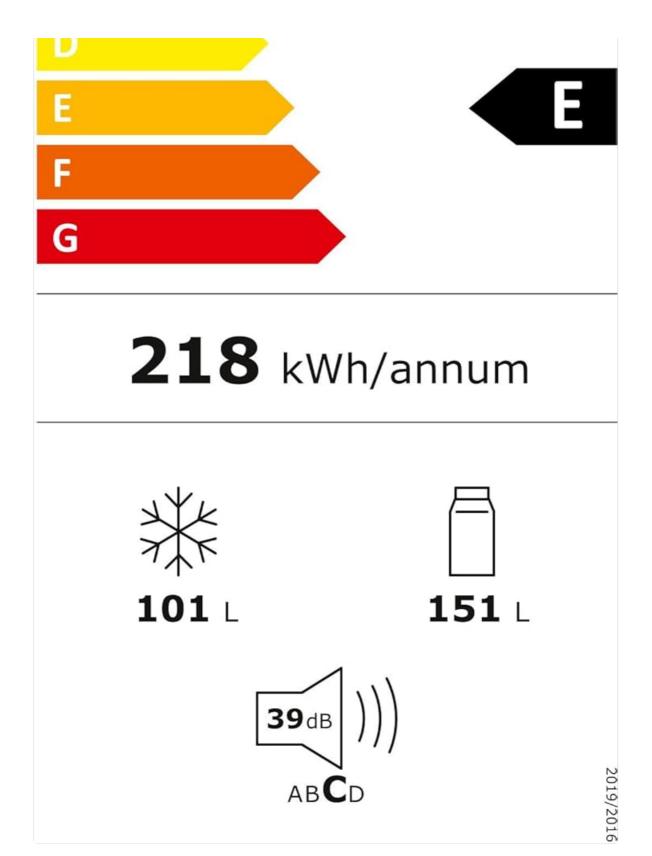


Image 7.1: Energy Label for Model CCT3L517EWK-1. This label indicates the appliance's energy efficiency class (E) and annual energy consumption.

For more detailed product information, refer to the EPREL database: https://eprel.ec.europa.eu/qr/1815883

8. WARRANTY AND SUPPORT

8.1 Warranty

This CANDY appliance comes with a manufacturer's guarantee of 24 months from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal household use.

8.2 Customer Support

For technical assistance, spare parts, or warranty claims, please contact Candy Hoover Group customer service:

• Manufacturer: Haier Europe

• Contact Name: Candy Hoover Group contact

• Email: eprel_info@haier-europe.com

• Phone: +3903920861

• Website: https://corporate.haier-europe.com/en/

• Address: Via Comolli 16, 20861 Brugherio MB, Italy

You can also find additional support and connected features through thehOn App.

© 2025 CANDY. All rights reserved.

Related Documents - CCT3L517EWK



Candy Refrigerator User Manual: Features, Operation, and Troubleshooting

Comprehensive user manual for Candy refrigerators, detailing product description, usage, temperature settings, special functions like Super Cool and Eco mode, app connectivity, and troubleshooting tips.



Candy Fridge-Freezer User Manual

Comprehensive user manual for Candy Fridge-Freezer, covering safety, installation, operation, food storage, maintenance, and troubleshooting. Available in multiple languages.



Candy Refrigerator-Freezer User Manual

Comprehensive user manual for Candy Refrigerator-Freezer models, covering installation, operation, safety, maintenance, troubleshooting, and technical specifications.



Manual de Instrucciones Candy Simply-Fi: Frigorífico y Congelador

Manual completo de usuario para frigoríficos y congeladores Candy con tecnología Smart Touch y conectividad Wi-Fi. Incluye información de seguridad, instalación, funcionamiento, mantenimiento, solución de problemas y ahorro energético.

ome



Candy Refrigerator-Freezer User Manual (CNCQ2T620 Series, CNCQ2T618 Series)

This user manual provides comprehensive instructions for Candy refrigerator-freezer models CNCQ2T620EX, CNCQ2T620EW, CNCQ2T620EB, CNCQ2T620DX, CNCQ2T620DW, CNCQ2T618EX, CNCQ2T618EW, and CNCQ2T618EB. It includes safety information, installation guides, operating instructions, care and cleaning tips, troubleshooting, and technical specifications.



Candy BCBS 172 TK Built-in Freezer-Fridge User Manual

Comprehensive user manual for the Candy BCBS 172 TK built-in freezer-fridge, covering safety instructions, appliance description, usage, food storage, cleaning, maintenance, and energy saving tips.

