

[Manuals.plus](#) /

› [Farberware](#) /

› Farberware Compact Countertop Dishwasher FCD06SDWHT User Manual

Farberware FCD06SDWHT

Farberware Compact Countertop Dishwasher

MODEL: FCD06SDWHT

Introduction

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Farberware Compact Countertop Dishwasher, Model FCD06SDWHT. Please read all instructions carefully before using the appliance and retain this manual for future reference.

Important Safety Instructions

To reduce the risk of fire, electric shock, or injury, observe the following precautions:

- Read all instructions before using the dishwasher.
- Use this appliance only for its intended purpose.
- Do not operate the dishwasher if it has a damaged power cord or plug, or if it is not working properly.
- Keep children away from detergents and rinse aid.
- Ensure the dishwasher is properly grounded.
- Do not tamper with controls.
- Always disconnect the appliance from the power supply before cleaning or performing maintenance.

Product Overview


The Farberware Compact Countertop Dishwasher is designed for small living spaces, offering convenience and efficient dish cleaning. It accommodates up to six place settings and dishes up to 10 inches in diameter.



Image: Front view of the Farberware Compact Countertop Dishwasher, showing both the closed unit and the interior with dishes loaded.

Key Components:

- **Dish Rack:** Designed to hold plates, bowls, and glasses. Features folding-down shelves for larger items.
- **Cutlery Basket:** For forks, spoons, and knives.
- **Detergent Dispenser:** Located on the inner door for dishwashing detergent.
- **Rinse Aid Dispenser:** Located on the inner door for rinse aid.
- **Control Panel:** Features an LED display and touch controls for program selection and operation.
- **Water Inlet/Outlet Hoses:** For connecting to a water source and drainage.

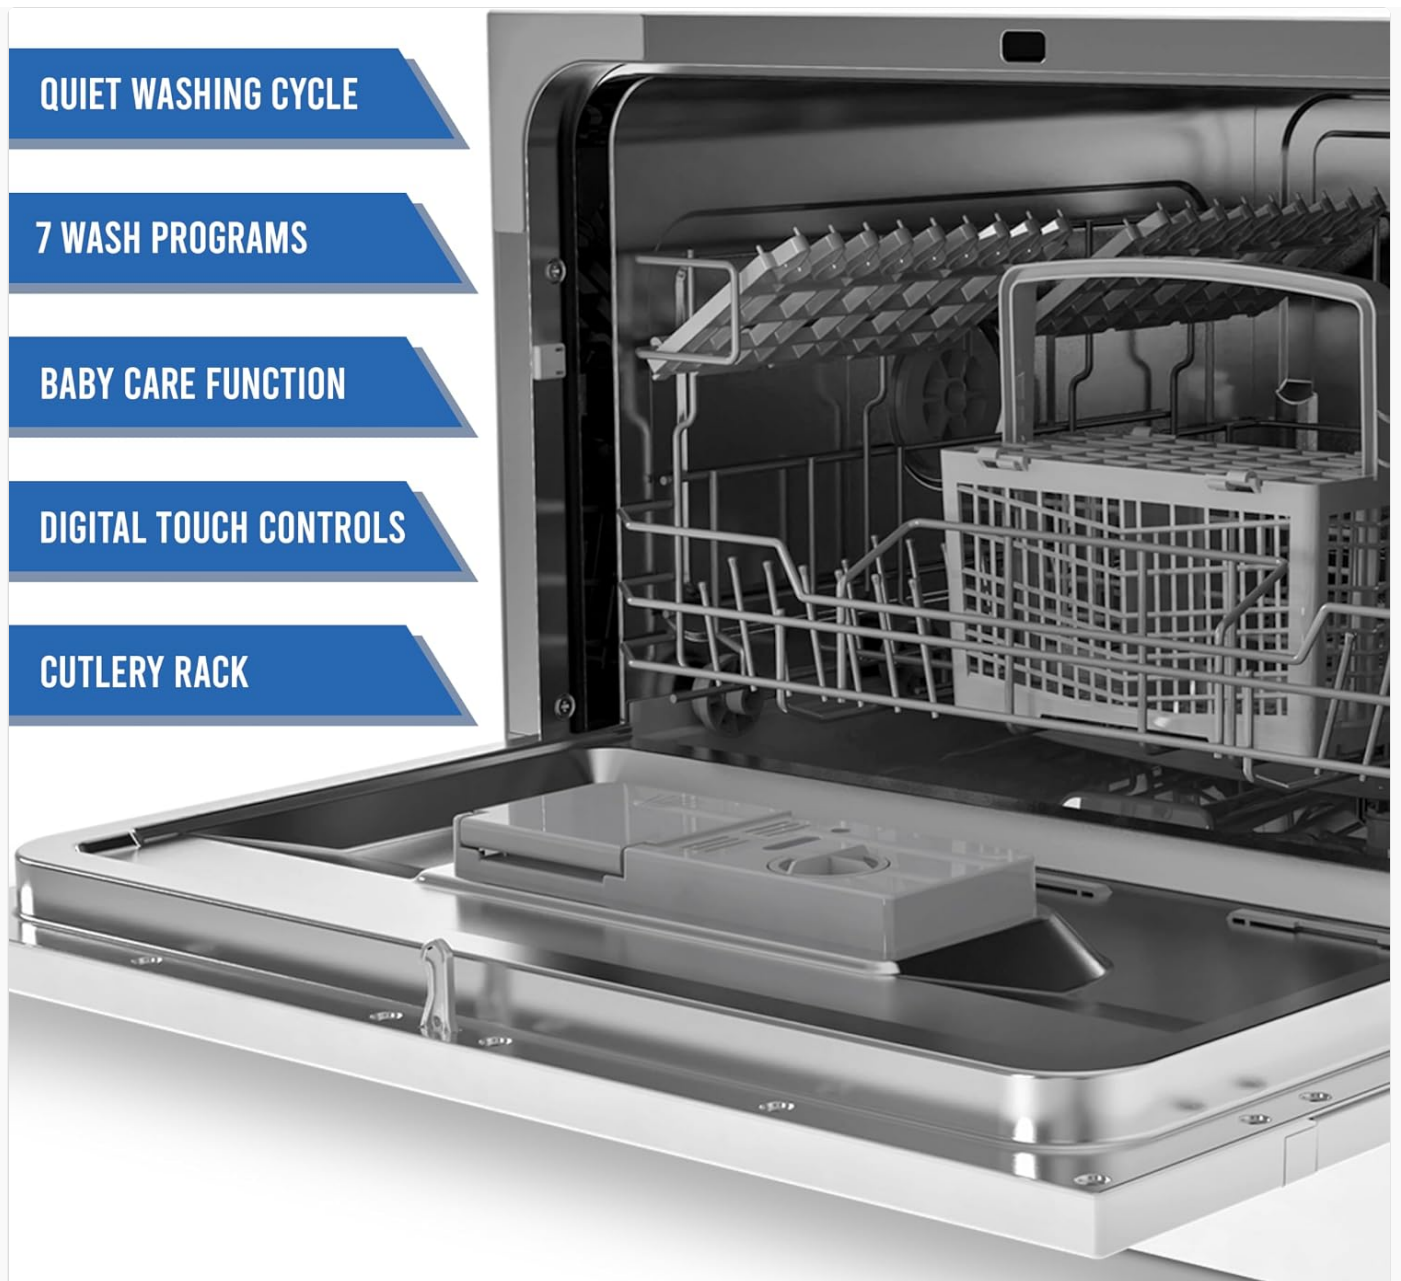

QUIET WASHING CYCLE

7 WASH PROGRAMS

BABY CARE FUNCTION

DIGITAL TOUCH CONTROLS

CUTLERY RACK

Image: Interior view of the dishwasher, highlighting the dish rack, cutlery basket, and internal features.

Setup and Installation

1. Placement

Place the dishwasher on a stable, level countertop near a sink and an electrical outlet. Ensure there is adequate space around the unit for ventilation and door opening.

COMPACT AND CONVENIENT



Image: Diagram illustrating the dimensions of the compact countertop dishwasher (21.7"D x 19.7"W x 17.2"H).

2. Water Connection

The dishwasher includes a quick-connect assembly for direct connection to your sink faucet. An adapter is provided for standard faucets. For alternative installations, such as a permanent connection to a hot water line, consult a qualified plumber.

- **Faucet Connection:** Attach the inlet hose to the faucet adapter. Ensure a tight seal to prevent leaks.
- **Permanent Connection (Optional):** If connecting directly to a hot water line, ensure proper fittings and use Teflon tape to prevent leaks. Connecting to the hot water line is recommended for optimal performance.

3. Drainage

The drainage hose can be placed directly into the sink or connected to a drain pipe under the sink. Ensure the hose is securely positioned to prevent dislodgement during operation.

4. Power Connection

Plug the dishwasher into a grounded electrical outlet. Verify that the voltage matches the appliance requirements.

5. Initial Use

Before the first wash cycle, run an empty cycle with a small amount of detergent to flush out any manufacturing residues.

Operating Instructions

1. Loading Dishes

Arrange dishes to allow water spray to reach all surfaces. Avoid overcrowding. Place larger items and pots on the bottom rack, facing the spray arm. Use the cutlery basket for silverware, ensuring handles are down for forks and spoons, and up for knives for safety.

2. Adding Detergent and Rinse Aid

- **Detergent:** Open the detergent dispenser and add the recommended amount of dishwashing detergent. Close the dispenser lid securely.
- **Rinse Aid:** Fill the rinse aid dispenser with liquid rinse aid. Adjust the dosage setting as needed; a higher setting provides more shine and faster drying.

3. Selecting a Wash Program

The dishwasher offers seven wash programs:

- **Heavy:** For heavily soiled dishes, pots, and pans.
- **Normal:** Standard program for everyday soiled dishes.
- **Eco:** Energy-efficient program for normally soiled dishes.
- **Baby Care:** For sanitizing baby bottles and dishes.
- **Glass:** Gentle wash for delicate glassware.
- **Speed:** Quick wash for lightly soiled dishes without drying.
- **Rinse:** Pre-rinse cycle for dishes that will be washed later.

Use the control panel to select the desired program.

4. Extra-Drying Function

This function adds extra heat to the final rinse to improve drying results. It is available for Heavy, Normal, Eco, Baby Care, and Glass cycles. Activate this option via the control panel if desired.

5. Starting a Cycle

Close the dishwasher door firmly. Press the Start button to begin the selected wash cycle. The LED display will show the remaining cycle time.

Maintenance

1. Cleaning Filters

Regularly clean the filter system located at the bottom of the dishwasher tub. Remove food particles and rinse the filters under running water. Clogged filters can affect washing performance.

2. Cleaning the Interior and Exterior

- **Interior:** Wipe down the interior with a damp cloth after each use. Periodically run a dishwasher cleaner to prevent buildup.
- **Exterior:** Clean the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.

3. Winterization (for RVs/Boats)

If the dishwasher will be stored in an unheated area, drain all water from the unit and hoses to prevent freezing and damage. Consult the full user manual for detailed winterization procedures.

Troubleshooting

Refer to the following table for common issues and their solutions:

Problem	Possible Cause	Solution
Dishes not clean	Improper loading, clogged filters, insufficient detergent, incorrect program.	Reload dishes correctly, clean filters, add more detergent, select appropriate wash program.
Water leaks	Loose hose connections, improper seal at faucet, excessive suds.	Check and tighten all hose connections, ensure faucet adapter is secure, use correct detergent amount.
Dishwasher not starting	Power supply issue, door not closed properly, control panel error.	Check power connection, ensure door is latched, consult full manual for error codes.
Dishes not drying	No rinse aid, extra-drying function not selected, improper loading.	Refill rinse aid dispenser, activate extra-drying, ensure dishes are loaded to allow drainage.

For more detailed troubleshooting, refer to the complete user manual or contact customer support.

Specifications

Feature	Detail
Brand	Farberware
Model Number	FCD06SDWHT
Form Factor	Countertop
Dimensions (D x W x H)	21.7 x 19.7 x 17.2 inches
Item Weight	52.9 pounds
Capacity	6 Place Settings
Wash Programs	7 (Heavy, Normal, Eco, Baby Care, Glass, Speed, Rinse)
Voltage	680 Volts
Annual Energy Consumption	680 Watts
Material	Stainless Steel
Display Type	LED
Controls Type	Touch
UPC	815658025158

Warranty and Support

This Farberware appliance is covered by a limited warranty. For specific warranty details, registration, or technical support, please refer to the warranty card included with your product or visit the official Farberware website. Keep your purchase receipt as proof of purchase.

© 2024 Farberware. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question