

T10M Pro+

Vortex T10M Pro+ Tablet User Manual

Model: T10M Pro+

1. INTRODUCTION

Thank you for choosing the Vortex T10M Pro+ Tablet. This manual will guide you through the features and functions of your new device, ensuring a smooth and enjoyable user experience. Please read this manual carefully before using your tablet.

What's in the Box

Upon unboxing your Vortex T10M Pro+ Tablet, please verify that all the following items are present:

- Vortex T10M Pro+ Tablet
- Charger
- Screen Protector



Image: Contents of the Vortex T10M Pro+ Tablet box. This includes the tablet, a clear protective case, the power adapter, and a screen protector, all neatly arranged on a wooden surface.

2. PRODUCT OVERVIEW

Familiarize yourself with the physical components and key features of your Vortex T10M Pro+ Tablet.



Image: Rear view of the Vortex T10M Pro+ Tablet. The tablet has a sleek, dark finish with the 'Vortex' logo subtly placed at the bottom. The camera module is visible in the upper left corner.



Image: Detailed view of the back of the Vortex T10M Pro+ Tablet, highlighting its specifications. Printed details include '10.1-inch Brilliant Display', '5MP Front Camera', '8MP Rear Camera', 'MTK6766 Processor', 'Quad-Core, 4GB+64GB', '5000mAh Mega Battery', and 'Android 12'.

3. SETUP

3.1. Charging the Device

Before first use, fully charge your tablet. Connect the provided charger to the tablet's charging port and plug it into a power outlet. The battery indicator on the screen will show charging progress.

3.2. Inserting SIM/MicroSD Card

The Vortex T10M Pro+ supports 4G LTE connectivity and expandable storage. To insert a SIM card (for mobile data) or a microSD card (for additional storage):

1. Locate the SIM/microSD card tray on the side of the tablet.
2. Use the provided SIM ejector tool to open the tray.
3. Carefully place the SIM card(s) and/or microSD card into the designated slots, ensuring correct orientation.
4. Gently push the tray back into the tablet until it clicks into place.

3.3. Initial Power On

Press and hold the Power button located on the side of the tablet until the Vortex logo appears. Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, and Google account setup.

4. OPERATING INSTRUCTIONS

4.1. Basic Navigation

Your tablet runs on Android 13.0. Use touch gestures for navigation:

- **Tap:** Select an item or open an app.
- **Swipe:** Scroll through screens or lists.
- **Pinch-to-zoom:** Zoom in or out on photos and web pages.
- **Long press:** Access contextual menus or move icons.

4.2. Connecting to Wi-Fi

To connect to a Wi-Fi network:

1. Go to *Settings > Network & internet > Internet*.
2. Turn on Wi-Fi.
3. Select your desired network from the list and enter the password if prompted.

4.3. Using Mobile Data (4G LTE)

If you have inserted a valid SIM card with an active data plan:

1. Go to *Settings > Network & internet > SIMs*.
2. Ensure Mobile data is enabled for your SIM.

4.4. Camera Operation

The tablet features an 8MP rear camera and a 5MP front camera.

1. Open the Camera app.
2. Tap the shutter button to take a photo.

3. Switch between front and rear cameras using the camera toggle icon.

4.5. Managing Storage

Your tablet comes with 64GB of internal storage. You can expand this using a microSD card up to 128GB. To view storage usage, go to *Settings > Storage*.

5. MAINTENANCE

5.1. Cleaning

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials.

5.2. Software Updates

Periodically check for software updates to ensure your tablet has the latest features and security patches. Go to *Settings > System > System update*.

5.3. Battery Care

To prolong battery life:

- Avoid extreme temperatures.
- Do not let the battery fully discharge frequently.
- Unplug the charger once the battery is full.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your tablet.

Issue	Possible Solution
Tablet does not power on	Ensure the battery is charged. Press and hold the Power button for at least 10-15 seconds to force a restart.
Wi-Fi connection issues	Restart the tablet and your Wi-Fi router. Forget the network in settings and reconnect.
Apps are slow or crashing	Close background apps. Clear app cache (Settings > Apps > [App Name] > Storage > Clear cache). Restart the tablet.
Storage full message	Delete unnecessary files or apps. Move media to a microSD card.

7. SPECIFICATIONS

Detailed technical specifications for the Vortex T10M Pro+ Tablet.


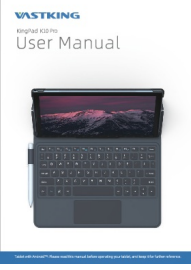
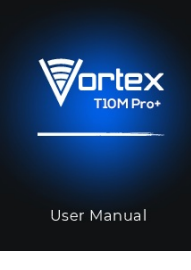

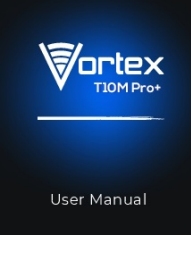
Feature	Specification
Model Name	T10M Pro+ Tablet (Unlocked) Blue 10.1" 64GB 4GB GSM 4G LTE + Wifi 8MP
Display Size	10.1 Inches
Max Screen Resolution	1280 x 800 Pixels
Refresh Rate	120 Hz
Processor	MediaTek, 2 GHz
RAM	4 GB
Internal Storage	64 GB
Expandable Storage	MicroSD (up to 128GB)
Operating System	Android 13.0
Rear Camera	8 MP
Front Camera	5 MP
Connectivity	4G LTE, Wi-Fi, Bluetooth, GPS
Battery Type	Lithium-Ion
Average Battery Life	18 Hours
Product Dimensions	10.1 x 5 x 3 inches
Color	Black

8. WARRANTY INFORMATION

This product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase or visit the manufacturer's official website for detailed terms and conditions regarding warranty coverage, duration, and claims process.

9. SUPPORT

For further assistance, technical support, or service inquiries, please contact the manufacturer's customer support. Contact information can typically be found on the product packaging, the manufacturer's website, or the warranty documentation.

 <p>Vortex</p> <p>T10M</p> <p>Thanks for choosing Vortex products</p> <p>www.vortexcellular.com</p>	<p>Vortex T10M Tablet User Manual and Specifications</p> <p>Comprehensive user manual and technical specifications for the Vortex T10M tablet, covering setup, features, network connectivity, camera, security, and regulatory information.</p>
 <p>VASTKING</p> <p>KingPad K10 Pro</p> <p>User Manual</p>	<p>Vastking KingPad K10 Pro User Manual</p> <p>Comprehensive user manual for the Vastking KingPad K10 Pro tablet, covering setup, features, and settings. Learn how to power on/off, take screenshots, manage home screen settings, Wi-Fi, Bluetooth, and app management.</p>
 <p>Vortex</p> <p>T10M Pro+</p> <p>User Manual</p>	<p>Vortex T10M Pro+ User Manual - Features, Specifications, and Safety Information</p> <p>Comprehensive user manual for the Vortex T10M Pro+ tablet, covering hardware features, SIM and storage card management, network connectivity (Wi-Fi, Bluetooth), camera usage, security information, detailed specifications, and safety compliance statements.</p>
 <p>Vortex</p> <p>T10M PRO</p> <p>User Manual</p>	<p>Vortex T10M PRO Tablet User Manual - Features, Specifications, and Safety</p> <p>Comprehensive user manual for the Vortex T10M PRO tablet, covering hardware features, setup, network connectivity, camera usage, security information, technical specifications, and safety guidelines.</p>
 <p>Vortex</p> <p>T10M Pro+</p> <p>User Manual</p>	<p>Vortex T10M Pro+ User Manual</p> <p>Comprehensive user manual for the Vortex T10M Pro+ tablet, covering device overview, setup, network connections, camera usage, specifications, and important safety information.</p>

USER MANUAL
Dragon Touch NotePad T10M Tablet PC

DRAGONTouch

[Dragon Touch NotePad T10M Tablet PC User Manual](#)

Comprehensive user manual for the Dragon Touch NotePad T10M Tablet PC. Learn about features, setup, connectivity, applications, and troubleshooting.