Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Cuifati /
- > Cuifati YKR H 531E Remote Control User Manual

Cuifati YKR H 531E

Cuifati YKR H 531E Remote Control User Manual

Model: YKR H 531E

INTRODUCTION

Thank you for choosing the Cuifati YKR H 531E Replacement Remote Control. This remote is designed to provide seamless and convenient control for your AUX YKR P 001E and YKR P 002E air conditioning units. It offers a direct replacement for your original remote, ensuring full functionality without complex setup procedures. Made from premium ABS material, it is durable, comfortable to hold, and provides sensitive control within its effective range.

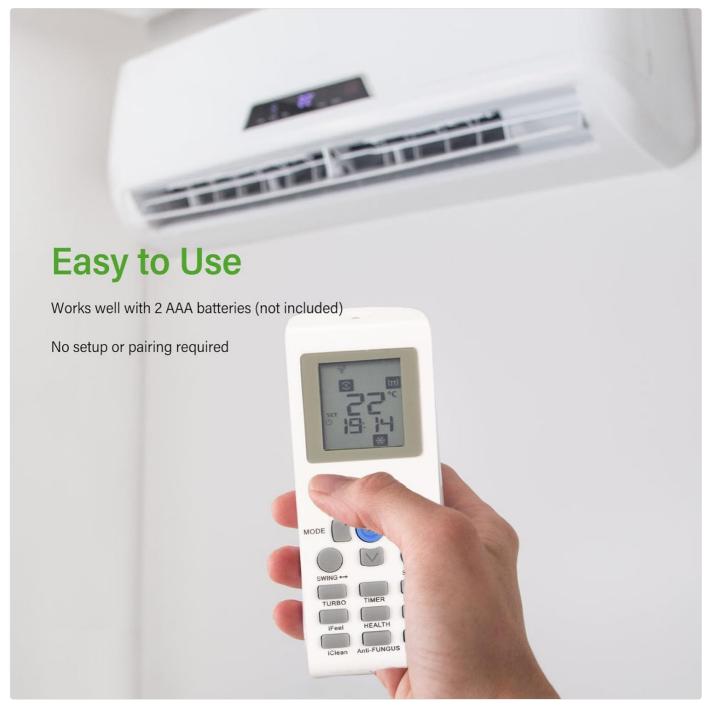


Image: The Cuifati YKR H 531E remote control, highlighting its compatibility as a perfect replacement for AUX YKR P 001E and YKR P 002E air conditioners.

SETUP

The Cuifati YKR H 531E remote control is designed for immediate use with compatible AUX air conditioning units. No complex programming or pairing is required.

Battery Installation

- 1. Locate the battery compartment on the back of the remote control.
- 2. Slide open the battery compartment cover.
- 3. Insert two (2) AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
- 4. Close the battery compartment cover securely.

Once batteries are installed, the remote is ready to operate your air conditioner.



Image: The remote control displaying text "Easy to Use" and "Works well with 2 AAA batteries (not included)", illustrating the simplicity of battery installation and immediate functionality.

OPERATING INSTRUCTIONS

The remote control features a clear display and intuitively placed buttons for easy operation of your air conditioner's functions.

Button Functions Overview

Button	Function	
Power Button (Blue)	Turns the air conditioner ON or OFF.	
MODE	Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).	

Button	Function			
▲ / ▼ (Temperature Up/Down)	Adjusts the desired temperature setting.			
SPEED	Adjusts the fan speed (e.g., Low, Medium, High, Auto).			
SWING ↔	Controls horizontal louver swing.			
SWING ↑	Controls vertical louver swing.			
TURBO	Activates rapid cooling or heating for quick temperature changes.			
TIMER	Sets the timer for automatic ON/OFF operation.			
iFeel	Activates the "I Feel" function, which senses the temperature at the remote's location for more precise comfort.			
HEALTH	Activates health-related functions (e.g., air purification, ionizer, if available on AC unit).			
iClean	Initiates the self-cleaning function of the air conditioner (if supported by AC unit).			
Anti-FUNGUS	Activates the anti-fungus function to prevent mold growth in the AC unit (if supported by AC unit).			
DISPLAY	Toggles the display on the air conditioner unit ON or OFF.			
iFavor	Recalls a favorite preset operating mode and settings.			
SLEEP	Activates the sleep mode, which adjusts temperature and fan speed for comfortable sleep.			

Using the Remote

- Point the remote control directly at the infrared receiver on your air conditioning unit.
- Ensure there are no obstructions between the remote and the AC unit.
- The clear display on the remote will show the current settings and operating status of the air conditioner.



Image: A hand holding the remote control, pointing it towards a wall-mounted air conditioning unit, demonstrating typical usage.



Image: A hand holding the remote control, pointing it towards a ceiling-mounted air conditioning unit, showing its versatility.



Image: A hand holding the remote control in a room with a wall-mounted air conditioning unit, illustrating the remote's clear display and ease of use in a home environment.

MAINTENANCE

Cleaning the Remote

- Wipe the surface of the remote control with a soft, dry cloth.
- Do not use liquid cleaners, abrasive cleaners, or chemical sprays, as these may damage the remote's surface or internal components.

Battery Replacement

- If the remote control's range decreases significantly or the display becomes dim, it is time to replace the batteries.
- Follow the battery installation steps outlined in the "Setup" section.
- Always replace both AAA batteries at the same time with new ones.

• Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution	
Remote control not working.	Dead or incorrectly installed batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.	
Remote control range is poor.	Low batteries; Obstruction between remote and AC unit; Remote not pointed directly at AC unit.	Replace batteries; Remove any obstructions; Point the remote directly at the AC unit's receiver.	
' AC model: Remote malfunction.		Verify if your AC unit supports the specific function. If other buttons work, the remote might be faulty (unlikely for new remotes).	

SPECIFICATIONS

• Item Type: Air Conditioner Remote Control

• Material: ABS

• Remote Control Model: YKR H 531E

• Compatible AC Models: AUX YKR P 001E, AUX YKR P 002E

• Power Source: 2 x AAA Batteries (not included)

• Connector Type: Infrared

• Special Features: Durable, Clear Display, Sensitive Control

• **Dimensions:** Approximately 15.3 x 10.7 x 3.1 cm (6.0 x 4.2 x 1.2 inches)

• Weight: Approximately 70 g (2.5 oz)

• Manufacturer Model Number: CUIFATI0phwebmcnx

WARRANTY AND SUPPORT

For any questions regarding product warranty, returns, or technical support, please contact the seller or manufacturer directly through the platform where the product was purchased. Please refer to your purchase documentation for specific warranty terms and conditions.

This product is designed for reliable performance and is a direct replacement for the specified AUX air conditioner remote controls. Should you encounter any issues not covered in this manual, please reach out to customer service for assistance.

© 2024 Cuifati. All rights reserved.

Related Documents - YKR H 531E



Comfort Time Split Type Wall Mounted Air Conditioner Owner's Manual

Comprehensive owner's manual for Comfort Time split-type wall-mounted air conditioners, covering R32 refrigerant safety, installation, operation, maintenance, cleaning, troubleshooting, and electrical requirements. Essential guide for safe and efficient use.



Air Conditioner Operation, Installation, and Maintenance Manual

Comprehensive guide for the safe operation, installation, maintenance, and troubleshooting of R32 refrigerant air conditioners, including safety precautions, wiring diagrams, and remote control and WiFi instructions.



Manual de Instalación y Operación del Aire Acondicionado Yitahome

Guía completa para la instalación, operación, mantenimiento y solución de problemas de los aires acondicionados Yitahome, con énfasis en la seguridad y el uso eficiente del refrigerante R32.



AUX Split Type Wall Mounted Air Conditioner Owner's Manual

Comprehensive owner's manual for AUX split type wall-mounted air conditioners, covering operation, maintenance, installation, safety precautions, and troubleshooting. Includes detailed instructions, important warnings, and model-specific information.



Air Conditioner Remote Controller Instructions

This document provides instructions for operating an air conditioner remote controller, detailing button functions, operation modes, and important usage notes.



Air Conditioner Remote Controller Instructions

Comprehensive instructions for operating an AUX air conditioner remote controller, covering button functions, modes, and usage tips.