Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- WAVE /
- > Wave Aegean 6-Person Inflatable Hot Tub User Manual

WAVE AEG6NAVYUS

Wave Aegean 6-Person Inflatable Hot Tub User Manual

Model: AEG6NAVYUS

1. Introduction

Thank you for choosing the Wave Aegean 6-Person Inflatable Hot Tub. This manual provides essential information for the safe and efficient setup, operation, and maintenance of your hot tub. Please read all instructions carefully before installation and use to ensure proper function and longevity of your product.



Image 1.1: The Wave Aegean 6-Person Inflatable Hot Tub in its assembled state.

2. SAFETY INFORMATION

Always adhere to the following safety guidelines to prevent injury or damage:

- Do not permit children to use the hot tub without adult supervision.
- Pregnant women, individuals with heart disease, high blood pressure, diabetes, or other health conditions should consult a physician before using the hot tub.
- · Avoid using the hot tub immediately after strenuous exercise.

- The water temperature should not exceed 104°F (40°C). A temperature between 100°F (38°C) and 102°F (39°C) is generally recommended.
- Do not operate the hot tub if it is damaged or malfunctioning.
- Ensure the electrical supply meets the product specifications and is protected by a Residual Current Device (RCD).
- Never add water to chemicals; always add chemicals to water to avoid strong fumes or violent reactions.

3. COMPONENTS CHECKLIST

Before beginning setup, verify that all components are present:

- Inflatable Hot Tub Liner
- Integrated Heater/Pump Unit
- Top Cover with Safety Clips
- Inflation Hose
- Filter Cartridges (2x)
- Filter Covers (2x)
- · Repair Kit
- · Air Valve Cap
- Storage Bag



Image 3.1: Included accessories such as filters, inflation hose, repair kit, and air valve cap, alongside the wired controller.

4. SETUP INSTRUCTIONS

The Wave Aegean hot tub is designed for a quick setup, typically within 15 minutes.

4.1 Site Selection

Choose a flat, level surface capable of supporting the weight of the hot tub filled with water and occupants (approximately 240 gallons + 6 people). Ensure the area is free from sharp objects and has access to a suitable electrical outlet with RCD protection.

4.2 Inflation

- 1. Unfold the hot tub liner on the selected site.
- 2. Connect the inflation hose to the hot tub's air valve and the integrated pump unit.
- 3. Plug in the pump unit and activate the inflation function. Inflate until the hot tub walls are firm to the touch, but not over-inflated.

4. Disconnect the inflation hose and securely close the air valve cap.	
4.3 Filling with Water	
Fill the hot tub with fresh water using a garden hose. Fill to the recommended water level indicated on the inside of the hot tub liner.	
4.4 Filter Installation	
Install the two filter cartridges into their respective housings inside the hot tub, ensuring they are securely threaded. Place the filter covers over them.	



Image 4.1: Visual representation of key features including 15-minute tool-free setup, 600W bubble blower, 1350W integrated heater, and 15' waterproof cable with RCD plug.

5. OPERATING INSTRUCTIONS

The integrated control unit manages all hot tub functions.

5.1 Control Panel Functions

The wired controller allows easy management of spa settings:

- **Heater Button:** Activates the 1350W integrated heater to warm the water up to 104°F (40°C).
- Bubble Button: Engages the 130 Aquajet massage system (600W bubble blower).
- Filter Button: Activates the clean performance filtration system.
- Temperature Adjustment: Use the Up/Down arrows to set your desired water temperature.
- Timer Button: Set the integrated timer for heating cycles.
- Lock Button: Locks the control panel to prevent accidental changes.

5.2 Anti-Freeze Protection

The hot tub features an anti-freeze protection system. When the ambient temperature drops below a certain threshold, the heater will automatically activate to prevent water from freezing, protecting the internal components. Ensure the hot tub remains plugged in during cold weather conditions.

6. MAINTENANCE

Regular maintenance is crucial for the performance and longevity of your hot tub.

6.1 Filtration System

The integrated filtration system uses replaceable threaded filters to keep your water clean. Check and clean the filter cartridges regularly (daily or every other day depending on usage) by rinsing them with a garden hose. Replace filters every 1-2 weeks or when they appear worn or discolored.

6.2 Water Treatment

Maintain proper water chemistry using appropriate hot tub chemicals (e.g., sanitizers, pH adjusters). Test the water regularly and adjust chemical levels as needed to ensure safe and clean water.

6.3 Draining and Cleaning

Drain the hot tub completely every 1-3 months, depending on usage. Clean the interior surface with a soft cloth and mild, non-abrasive cleaner. Rinse thoroughly before refilling.

7. TROUBLESHOOTING

This section addresses common issues you might encounter.

7.1 Hot Tub Not Heating

- Ensure the heater button is activated on the control panel.
- Check that the desired temperature is set higher than the current water temperature.
- Verify that the power supply is stable and the RCD has not tripped.
- Ensure filter cartridges are clean and not obstructing water flow.

7.2 Water Leaking

- Inspect all connections between the hot tub liner and the pump unit for tightness.
- Check the hot tub liner for any visible punctures or damage. Use the provided repair kit for minor leaks.
- Ensure the air valve cap is securely closed.

7.3 Frror Codes

If an error code appears on the control panel (e.g., 'HL' for high limit), consult the specific error code section in the full manual or contact customer support for assistance.

8. SPECIFICATIONS

Feature	Specification
Brand	WAVE
Model Name	AEG6NAVYUS
Color	Aegean Navy
Product Dimensions	77"L x 77"W x 25.6"H
Material	Polyvinyl Chloride (PVC)
Shape	Rectangular (Octagonal)
Capacity	240 Gallons
Seating Capacity	6 Persons
Number of Jets	130 Aquajets
Heater Power	1350W (up to 104°F)
Bubble Blower Power	600W
Assembly Required	No (Tool-free setup)

9. WARRANTY AND SUPPORT

Your Wave Aegean Hot Tub is covered by a manufacturer's warranty. For detailed information regarding warranty terms, conditions, and duration, please refer to the warranty card included with your product or visit the official WAVE website. For technical support, troubleshooting assistance, or to order replacement parts, please contact WAVE customer service through their official channels.

Related Documents - AEG6NAVYUS



Wave Inflatable Spa User Manual (UK)

 
Comprehensive user manual for the Wave Inflatable Spa (UK), covering safety instructions, installation, operation, maintenance, troubleshooting, and warranty information.





Wave Eco Inflatable Spa User Manual: Setup, Operation, and Maintenance

Comprehensive user manual for the Wave Eco Inflatable Spa, covering setup, operation, maintenance, safety, troubleshooting, and warranty. Includes detailed instructions and specifications for various models.

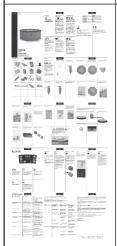

Wave Como 4-6 Person Spa Installation Manual & Guide

Comprehensive installation manual and guide for the Wave Como 4-6 Person Inflatable Spa. Learn how to set up, operate, maintain, and troubleshoot your hot tub.



Wave Eco Foam Spa User Manual: Setup, Operation, and Safety Guide

Your essential guide to the Wave Eco Foam Spa. Learn how to safely set up, operate, maintain, and troubleshoot your spa. Includes details on models like Garda, Tahoe, and Como, with warranty information.



Wave Swift Spa Installation and User Manual

Comprehensive installation and user manual for the Wave Swift Spa, providing detailed instructions on setup, operation, maintenance, safety guidelines, and troubleshooting for this 6-person hot tub.



Wave Inflatable Spa User Manual (UK) - Setup, Operation, and Maintenance Guide

Comprehensive user manual for the Wave Inflatable Spa (UK). Covers safety instructions, setup, operation, water maintenance, troubleshooting, and warranty information for your Wave inflatable hot tub.