

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Ninja](#) /

› Ninja CREAMi Deluxe Ice Cream and Frozen Dessert Maker User Manual

Ninja NC501EU

Ninja CREAMi Deluxe Ice Cream & Frozen Dessert Maker

Model: NC501EU

User Manual

1. IMPORTANT SAFEGUARDS

Please read all instructions carefully before using your Ninja CREAMi Deluxe. Failure to follow these instructions may result in property damage, personal injury, or death.

- Always ensure the unit is properly assembled before operation.
- Do not immerse the motor base in water or other liquids.
- Keep hands and utensils out of the container while processing to reduce the risk of severe injury to persons or damage to the appliance.
- Ensure the lid is securely locked before operating.
- Do not operate any appliance with a damaged cord or plug.
- Close supervision is necessary when any appliance is used by or near children.
- Always unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning.

2. PRODUCT OVERVIEW

The Ninja CREAMi Deluxe is designed to transform frozen solid bases into ice cream, sorbets, milkshakes, and more. It features advanced Creamify Technology for perfectly smooth results.

Components Included:

- Motor Base with Dual-Drive Engine
- Deluxe Creamerizer Paddle

- 3 x 709 ml Deluxe CREAMi Pints with Storage Lids
- Outer Bowl with Lid
- Recipe Inspiration Guide





The Ninja CREAMi Deluxe, ready for use.

NINJA[®]

CREAMi

DELUXE

COMPREND

- 3 pots Creami avec couvercles
- Base motorisée
- Bol externe et son couvercle
- Pale de brassage Creamify, en acier inoxydable
- Livret de recettes



Included components: Motorized Base, Creami Pints with lids, Outer Bowl, and Creamify Paddle.

Key Features:

- **10 One-Touch Programs:** Ice Cream, Sorbet, Lite Ice Cream, Gelato, Milkshake, Mix-in, Frappe, Frozen Drink, Slushi, and Frozen Yogurt.

- **50% More Capacity:** Deluxe Pints hold 50% more than original CREAMi pints, allowing for larger batches.
- **Two Flavors in One:** Utilize the 'TOP' and 'BOTTOM' settings to create two different flavor combinations in a single Deluxe Pint.
- **Creamify Advanced Technology:** Finely shaves and transforms frozen particles into creamy, smooth frozen treats.
- **Dishwasher-Safe Parts:** Removable parts (outer bowl, lid, paddle) are top-rack dishwasher safe for easy cleaning.

Inclus 3 pots Creami **Deluxe** de 709 ml



**50 % de crème
glacée en plus***

(par rapport à la Ninja® CREAMi originale)*

The three included 709 ml Deluxe CREAMi Pints, offering 50% more capacity.


3. SETUP

Before first use, wash all components that will come into contact with food in warm, soapy water, then rinse and dry thoroughly. The pints, outer bowl, lid, and paddle are top-rack dishwasher safe.

Assembly Steps:

1. **Prepare Your Base:** Create your desired ice cream, sorbet, or frozen yogurt base. Pour the mixture into a Deluxe CREAMi Pint. Do not fill past the MAX FILL line.
2. **Freeze:** Place the pint in a freezer set to -18°C (0°F) for at least 24 hours. For best results, ensure the freezer is at the optimal temperature.
3. **Assemble:**
 - Place the frozen pint into the Outer Bowl.
 - Install the Creamerizer Paddle onto the outer bowl lid. Ensure it clicks into place.
 - Place the outer bowl lid onto the outer bowl, aligning the arrow on the lid with the handle. Turn the lid clockwise to lock it.
 - Place the assembled outer bowl onto the motor base, aligning the arrow on the outer bowl with the arrow on the motor base. Turn the outer bowl handle clockwise to raise the platform and lock it into place.

Préparez des crèmes glacées en quatre étapes seulement

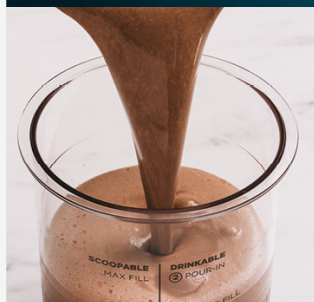


Remplissez votre Pot Deluxe



Congelez pendant 24 heures



Ajoutez vos extras favoris

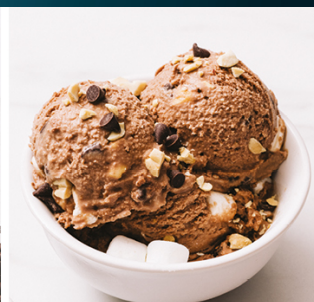

Brassez et savourez vos desserts glacés personnalisés

The four simple steps to prepare your frozen treats: Fill, Freeze, Add Mix-ins, and Process.

4. OPERATING INSTRUCTIONS

Once the unit is assembled and the base is frozen, you are ready to create your frozen treats.

Processing Your Treat:

1. Ensure the unit is plugged in. The power button will illuminate.
2. Select your desired program from the 10 available functions. The machine will automatically process the frozen base.
3. Once the program is complete, remove the outer bowl assembly by turning the handle counter-clockwise.
4. Remove the pint from the outer bowl and check the texture.



10 PROGRAMMES

Crème glacée, Sorbet, Crème glacée allégée, Glace italienne (Gelato), Milkshake, Frappés, Boissons glacées, Granités, Yaourt glacé + fonction Extras.

The control panel displaying the 10 available programs for various frozen desserts.

Understanding Programs:

- **Ice Cream, Sorbet, Lite Ice Cream, Gelato, Frozen Yogurt:** For creamy, scoopable frozen desserts.
- **Milkshake, Frappe, Frozen Drink, Slushi:** For drinkable frozen treats.
- **Mix-in:** Use this program after an initial process to evenly distribute added ingredients like chocolate chips, nuts, or candy into your frozen treat.

Ajoutez des toppings et incorporez-les de façon homogène grâce à la fonction mix-ins.



Adding mix-ins to customize your frozen treats.

Re-Spin Function:

If your processed treat is crumbly or powdery, use the RE-SPIN function. This will re-process the mixture to achieve a smoother, creamier consistency. This is common for very cold or low-fat bases.

Two Flavors in One:

To create two distinct flavors in a single pint:

1. Prepare your base and freeze it as usual.
2. Process the entire pint using your desired program.
3. Scoop out half of the processed treat from the pint.
4. Add your desired mix-ins or flavorings to the remaining half in the pint.
5. Select the 'TOP' or 'BOTTOM' setting on the control panel, depending on where you added the new flavor, and run the MIX-IN program. This will only process that specific section of the pint.



Mix-in

PROGRAMME À UNE TOUCHE

MÉLANGEZ VOS FAVORIS
dans les baignoires Deluxe

EXTRAS

Ajoutez des morceaux de biscuit, des bonbons, des noix, des céréales ou encore des fruits surgelés pour personnaliser votre crème glacée ou votre glace à l'italienne en 3 étapes seulement.

Illustrating the 'TOP' and 'BOTTOM' sections for creating two flavors in one pint.

5. CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and optimal performance of your Ninja CREAMi Deluxe.

Dishwasher Cleaning:

The Deluxe CREAMi Pints, storage lids, outer bowl, outer bowl lid, and Creamerizer Paddle are all top-rack dishwasher safe.

Hand Washing:

Wash the pints, lids, outer bowl, and paddle in warm, soapy water. Use a cleaning brush to remove any sticky residue from the paddle. Rinse thoroughly and air dry.

Motor Base Cleaning:

Wipe the motor base with a clean, damp cloth. Do not immerse the motor base in water or spray it with water. Do not use abrasive cloths, pads, or cleaners to clean the motor base.



FACILE À NETTOYER

Accessoires amovibles, compatibles au lave-vaisselle (compartiment supérieur)

Removable parts are dishwasher safe for easy cleaning.

6. TROUBLESHOOTING

If you encounter issues with your Ninja CREAMi Deluxe, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Treat is crumbly or powdery.	Base is too cold or has low fat/sugar content.	Use the RE-SPIN program. If still crumbly, add 1-2 tablespoons of liquid (milk, water) and RE-SPIN again.

Problem	Possible Cause	Solution
Treat is too soft or liquidy.	Base was not frozen solid enough or melted slightly.	Ensure pint is frozen for a full 24 hours at -18°C (0°F). Return to freezer for a short period if needed.
Machine does not start.	Unit not properly assembled or plugged in.	Ensure the outer bowl is locked onto the motor base and the lid is locked onto the outer bowl. Check power connection.
Loud noise during operation.	Normal operation, or paddle/pint not seated correctly.	Some noise is normal. Ensure the paddle is correctly installed and the pint is fully seated in the outer bowl.

7. SPECIFICATIONS

Attribute	Detail
Model Number	NC501EU
Brand	Ninja
Color	Black/Silver
Capacity	680 Milliliters (per pint)
Power	800 Watts
Voltage	220 Volts
Material	Plastic
Dimensions (L x W x H)	21.4 cm x 30.5 cm x 42.4 cm
Weight	7.3 Kilograms

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Ninja website. Information regarding the availability of spare parts is currently unavailable through general product specifications.

For direct assistance, please contact Ninja customer service through their official channels.

