



[Manuals.plus](#) /

› [Schwinn](#) /

› Schwinn High Timber Mountain Bike S1875AZ User Manual

Schwinn S1875AZ

Schwinn High Timber Mountain Bike S1875AZ User Manual

Model: S1875AZ | Brand: Schwinn

1. INTRODUCTION

This manual provides essential information for the assembly, operation, maintenance, and troubleshooting of your Schwinn High Timber Mountain Bike, model S1875AZ. Please read these instructions carefully before using your bicycle to ensure safe and optimal performance. Retain this manual for future reference.



Image: The Schwinn High Timber Mountain Bike in Teal with 20-inch wheels.

2. SETUP AND ASSEMBLY

Your Schwinn High Timber Mountain Bike arrives approximately 80% assembled. Final assembly is required. It is recommended to have the bicycle assembled by a qualified bicycle mechanic if you are unsure about any steps.

Required Tools:

- Phillips head screwdriver
- 2.5-8mm Allen wrenches
- Adjustable wrench
- Pliers with cable cutters

Assembly Steps:

1. **Handlebar Installation:** Attach the handlebar to the stem. You may need to detach the brake cable from the front brake, mount the handlebar, and then reattach the cable for proper routing.
2. **Front Wheel Installation:** Ensure the front wheel is oriented correctly. The brake tread should align properly with the brake calipers. If the brake line is twisted through the frame, it must be corrected for the brakes to function safely.

3. **Seat Post Adjustment:** Use the quick-release mechanism to adjust the seat post to the appropriate height for the rider.
4. **Pedal Installation:** Attach the pedals, ensuring they are tightened securely.
5. **Gear Assembly:** The rear wheel and gear assembly require careful attention. Ensure the rear derailleur is properly aligned and the chain moves smoothly across all gears.
6. **Brake Adjustment:** Adjust both front and rear brakes to ensure they engage effectively and release completely.

Note: Proper adjustment of gears and brakes is crucial for safety. If you experience difficulty, consult a professional bicycle mechanic.



Image: Handlebars with twist shifters and brake levers.





Image: Front suspension fork and disc brake assembly.

3. OPERATING YOUR BICYCLE

The Schwinn High Timber Mountain Bike is designed for versatile riding, from neighborhood paths to light trails. Familiarize yourself with its features for a comfortable and controlled ride.

Gearing:

- This model features 7-speed twist shifters with a rear derailleur for quick and easy gear changes.
- The alloy crank ensures smooth power transfer and requires minimal maintenance.
- Twist the shifter on the right handlebar to change gears. Practice shifting in a safe area before riding in traffic or on challenging terrain.

Braking:

- The bicycle is equipped with disc brakes, providing reliable stopping power in various conditions.
- Apply both front and rear brakes simultaneously for balanced and effective stopping. Avoid sudden, hard braking with only the front brake, especially at high speeds, to prevent loss of control.

Suspension and Tires:

- The front suspension fork helps absorb bumps and shocks, providing a more comfortable ride on uneven surfaces.
- Wide knobby mountain tires offer enhanced stability and traction on diverse terrains and in various weather conditions.



Image: Rear derailleur and chain on the Schwinn High Timber bike.

Your browser does not support the video tag.

Video: An overview of the Schwinn High Timber ALX and AL Mountain Bike models, demonstrating features and design.

4. MAINTENANCE

Regular maintenance is essential for the longevity and safe operation of your bicycle. Perform these checks periodically:

- **Tire Pressure:** Check tire pressure before each ride. Maintain pressure within the range indicated on the tire sidewall.
- **Brakes:** Inspect brake pads for wear and replace them when necessary. Ensure brake levers are firm and responsive. Adjust brake cables if there is excessive slack.
- **Gears and Chain:** Keep the chain clean and lubricated. Check for smooth gear changes and adjust the derailleur if gears are slipping or difficult to shift.
- **Bolts and Fasteners:** Periodically check all bolts and fasteners, especially on the handlebars, seat post, wheels, and crank, to ensure they are securely tightened.
- **Cleaning:** Clean your bicycle regularly with mild soap and water. Avoid high-pressure washing directly on bearings and seals.



Image: The comfortable Schwinn branded saddle with quick-release seat post clamp.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your bicycle:

Gears Not Shifting Smoothly or Slipping:

- **Check Cable Tension:** Gear cables can stretch over time. Adjust the barrel adjusters on the shifter or derailleur to increase cable tension.
- **Derailleur Alignment:** Ensure the front and rear derailleurs are properly aligned with the cogs. Minor adjustments to limit screws may be needed.
- **Lubrication:** A dry or dirty chain can hinder shifting. Clean and lubricate the chain regularly.

Brakes Feel Spongy or Ineffective:

- **Cable Tension:** Adjust brake cable tension at the lever or caliper to remove slack.
- **Pad Wear:** Inspect brake pads for wear. Replace worn pads promptly.
- **Contaminated Pads/Rotors:** If disc brakes are contaminated with oil or grease, they may lose effectiveness. Clean rotors with isopropyl alcohol and replace pads if necessary.

Wobbly Wheels:

- **Spoke Tension:** A wobbly wheel often indicates uneven spoke tension. This requires truing the wheel, which is best

done by a professional bicycle mechanic.

- **Axle Tightness:** Ensure the wheel's quick-release or axle nuts are securely tightened.

For complex issues or if you are uncomfortable performing repairs, it is always recommended to seek assistance from a certified bicycle mechanic.

6. SPECIFICATIONS

Model Name	High Timber
Model Number	S1875AZ
Brand	Schwinn
Bike Type	Mountain Bike
Age Range	Youth
Wheel Size	20 Inches
Frame Material	Aluminum
Color	Teal
Number of Speeds	7
Suspension Type	Front
Brake Style	Disc
Gear Shifter Type	Twist Grip
Minimum User Height	40 Inches
Assembly Required	Yes (80% pre-assembled)

7. WARRANTY AND SUPPORT

Your Schwinn High Timber Mountain Bike is covered by a Limited Warranty, which includes a Limited Lifetime Warranty on the frame. For specific details regarding warranty coverage, please refer to the documentation included with your purchase or visit the official Schwinn website.

For technical support, parts, or warranty claims, please contact Schwinn customer service. Contact information can typically be found on the Schwinn website or in your product packaging.

Online Resources: For additional information, assembly videos, and FAQs, visit the official [Schwinn Brand Store](#).