

[Manuals.plus](#) /

> [Tissot](#) /

> Tissot T-Race Chronograph Quartz Watch Instruction Manual (Model T1414171103100)

Tissot T1414171103100

Tissot T-Race Chronograph Quartz Watch Instruction Manual

Model: T1414171103100

INTRODUCTION

This instruction manual provides essential information for the proper use, setup, and maintenance of your Tissot T-Race Chronograph Quartz Watch, model T1414171103100. Please read this manual carefully to ensure optimal performance and longevity of your timepiece.

PRODUCT OVERVIEW

The Tissot T-Race Chronograph is a precision quartz watch featuring a 316L stainless steel case and a chronograph function. It is designed for durability and accuracy, reflecting Tissot's commitment to quality.

Key Features:

- **Movement:** Quartz Chronograph
- **Case Material:** 316L Stainless Steel
- **Dial Type:** Index with Date Display
- **Strap/Bracelet:** Stainless Steel with Folding Clasp, Safety, and Push-Buttons
- **Water Resistance:** Up to 10 bar (100 meters / 330 feet)
- **Crystal:** Sapphire Crystal

SETUP

Initial Setup and Time Setting:

1. **Unscrew the Crown:** If your watch has a screw-down crown, gently unscrew it counter-clockwise until it springs out to position 1.

2. **Set the Time:** Pull the crown out to position 2 (or the furthest position). Turn the crown clockwise or counter-clockwise to set the hour and minute hands. Ensure the AM/PM is correctly set if your watch has a date function that changes at midnight.
3. **Set the Date (if applicable):** Push the crown back to position 1 (the first click out from the case). Turn the crown to adjust the date. Avoid setting the date between 9 PM and 3 AM, as this can damage the movement.
4. **Secure the Crown:** Once time and date are set, push the crown back into the case. If it's a screw-down crown, push it in and screw it clockwise until it is firmly secured against the case to maintain water resistance.





Image: Side view of the Tissot T-Race Chronograph watch, highlighting the crown and chronograph pushers for time and function adjustments.

OPERATING THE CHRONOGRAPH

Your Tissot T-Race Chronograph features a stopwatch function for measuring elapsed time.

1. **Start:** Press the upper pusher (button A) to start the chronograph. The chronograph seconds hand will begin to move.
2. **Stop:** Press the upper pusher (button A) again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. **Reset:** Press the lower pusher (button B) to reset the chronograph hands to their zero position.
4. **Intermediate Time (Split Time):** While the chronograph is running, press the lower pusher (button B) to display an intermediate time. The chronograph hands will stop, but the timing continues in the background. Press button B again to catch up to the running time.

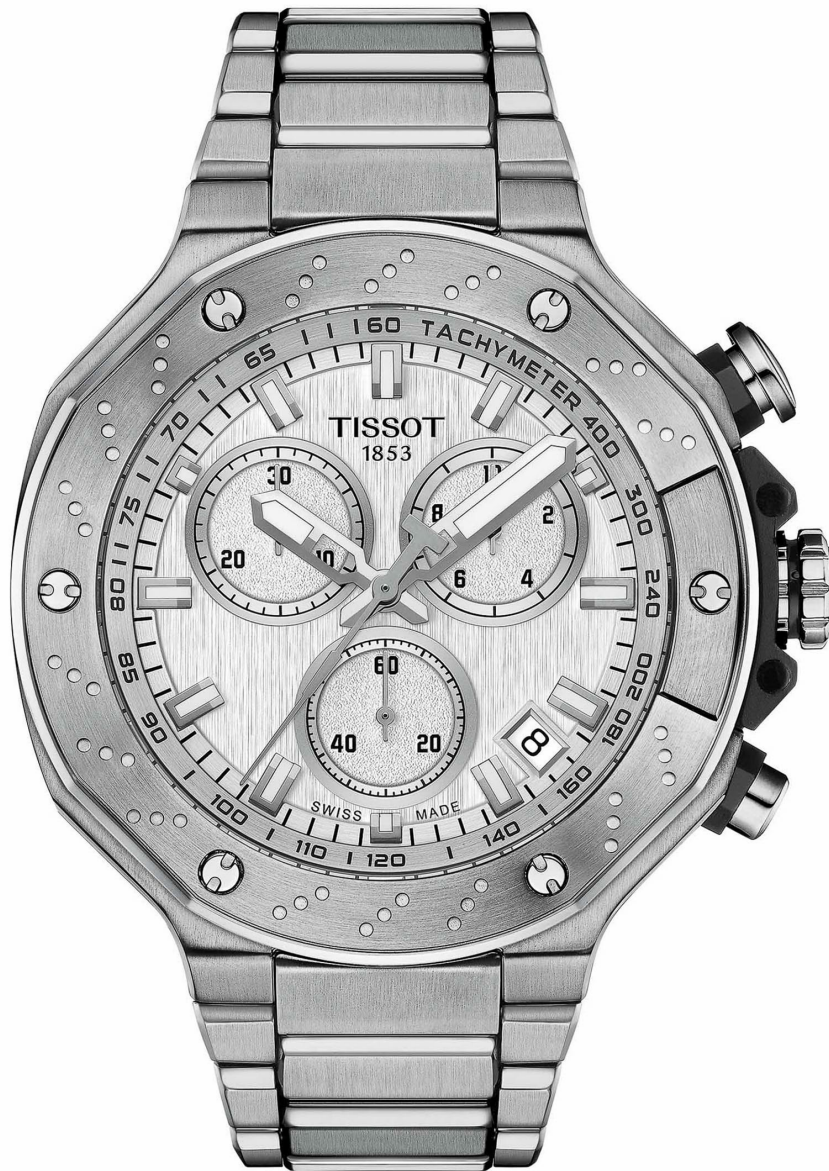


Image: Front view of the Tissot T-Race Chronograph watch dial, showing the main hands and chronograph sub-dials.

MAINTENANCE

Cleaning:

- Regularly clean your watch with a soft, dry cloth.
- For stainless steel cases and bracelets, a slightly damp cloth can be used, followed by drying with a soft, dry cloth.
- Avoid using chemical cleaning agents, as they can damage the watch's finish or seals.

Water Resistance:

Your watch is water-resistant up to 10 bar (100 meters / 330 feet). This makes it suitable for swimming and showering. However, it is crucial to ensure the crown is fully pushed in and, if applicable, screwed down before any contact with water. Do not operate the pushers or crown while the watch is wet or submerged.



Image: Rear view of the Tissot T-Race Chronograph watch case, displaying the water resistance rating and other engravings.

Battery Replacement:

The watch is powered by a quartz movement requiring a battery. When the battery is low, the second hand may jump every few seconds (End-of-Life indicator). Battery replacement should be performed by an authorized Tissot service center to ensure proper sealing and maintain water resistance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Watch not running or stopping intermittently.	Depleted battery.	Replace battery at an authorized service center.
Date not changing correctly.	Date set during restricted hours (9 PM - 3 AM) or incorrect time setting (AM/PM).	Adjust time and date outside of restricted hours. Ensure AM/PM is correct.
Chronograph hands not resetting to zero.	Requires calibration.	Consult the full Tissot manual or an authorized service center for chronograph hand calibration instructions.
Water ingress.	Crown not properly secured or seals compromised.	Immediately take the watch to an authorized service center. Do not attempt to dry it yourself.

SPECIFICATIONS

Feature	Detail
Model Number	T1414171103100
Movement Type	Quartz Chronograph
Case Material	316L Stainless Steel
Case Diameter	45.00 mm
Case Thickness	11.76 mm
Crystal	Sapphire Crystal
Band Material	Stainless Steel
Band Width	13.95 mm
Water Resistance	10 bar (100 m / 330 ft)
Clasp Type	Folding Clasp with Safety and Push-Buttons
Battery	1 9V battery (included)

WARRANTY

Your Tissot T-Race Chronograph watch is covered by a **2-Year International Warranty** from the date of purchase. This warranty covers material and manufacturing defects. It does not cover normal wear and tear, damage caused by improper handling, lack of care, accidents, or unauthorized repairs.

To claim warranty service, please present your warranty card or proof of purchase to an authorized Tissot retailer or service center.

SUPPORT

For further assistance, detailed operating instructions, or to locate an authorized service center, please visit the official

Tissot website or contact their customer service.

- **Official Website:** www.tissotwatches.com
- **Customer Service:** Refer to the contact information provided in your watch's packaging or on the official website for your region.



© 2026 Tissot. All rights reserved.

This manual is for informational purposes only. Tissot reserves the right to make changes to its products and specifications at any time.