

[manuals.plus](#) /› [Tissot](#) /› [Tissot Everytime 34mm Quartz Watch \(Model T1432101104100\) Instruction Manual](#)**Tissot T1432101104100**

## Tissot Everytime 34mm Quartz Watch Instruction Manual

Model: T1432101104100

### 1. INTRODUCTION

---

This manual provides essential information for the proper setup, operation, and maintenance of your Tissot Everytime 34mm Quartz Watch. Please read these instructions carefully to ensure optimal performance and longevity of your timepiece.

The Tissot Everytime watch features a classic and timeless dial design, crafted with a 316L stainless steel case and a quartz movement. It is designed for versatility and elegance.



Figure 1: Front view of the Tissot Everytime 34mm Quartz Watch.

## 2. SETUP

### 2.1 Initial Inspection

Upon unboxing, carefully inspect your watch for any visible damage. Ensure all protective films are removed from the crystal and case back.

### 2.2 Setting the Time and Date

1. Locate the crown on the right side of the watch case.
2. Gently pull the crown out to position 2 (first click) to set the date. Turn the crown clockwise or counter-clockwise until the correct date is displayed.
3. Pull the crown out further to position 3 (second click) to set the time. Turn the crown to move the hour and minute hands. To ensure accurate time setting, synchronize with a reliable time source.
4. Once the time and date are set, push the crown back into position 1 (fully in) to engage the movement and start the watch.







Figure 2: Side view of the watch, highlighting the crown for time and date adjustment.

## 2.3 Adjusting the Bracelet

The stainless steel bracelet features an interchangeable quick-release mechanism and a butterfly clasp with push-buttons. For initial fitting, you may need to adjust the length of the bracelet by adding or removing links. This procedure typically requires specialized tools and is best performed by a qualified watchmaker or jeweler to avoid damage.



Figure 3: Close-up of the stainless steel bracelet and butterfly clasp.

## 3. OPERATING THE WATCH

---

### 3.1 Basic Time Reading

Your Tissot Everytime watch displays time using traditional hour, minute, and second hands on an index dial. The date is displayed in a window on the dial.

### 3.2 Water Resistance

This watch is water-resistant up to a pressure of 5 bar (50 meters / 165 feet). This rating makes it suitable for short periods of recreational swimming and showering. However, it is **not** suitable for diving, snorkeling, or high-impact water sports. Always ensure the crown is fully pushed in before any contact with water.



Figure 4: Watch case back indicating water resistance rating.

## 4. MAINTENANCE

### 4.1 Cleaning

To maintain the appearance of your watch, clean the case and bracelet regularly with a soft, dry cloth. For stainless steel, a slightly damp cloth can be used, followed by drying. Avoid using harsh chemicals or abrasive materials.

### 4.2 Battery Replacement

The watch is powered by a quartz movement, which requires a battery. When the battery is depleted, the watch will stop running. Battery replacement should be performed by an authorized Tissot service center or a qualified watch technician to ensure proper sealing and maintain water resistance.

### 4.3 Water Resistance Care

The water resistance of your watch is not permanent and may decrease over time due to the aging of gaskets or accidental impacts. It is recommended to have the water resistance checked annually by an authorized service center, especially if the watch is frequently exposed to water.

## 5. TROUBLESHOOTING

- Watch Not Running:** If the watch stops, the battery may need replacement. Refer to section 4.2.
- Incorrect Time/Date:** Ensure the crown is fully pushed in after setting. If the issue persists, re-set the time and date as per section 2.2.
- Condensation Under Crystal:** This indicates a loss of water resistance. Immediately take the watch to an authorized service center to prevent further damage to the movement.
- Strap Discomfort:** If the bracelet feels too tight or loose, consider having it adjusted by a professional (refer to section 2.3).

## 6. SPECIFICATIONS

Feature	Detail
Model Number	T1432101104100
Case Material	316L Stainless Steel
Case Size	34.00 mm
Case Thickness	6.92 mm
Movement Type	Quartz
Dial Type	Index
Strap/Bracelet	Stainless steel, interchangeable quick release
Band Width	16 mm
Clasp Type	Butterfly clasp with push-buttons
Water Resistance	5 bar (50 m / 165 ft)
Battery	1 9V battery (included)

## 7. WARRANTY

Your Tissot Everytime watch comes with a **2 Year International Warranty**. This warranty covers manufacturing defects and material flaws under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear. Please refer to the official Tissot warranty card included with your purchase for full terms and conditions.

## 8. SUPPORT

For further assistance, service, or warranty claims, please contact an authorized Tissot service center or visit the official Tissot website. You can find contact information and a list of service centers on their website.

**Note on Videos:** No official product videos from the seller were found in the provided data that met the specified embedding criteria (m3u8 format, creator\_type: Seller). Therefore, no videos are embedded in this manual.