

[manuals.plus](#) /

› [Claymore](#) /

› [Claymore V1040 Black Rechargeable Portable Fan Instruction Manual](#)

Claymore V1040

Claymore V1040 Black Rechargeable Portable Fan Instruction Manual

Model: V1040

1. INTRODUCTION

The Claymore V1040 is a versatile rechargeable portable fan designed for both indoor and outdoor use. Featuring a powerful 10,400mAh battery, it offers extended wireless operation and doubles as a power bank for charging other devices. With its quiet BLDC motor, multiple speed settings, and flexible mounting options, the V1040 provides efficient and customizable airflow for various environments.



Image 1.1: Claymore V1040 Portable Fan with included remote control.

2. PRODUCT FEATURES

- **High-Capacity Battery & Power Bank:** Equipped with a 10,400mAh battery, providing up to 23 hours of operation. Features a USB-A output for charging external devices.
- **Remote Control:** Adjust fan speed and timer settings conveniently from a distance. The remote magnetically attaches to the fan for secure storage.
- **Powerful 4-Speed Airflow:** Offers 4 wind speed levels with a maximum airflow of 6.4 m/s.

- **Quiet BLDC Motor:** Ensures ultra-quiet operation with less heat generation, smooth wind control, and long-lasting durability.
- **Timer Function:** Set automatic shut-off timers from 1 to 4 hours.
- **Easy Cleaning:** The front safety cage is removable for effortless blade cleaning.
- **Flexible Mounting:** Includes a tripod stand, built-in handle, and a 1/4" tripod socket for various placement options. Features 60° adjustable tilt.



Image 2.1: Key features of the Claymore V1040 fan.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Claymore V1040 Portable Fan Unit
- Remote Control
- Tripod Stand

- USB-C Charging Cable
- Carrying Bag (may be available for separate purchase)

4. SETUP

4.1 Attaching the Tripod Stand

1. Locate the 1/4" tripod socket on the bottom of the fan unit.
2. Screw the tripod stand securely into the socket until firm.
3. Adjust the fan's tilt to your desired angle (up to 60°).

4.2 Using the Built-in Handle

The fan features a built-in handle for easy portability. This handle can also be used to hang the fan or adjust its angle by 180°.

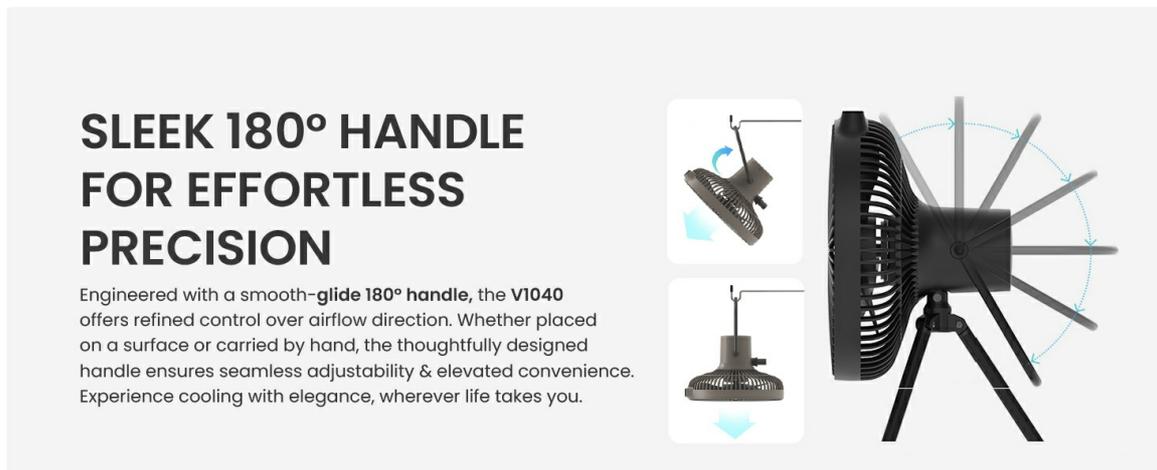


Image 4.1: The 180° adjustable handle allows for versatile positioning.

5. CHARGING

5.1 Charging the Fan

1. Connect the provided USB-C cable to the fan's charging port.
2. Plug the other end of the USB-C cable into a compatible USB power adapter (not included).
3. The battery indicator lights will illuminate to show the charging status. A full charge takes approximately 5.5 hours.

5.2 Battery Indicator

Press the power button briefly to display the battery level for 30 seconds. The indicator lights represent the remaining charge:

- 1 light: <25%
- 2 lights: 25-50%

- 3 lights: 50-75%
- 4 lights: 75-100%

SECURE & STYLISH STORAGE

Exclusive pouch for neat, safe storage

*Available for separate purchase.



Image 5.1: Battery indicator details.

5.3 Power Bank Function

The V1040 can act as a power bank. Connect your device to the fan's USB-A output port using your device's charging cable to charge it on the go.

DOUBLES AS A POWER BANK STAY CHARGED ANYWHERE

- **10,400mAh Battery**
Charge your Phone Anytime
- **Fan & Power Bank in One**
Perfect for Outdoors
- **Built-In USB**
Output for Emergency Charging



Image 5.2: Using the fan as a power bank.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off and Speed Control

Use the power button on the fan or the remote control to turn the fan on/off and cycle through the 4 fan speeds. The fan operates quietly due to its BLDC motor.

6.2 Remote Control

The included remote control allows for convenient adjustment of fan speed and timer settings from a distance. It features a magnetic attachment for easy storage on the fan unit.

6.3 Timer Function

Activate the timer function via the fan's controls or the remote. You can set the fan to automatically turn off after 1, 2, 3, or 4 hours.

EXCLUSIVE BATTERY INDICATOR

Stay informed with a **30-second** battery level display by pressing the power button



Image 6.1: Customizable timer settings.

6.4 Air Circulation

The V1040 is designed to circulate air effectively, making it suitable for various spaces including tents, offices, and outdoor areas. Its adjustable tilt allows you to direct airflow precisely where needed.

Video 6.2: Demonstration of a similar portable fan's features, including oscillation, timer, and adjustable neck. Note: This video features a similar model (NESTOUT FAN-1) and may not reflect all exact features of the Claymore V1040.

7. MAINTENANCE

7.1 Cleaning the Fan Blades

To maintain optimal performance and hygiene, regularly clean the fan blades:

1. Ensure the fan is turned off and disconnected from any power source.
2. Gently twist the front safety cage counter-clockwise to detach it.
3. Wipe the fan blades with a soft, dry cloth. The blades are non-removable.
4. Clean the detachable grill with water and mild soap if necessary, then dry thoroughly.
5. Align the arrows and grooves, then twist the front grill clockwise to re-install it until it clicks into place.

EASY TO CLEAN BUILT FOR HYGIENE

Detachable grill is washable wipe main body dry. Blades are non-removable.



Image 7.1: Instructions for cleaning the fan.

8. TROUBLESHOOTING

- **Fan not turning on:** Ensure the battery is charged. Connect to a power source and check the battery indicator.
- **Weak airflow:** Check for obstructions around the fan blades. Clean the blades and front grill if dusty. Ensure the fan is on a higher speed setting.
- **Remote control not working:** Ensure there are no obstructions between the remote and the fan. Check if the remote's battery needs replacement (if applicable).
- **Device not charging from power bank function:** Ensure the fan has sufficient charge. Verify the charging cable is securely connected to both the fan's USB-A output and your device.

9. SPECIFICATIONS

Feature	Detail
Brand	Claymore
Model Name	V1040
Color	Black
Power Source	Battery Powered
Battery Capacity	10,400mAh Lithium Polymer (included)
Max Runtime	Up to 23 hours
Charging Time	Approx. 5.5 hours (via USB-C)
Fan Speeds	4 levels
Max Airflow	6.4 m/s
Noise Level	15 Decibels
Motor Type	Brushless DC Motor (BLDC)
Control Method	Remote
Product Dimensions	5"D x 7.75"W x 10"H
Item Weight	3.41 pounds
Indoor/Outdoor Usage	Outdoor



Image 9.1: Product dimensions.

10. SAFETY INFORMATION

- Do not insert fingers or objects into the fan grill.
- Keep the fan away from water or excessive moisture.
- Do not attempt to disassemble or repair the fan yourself. Contact qualified personnel for service.
- Use only the provided charging cable or a compatible USB-C cable for charging.
- Keep out of reach of children.

11. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the official Claymore website or contact your local distributor. Keep your purchase receipt as proof of purchase.

© 2024 Claymore. All rights reserved.