

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Candy](#) /
- › [Candy Rapidò CF0C7SB0FX Dishwasher Instruction Manual](#)

## Candy CF0C7SB0FX

# Candy Rapidò CF0C7SB0FX Dishwasher User Manual

Model: CF0C7SB0FX | Brand: Candy

## 1. PRODUCT OVERVIEW

The Candy Rapidò CF0C7SB0FX is a 45 cm freestanding dishwasher designed for efficient and convenient dishwashing. It features a digital display, Wi-Fi connectivity for smart control via the hOn app, and antibacterial technology for enhanced hygiene. With a capacity of 10 place settings, it is suitable for household use.





Front view of the Candy Rapidò CF0C7SB0FX freestanding dishwasher.

## 2. SETUP AND INSTALLATION

---

### 2.1 Unpacking and Included Components

Carefully unpack the dishwasher and ensure all components are present. The box should contain:

- Slim Dishwasher Unit
- Power Connector Cable
- Drain Hose
- Instruction Manual

### 2.2 Placement and Dimensions

This is a freestanding dishwasher. Ensure the installation area provides adequate space and access to water and power connections. The dimensions of the appliance are:

**Height:** 84.6 cm

**Width:** 44.8 cm

**Depth:** 60.5 cm

**Weight:** 40 kg

1=1mm

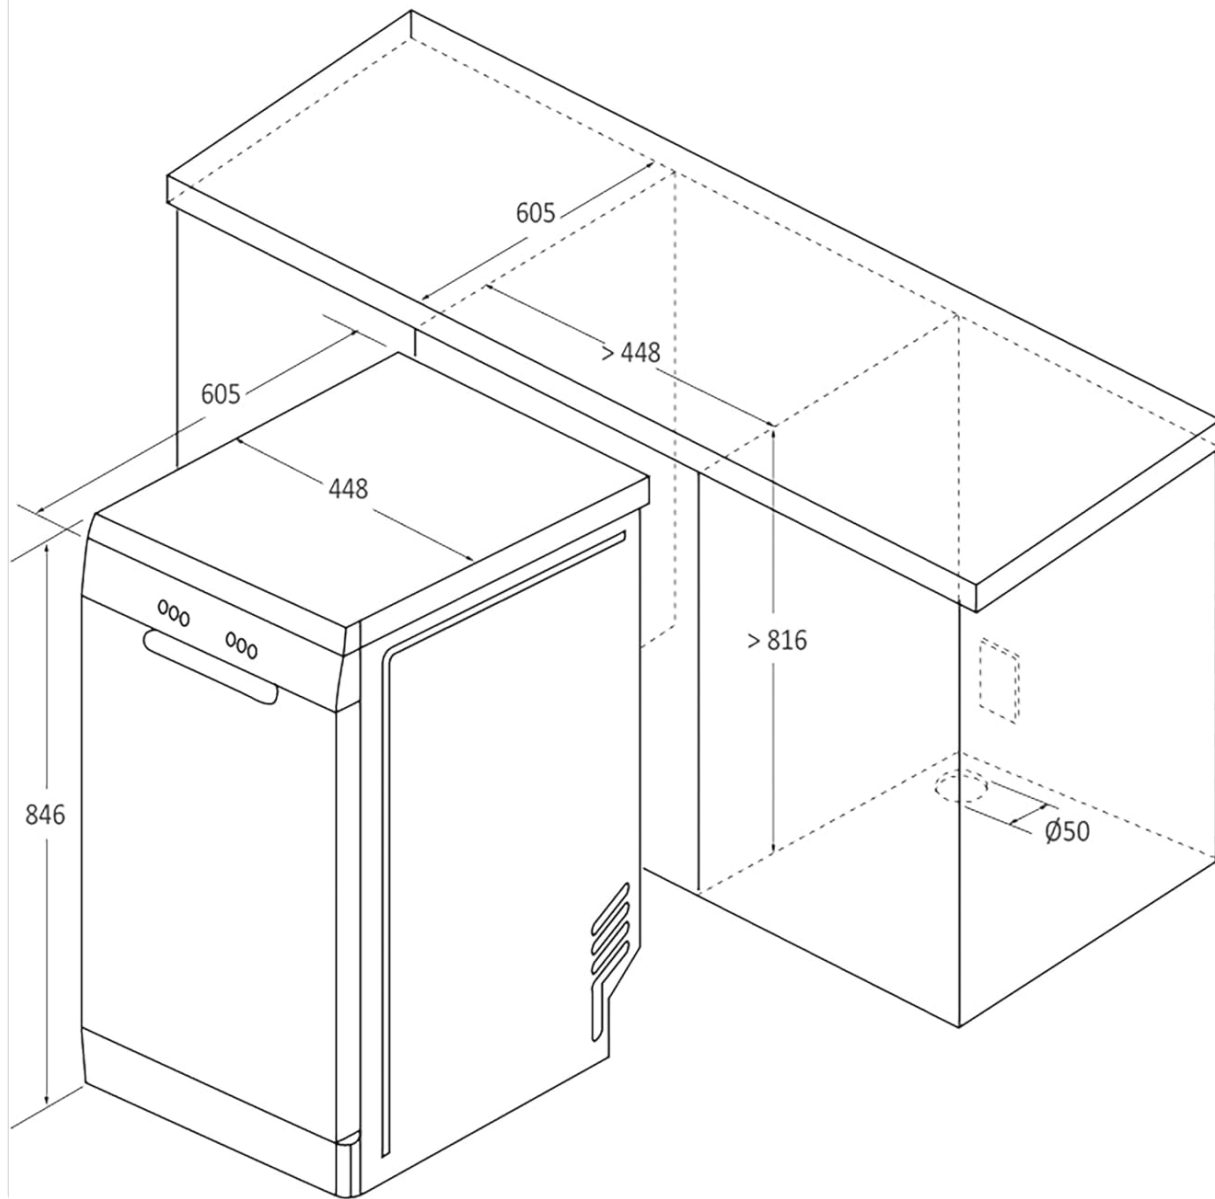 


Diagram illustrating the dimensions and typical installation space for the dishwasher.

## 2.3 Water and Power Connection

Connect the water inlet hose to a cold water tap and the drain hose to a suitable drain. Plug the power cable into a grounded electrical outlet (230 Volts). Refer to the detailed installation instructions in the included manual for specific requirements and safety guidelines.

## 3. OPERATING INSTRUCTIONS

### 3.1 Loading the Dishwasher

The dishwasher is designed for 10 place settings. Arrange dishes, glasses, and cutlery to allow water to reach all surfaces. The upper basket is adjustable to accommodate larger items in the lower basket.





Rapido'

10 Speed-Drive  
Inverter



CANDY



View of the dishwasher interior, demonstrating how dishes can be loaded.

### 3.2 Adding Detergent, Salt, and Rinse Aid

Open the detergent dispenser and add the recommended amount of dishwasher detergent. Check the salt and rinse aid indicators on the digital display. Refill the salt and rinse aid dispensers as needed to ensure optimal washing and drying performance.

### 3.3 Program Selection and Start

The dishwasher offers 8 programs and 10 optional cycles. Use the digital touch controls to select the desired wash program. Available programs include an Intensive cycle. You can also utilize the delayed start function for convenience. Press the start button to begin the cycle.

### 3.4 Wi-Fi Connectivity (hOn App)

This dishwasher features Wi-Fi connectivity. Download the hOn app to your smartphone to access remote control functions, exclusive features, and maintenance alerts. Follow the app's instructions to pair your device with the dishwasher.

## 4. MAINTENANCE

### 4.1 Regular Cleaning

Regularly clean the dishwasher's interior, including the spray arms and filters, to prevent blockages and ensure efficient operation. The antibacterial technology helps maintain hygiene inside the appliance.

### 4.2 Salt and Rinse Aid Levels

Monitor the salt and rinse aid indicators on the digital display. Refill these compartments promptly when the indicators signal low levels to ensure effective cleaning and streak-free drying.

## 5. TROUBLESHOOTING

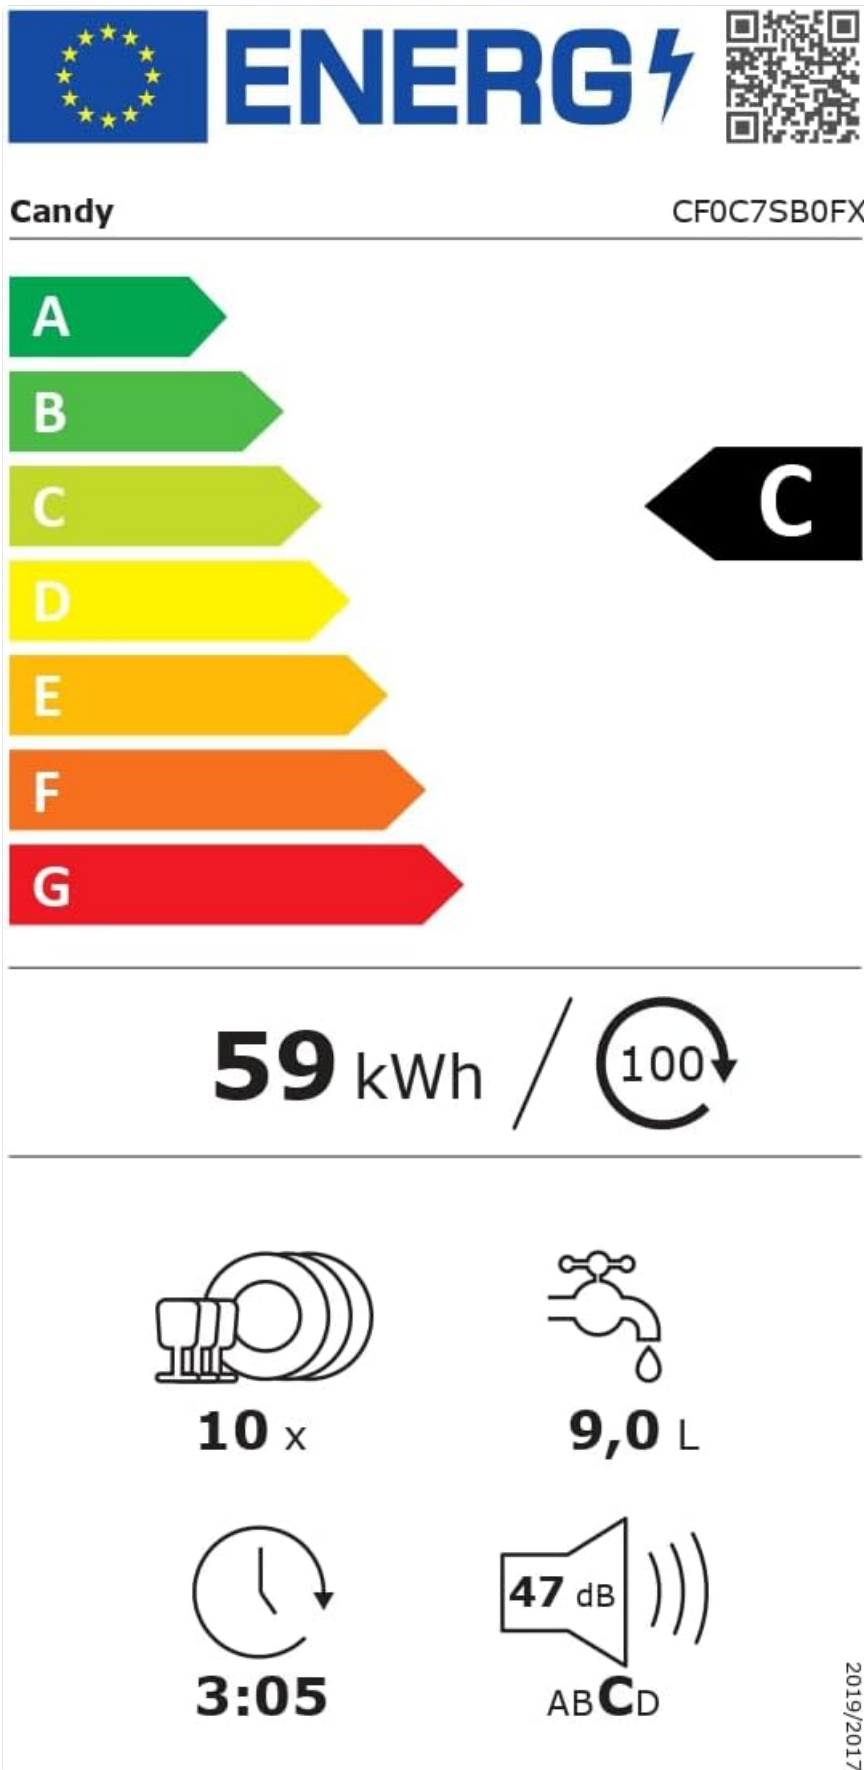 
If you encounter issues with your dishwasher, refer to the following common problems and solutions. For more complex issues or error codes not listed, consult the full instruction manual or contact customer support.

- **Dishwasher not starting:** Check if the door is fully closed, the power cable is securely plugged in, and the circuit breaker has not tripped.
- **Dishes not clean:** Ensure spray arms are not blocked, filters are clean, and detergent/salt/rinse aid levels are adequate. Check that dishes are loaded correctly.
- **Water not draining:** Check the drain hose for kinks or blockages and ensure the drain filter is clean.
- **Error Code E30:** This error typically indicates a water inlet issue. Check the water supply and inlet hose. If the problem persists, professional assistance may be required.

## 6. SPECIFICATIONS

Feature	Specification
Model Name	CF0C7SB0FX
Form Factor	Freestanding

Feature	Specification
Dimensions (H x W x D)	84.6 x 44.8 x 60.5 cm
Item Weight	40 kg
Voltage	230 Volts
Place Settings	10
Programs	8 (including Intensive)
Optional Cycles	10
Display Type	Digital
Control Type	Touch
Special Features	Automatic opening, Adjustable upper basket, Wi-Fi connectivity, End-of-cycle indicator, Salt and rinse aid indicator, Antibacterial technology
Color	Stainless Steel
Material	Stainless Steel
Noise Level	47 dB
Water Consumption (per cycle)	9.0 Liters
Energy Consumption (per cycle)	0.590 kWh
Energy Efficiency Class	C



EU Energy Label for the Candy Rapidò CF0C7SB0FX Dishwasher, indicating energy efficiency class C, 10 place settings, 9.0L water consumption, 47dB noise level, and 3:05 program duration.

For detailed energy information, visit the [EPREL database](#).

## 7. WARRANTY AND SUPPORT

### 7.1 Product Warranty

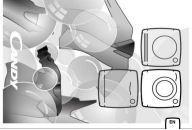 
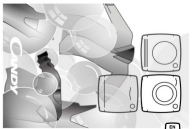 
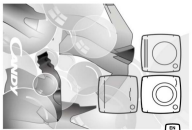 

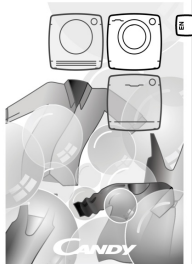 
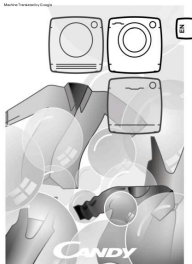 
The Candy Rapidò CF0C7SB0FX dishwasher comes with a minimum manufacturer's guarantee of 24 months from the date of purchase. Please retain your proof of purchase for warranty claims.

## 7.2 Customer Support

For technical assistance, spare parts, or service requests, please contact Candy customer support. You can find more information and contact details on the official Candy website or through the Haier Europe corporate site.

Official support website: [corporate.haier-europe.com](http://corporate.haier-europe.com)

### Related Documents - CF0C7SB0FX

	<p><a href="#">Candy Washing Machine User Manual and Guide</a></p> <p>Comprehensive user manual for Candy washing machines, detailing installation, operation, safety guidelines, maintenance, troubleshooting, and program descriptions. Includes practical tips for efficient use and energy saving.</p>
	<p><a href="#">Candy Washing Machine User Manual</a></p> <p>Comprehensive user manual for Candy washing machines, covering installation, operation, maintenance, troubleshooting, and program details.</p>
	<p><a href="#">Candy Washing Machine User Manual</a></p> <p>Comprehensive user manual for Candy washing machines, covering installation, operation, maintenance, troubleshooting, and safety guidelines.</p>
	<p><a href="#">Manuale d'Uso e Manutenzione Lavastoviglie Candy</a></p> <p>Guida completa per l'utilizzo sicuro ed efficiente della tua lavastoviglie Candy. Include istruzioni su installazione, programmi, manutenzione e risoluzione problemi.</p>
	<p><a href="#">Candy Washing Machine User Manual - WM Rapidó Series</a></p> <p>Comprehensive user manual for Candy WM Rapidó series washing machines, covering installation, operation, maintenance, troubleshooting, and safety instructions.</p>
	<p><a href="#">Candy Washing Machine User Manual</a></p> <p>Comprehensive user manual for Candy washing machines, covering installation, operation, maintenance, troubleshooting, and program details. Includes safety instructions and energy-saving tips.</p>