

PHONSUN 5647417977

PHONSUN Replacement SIM & Micro SD Tray User Manual

Brand: PHONSUN | Model: 5647417977

INTRODUCTION

This manual provides detailed instructions for the installation and use of the PHONSUN Replacement Single SIM Card & Micro SD Holder Slot Tray. Please read this manual carefully before use to ensure proper functionality and longevity of your product.

PRODUCT OVERVIEW AND COMPATIBILITY

The PHONSUN Replacement Single SIM Card & Micro SD Holder Slot Tray is designed for specific Samsung Galaxy S8 and S8 Plus models. This black replacement tray includes a waterproof rubber gasket for enhanced protection.

Compatible Models:

- AT&T Samsung Galaxy S8 SM-G950A and S8+ SM-G955A
- Verizon Samsung Galaxy S8 SM-G950V and S8+ SM-G955V
- T-Mobile Samsung Galaxy S8 SM-G950T and S8+ SM-G955T
- Sprint Samsung Galaxy S8 SM-G950P and S8+ SM-G955P
- U.S. Cellular Samsung Galaxy S8 SM-G950R and S8+ SM-G955R
- Other carrier Samsung Galaxy S8 SM-G950 and S8+ SM-G955 single SIM versions.

PACKAGE CONTENTS

Upon opening your package, please verify that all components are present and undamaged.

- 1 x Replacement Single SIM Card & Micro SD Holder Slot Tray (Black)



Image: The replacement SIM and Micro SD card tray shown alongside a SIM ejector tool.

SETUP AND INSTALLATION

Installing the replacement SIM and Micro SD card tray is a straightforward process. Ensure your device is powered off before proceeding.

1. **Locate the SIM Tray Slot:** On your Samsung Galaxy S8 or S8 Plus, the SIM and Micro SD card tray slot is typically located on the top edge of the phone.
2. **Eject the Old Tray (if present):** Insert a SIM ejector tool (or a small paperclip) into the small hole next to the tray slot. Apply gentle pressure until the tray pops out slightly. Carefully pull out the old tray.
3. **Insert SIM and Micro SD Card:** Place your Nano-SIM card and Micro SD card into the designated slots on the new

replacement tray. Ensure they are oriented correctly, matching the cut-out corners and the icons on the tray.



Image: A detailed view of the black replacement tray, highlighting the distinct sections for the SIM card and the Micro SD card.

4. **Insert the New Tray:** Carefully align the new tray with the slot on your phone and gently push it in until it sits flush with the phone's body. Do not force the tray.
5. **Power On Device:** Once the tray is securely inserted, power on your Samsung Galaxy S8/S8 Plus. The device should recognize the SIM card and Micro SD card automatically.

Note: The tray is designed to fit snugly and includes a waterproof gasket. Ensure it is fully inserted to maintain the device's water resistance.

OPERATING INSTRUCTIONS

Once installed, the SIM and Micro SD card tray functions identically to the original. Your phone will automatically detect the inserted cards.

- **SIM Card Functionality:** Allows your phone to connect to your mobile network for calls, texts, and mobile data.
- **Micro SD Card Functionality:** Provides expandable storage for photos, videos, apps, and other files.



Image: An angled perspective of the replacement tray, demonstrating its compact design.

MAINTENANCE

To ensure the longevity and proper function of your replacement SIM and Micro SD card tray, follow these simple maintenance guidelines:

- **Handle with Care:** Avoid bending or applying excessive force to the tray, as it is a delicate component.
- **Keep Clean:** If the tray becomes dirty, gently wipe it with a soft, dry, lint-free cloth. Do not use liquids or abrasive cleaners.
- **Protect the Gasket:** The waterproof rubber gasket is crucial for your phone's water resistance. Avoid poking or

damaging it.

- **Proper Storage:** If removing the tray for extended periods, store it in a clean, dry, and safe place to prevent loss or damage.



Image: The underside of the replacement tray, revealing its internal structure and design.

TROUBLESHOOTING

If you encounter issues with your replacement SIM and Micro SD card tray, consider the following troubleshooting steps:

Problem	Possible Cause	Solution
Tray does not fit into the phone.	Incorrect model or improper alignment.	Verify your phone model (Samsung Galaxy S8 G950 or S8+ G955). Ensure the tray is oriented correctly before inserting. Do not force it.

Problem	Possible Cause	Solution
SIM card not detected.	SIM card improperly seated or damaged.	Remove the tray and re-seat the SIM card, ensuring it clicks into place. Try the SIM card in another compatible device to check if the SIM itself is faulty. Restart your phone.
Micro SD card not detected.	Micro SD card improperly seated or damaged.	Remove the tray and re-seat the Micro SD card. Try the Micro SD card in another device or a card reader to check if the card itself is faulty. Ensure the Micro SD card is formatted correctly for your device.
Tray is loose or falls out.	Tray not fully inserted or internal phone damage.	Ensure the tray is pushed in completely until it is flush with the phone's edge. If the issue persists, there might be internal damage to the phone's SIM slot. Professional repair may be required.



Image: A different angled view of the replacement tray, highlighting its side profile and the integrated gasket.

SPECIFICATIONS

Feature	Detail
Product Type	Replacement Single SIM Card & Micro SD Holder Slot Tray
Compatibility	Samsung Galaxy S8 (G950) / S8 Plus (G955) All U.S. Carrier Versions
Color	Black
Material	Durable plastic with waterproof rubber gasket
Product Dimensions	4.75 x 3 x 0.2 inches
Item Weight	0.64 ounces

Feature	Detail
Model Number	5647417977
Manufacturer	Generic (Brand: PHONSUN)
First Available	December 20, 2016

WARRANTY AND SUPPORT

No specific warranty information is provided with this product. For any issues or support inquiries, please contact the seller directly through the platform where the purchase was made.

For general troubleshooting and device-specific support, refer to your Samsung Galaxy S8/S8 Plus user manual or Samsung's official support resources.

© 2024 PHONSUN. All rights reserved.
This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CVMFNRN2>

More documents and user manuals: <https://manuals.plus/>