

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Accutime](#) /

› [Accutime Hello Kitty Face Pink Wall Clock HK3059 Instruction Manual](#)

## Accutime HK3059

# Accutime Hello Kitty Face Pink Wall Clock HK3059 Instruction Manual

[Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

## INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your Accutime Hello Kitty Face Pink Wall Clock, model HK3059. Please read these instructions carefully before use and retain them for future reference.

## SETUP

### 1. Unpacking

Carefully remove the clock from its packaging. Inspect the clock for any signs of damage. If any damage is found, do not proceed with setup and contact customer support.

### 2. Battery Installation

The clock requires one AA battery (not included). To install the battery:

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert one AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

**Note:** Always use a fresh, high-quality AA battery for optimal performance. Do not mix old and new batteries or different types of batteries.

### 3. Setting the Time

To set the correct time:

1. Locate the time-setting knob on the back of the clock, usually near the battery compartment.

2. Gently turn the knob in either direction until the clock hands display the desired time.
3. Ensure the hands move freely and do not get stuck.

#### 4. Mounting the Clock

This clock is designed for wall mounting. To mount the clock:

1. Choose a suitable location on a wall.
2. Use a nail or screw (not included) appropriate for your wall type. Ensure it is securely fastened.
3. Hang the clock using the integrated hanging slot on the back.



*Image: The Accutime Hello Kitty Face Pink Wall Clock, model HK3059, featuring a pink frame and a white face with Hello Kitty's face and pink numbers. The image also indicates the clock's dimensions are 8.5 inches by 8.5 inches.*

## OPERATION

Once the battery is installed and the time is set, the clock will begin to operate. This is an analog wall clock designed for indoor use.

- **Silent Operation:** The clock features a silent movement, ensuring no distracting ticking sounds.
- **Display:** Time is displayed using analog hands (hour, minute, and second hands) on a numbered dial.

- **No Alarm Function:** This model does not include an alarm clock feature.

Your browser does not support the video tag.

Video: A demonstration of the Accutime Hello Kitty Wall Clock, model HK3059. The video shows the front and back of the clock, highlighting its design and the battery compartment for setup.

## MAINTENANCE

---

### 1. Battery Replacement

When the clock hands stop moving or the time becomes inaccurate, it is time to replace the battery. Follow the battery installation steps in the [Setup](#) section.

- Remove the old battery promptly to prevent leakage.
- Dispose of used batteries according to local regulations.

### 2. Cleaning

To clean your clock:

- Wipe the clock's surface with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the finish.
- Avoid getting moisture into the clock mechanism.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Clock not running or running slowly.	Dead or weak battery.	Replace the battery with a fresh AA battery.
Time is incorrect.	Time not set correctly or battery is low.	Reset the time using the setting knob. If the problem persists, replace the battery.
Clock hands are loose or detached.	Impact during shipping or handling.	If hands are detached, contact customer support for assistance. Do not attempt to repair yourself as this may void the warranty.

## SPECIFICATIONS

---

**Brand:** Accutime

**Model Number:** HK3059

**Color:** Pink

**Display Type:** Analog

**Style:** Modern

**Special Feature:** Silent Clock

**Product Dimensions:** 8.5"W x 8.5"H

**Power Source:** 1 x AA Battery (not included)

**Room Type:** All

**Shape:** House (referring to Hello Kitty's head shape)

**Indoor/Outdoor Usage:** Indoor

**Material:** Plastic

**Theme:** Cartoon (Hello Kitty)

**Frame Material:** Plastic

**Are Batteries Included:** No

**Mounting Type:** Wall Mount

**Alarm Clock:** No

**Number of Items:** 1

**Operation Mode:** Mechanical (battery-powered quartz movement)

**Dial Color:** Pink

**Size:** Large

**Item Weight:** 14.9 ounces

**ASIN:** B0CVMMNGGJ

**UPC:** 030506618782

**Date First Available:** February 13, 2024

## **WARRANTY AND SUPPORT**

---

For warranty information or technical support, please contact Accutime customer service. Details can typically be found on the product packaging or the official Accutime website.

Please have your model number (HK3059) and purchase date available when contacting support.