

[Manuals.plus](#) /

› [FOL](#) /

› FOL FS-T109 Sound Tower with Subwoofer User Manual

FOL FS-T109

FOL FS-T109 Sound Tower with Subwoofer User Manual

Model: FS-T109

[Instructions](#) [Introduction](#) [Maintenance](#) [Package Contents](#) [Troubleshooting](#) [Setup](#) [Specifications](#) [Operating](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides instructions for the FOL FS-T109 Sound Tower with Subwoofer. This system delivers powerful and high-quality audio, featuring an 8-inch subwoofer for deep bass and four 2.25-inch top speakers for clear mid and high tones, ensuring a balanced and immersive listening experience.



Image 1.1: Assembled FOL FS-T109 Sound Tower.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Subwoofer unit
- Support pole
- Top speaker unit (with four 2.25" speakers)
- Wireless microphone
- Remote control
- Power cable
- Audio cable (3.5mm to 3.5mm)



Image 2.1: All components included in the FOL FS-T109 package.

3. SETUP

3.1 Assembly

1. Place the subwoofer unit on a stable, flat surface.
2. Insert the support pole into the designated slot on top of the subwoofer.
3. Attach the top speaker unit onto the support pole. Ensure it is securely seated.
4. Connect the power cable to the subwoofer and then to a power outlet.



Image 3.1: Assembly diagram and dimensions of the FOL FS-T109 sound tower.

3.2 Control Panel Overview

The control panel, located on the front of the subwoofer, provides access to various functions and inputs.

CONTROLES Y PUERTOS DE FÁCIL ACCESO EN LA PARTE FRONTAL DEL SUBWOOFER.

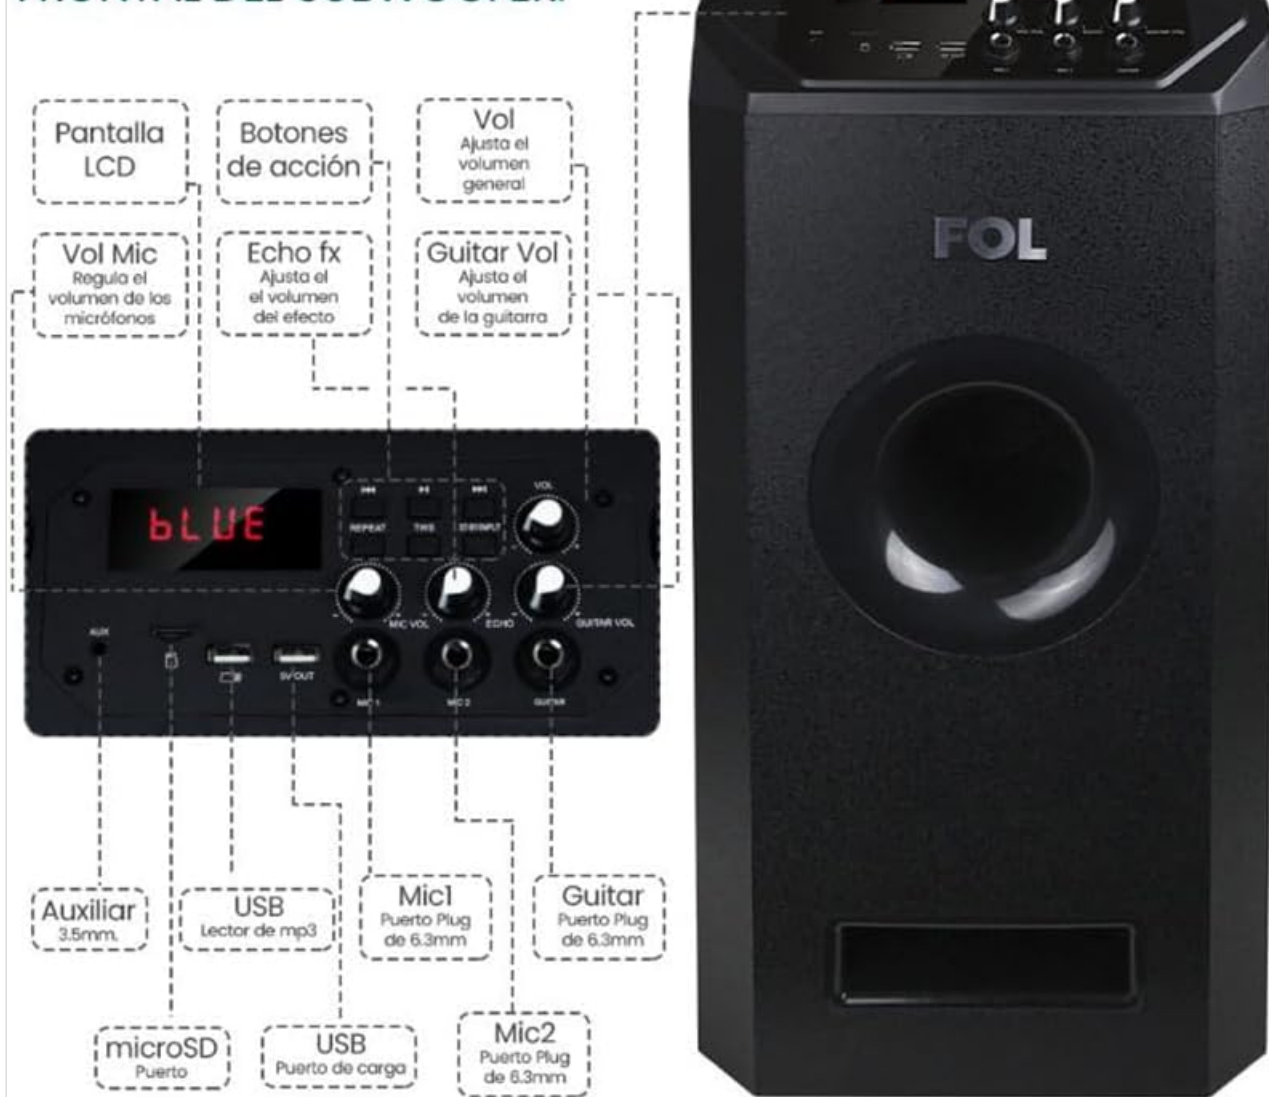


Image 3.2: Front panel controls and ports. Includes LCD display, action buttons, volume controls for master, microphone, and guitar, echo effect control, Auxiliary input (3.5mm), USB reader, MicroSD port, USB charging port, Mic1 (6.3mm), Guitar input (6.3mm), and Mic2 (6.3mm).

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

Press the power button on the control panel to turn the unit on or off.

4.2 Bluetooth Connection

1. Turn on the sound tower. The LCD display will show "BLUE" indicating Bluetooth mode.
2. Enable Bluetooth on your device (smartphone, tablet, etc.).
3. Search for "FS-T109" in your device's Bluetooth list and select it to pair.
4. Once paired, the unit will emit a confirmation sound.

4.3 True Wireless Stereo (TWS) Function

The TWS function allows you to connect two FS-T109 units for a synchronized, immersive stereo sound experience.

1. Ensure both FS-T109 units are powered on and in Bluetooth mode.
2. On one of the units (this will be the primary unit), press the "TWS" button.
3. The units will automatically search and pair with each other. A confirmation sound will indicate successful pairing.
4. Connect your device to the primary unit via Bluetooth as described in section 4.2.



Image 4.1: TWS technology for connecting two sound towers for enhanced stereo sound.

4.4 Microphone and Guitar Input

The FS-T109 supports up to two wired microphones and one guitar simultaneously, in addition to the included wireless microphone.

1. Connect wired microphones to the "Mic1" or "Mic2" 6.3mm input jacks.
2. Connect a guitar to the "Guitar" 6.3mm input jack.
3. Use the "Vol Mic" knob to adjust the volume of the wired microphones.
4. Use the "Guitar Vol" knob to adjust the volume of the connected guitar.
5. Adjust the "Echo Fx" knob to control the echo effect for microphones.



Image 4.2: Connecting a guitar and microphones to the sound tower.

4.5 USB/MicroSD Playback

Insert a USB drive or MicroSD card into the respective ports. The unit will automatically switch to USB/MicroSD mode and begin playback. Use the control panel buttons or remote control to navigate tracks.

4.6 Auxiliary Input

Connect an external audio device (e.g., MP3 player, laptop) to the "Auxiliary 3.5mm" input using the provided audio cable.

4.7 Remote Control Functions

The included remote control allows for convenient operation from a distance. Functions include volume adjustment, track skipping, mode selection, and bass/treble control.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use for extended periods, store the unit in a cool, dry place away from direct sunlight and

extreme temperatures.

- **Power Cable:** Regularly inspect the power cable for any damage. If damaged, discontinue use and replace with an approved cable.
- **Water Resistance:** This product is not water-resistant. Avoid exposure to liquids.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet not working.	Ensure power cable is securely connected. Test the outlet with another device.
No sound	Volume too low; Incorrect input mode selected; Device not paired (Bluetooth).	Increase volume. Select the correct input mode (Bluetooth, Aux, USB). Re-pair Bluetooth device.
Bluetooth pairing failure	Device too far; Interference; Unit not in pairing mode.	Move device closer. Ensure no other devices are interfering. Restart unit and try pairing again.
Microphone/Guitar not working	Volume knob too low; Cable not connected properly; Microphone/Guitar issue.	Adjust "Vol Mic" or "Guitar Vol" knobs. Ensure cables are fully inserted. Test microphone/guitar with another device if possible.
TWS connection issues	Units too far apart; TWS button not pressed on primary unit.	Ensure both units are within close proximity. Press the TWS button on one unit to initiate pairing.

7. SPECIFICATIONS

Feature	Detail
Brand	FOL
Model	FS-T109
Speaker Type	Sound Tower with Subwoofer
Subwoofer Diameter	8 inches
Top Speakers	4 x 2.25 inches
Maximum Output Power	200 Watts (Subwoofer) + 100 Watts (Top Speakers)
Connectivity Technology	Bluetooth, Auxiliary (3.5mm), USB, MicroSD
Wireless Technology	Bluetooth, Wireless Subwoofer Connectivity
Audio Output Mode	Stereo (with TWS function)
Control Method	Remote Control, On-unit buttons
Microphone Inputs	2 x 6.3mm wired inputs, 1 wireless microphone included
Guitar Input	1 x 6.3mm input
Material	Plastic

Feature	Detail
Color	Black
Dimensions (D x W x H)	32.5 x 26 x 53.5 cm (Subwoofer unit)
Water Resistance	No
Power Source	Electric Cable
Compatible Devices	Home Theater, Karaoke Machine, Smartphone, Television



Image 7.1: Subwoofer dimensions (53.5 cm H x 26 cm W x 32.5 cm D).

8. WARRANTY & SUPPORT

8.1 Warranty Information

This product comes with a **30-day limited warranty** from the date of purchase. This warranty covers manufacturing defects. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact FOL customer support. Refer to your purchase documentation or the retailer's website for contact details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question