

[Manuals.plus](#) /

› [BoxWave](#) /

› BoxWave DualTip Capacitive Stylus User Manual

BoxWave DualTip Capacitive Stylus

BoxWave DualTip Capacitive Stylus User Manual

Model: DualTip Capacitive Stylus | Brand: BoxWave

INTRODUCTION

This manual provides instructions for the BoxWave DualTip Capacitive Stylus. This stylus is designed for use with capacitive touchscreens, offering two distinct tips for various applications. It requires no pairing or batteries, providing a simple and effective way to interact with your device.

PRODUCT OVERVIEW

The BoxWave DualTip Capacitive Stylus features a metallic aluminum body and integrates two types of tips: a FiberMesh tip and a FineTouch clear disc tip. This design offers versatility for different user preferences and tasks.

Two Tips

Featuring both a Clear Disc and FiberMesh Tip, the DualTip Capacitive Stylus adapts to your needs.



Image: The DualTip Capacitive Stylus, highlighting its two distinct tips: the FiberMesh tip and the FineTouch clear disc tip.

Key Features:

- **Dual Tips:** Features both a FiberMesh soft tip and a FineTouch clear disc tip for varied use.
- **FiberMesh Soft Tip:** A tightly woven conductive fabric mesh providing pressure-sensitive feedback and durability.
- **FineTouch Pinpoint Accuracy:** An innovative clear tip allows for precise contact point visibility, ideal for detailed writing or drawing.
- **All-Angle Functionality:** Both tips operate effectively from any angle.
- **Easy Access:** Includes a built-in metal clip for convenient attachment to clothing or cases.
- **Lightweight Design:** Constructed from metallic aluminum for a comfortable and natural feel.

Two Tips for Comfort and Precision

**FineTouch Clear
Disc Tip**

**EverTouch
FiberMesh Tip**



Image: A detailed view showing the FineTouch Clear Disc tip and the EverTouch FiberMesh tip, emphasizing their distinct designs.

SETUP

The BoxWave DualTip Capacitive Stylus is designed for immediate use without any complex setup procedures.

1. **Unpack:** Remove the stylus from its packaging.
2. **No Pairing Required:** The stylus does not require Bluetooth pairing, battery installation, or charging. It is ready to use directly on any capacitive touchscreen device.
3. **Tip Protection:** The FineTouch clear disc tip is protected by a threaded cap. Unscrew the cap before use.



Threaded Cap

Protects DualTip Stylus Tip

Image: The stylus with its threaded cap removed, revealing the FineTouch clear disc tip, ready for use.

OPERATING INSTRUCTIONS

Using the DualTip Capacitive Stylus is intuitive and similar to using your finger, but with enhanced precision.

1. Select a Tip:

- For general navigation, swiping, and a soft touch, use the **FiberMesh tip**.
- For precise writing, drawing, or selecting small icons, unscrew the cap and use the **FineTouch clear disc tip**. The clear disc allows you to see exactly where your input is registered on the screen.

2. **Interaction:** Gently tap, swipe, or draw on your device's capacitive touchscreen as you would with your finger. The stylus simulates finger input.

3. **Angle of Use:** Both tips are designed to work effectively from any angle, providing flexibility during use.

4. **Storage:** When not using the FineTouch tip, replace the threaded cap to protect it.



Image: A user demonstrating the stylus in action on a tablet, showcasing its natural and comfortable use for various tasks.

MAINTENANCE

Proper care will extend the life and performance of your stylus.

- **Cleaning:** Wipe the stylus body and tips with a soft, dry, lint-free cloth. Avoid using harsh chemicals or abrasive materials.
- **Tip Care:**
 - Ensure the FiberMesh tip remains clean and free of debris for optimal conductivity.
 - Always replace the threaded cap on the FineTouch clear disc tip when not in use to prevent damage.
- **Storage:** Store the stylus in a clean, dry place away from extreme temperatures. The built-in metal clip can be used to secure it to a pocket or case.

TROUBLESHOOTING

If you encounter issues with your stylus, consider the following:

- **Stylus Not Responding:**

- Ensure your device's screen is clean and free of smudges or debris.
- Verify that the stylus tip is clean.
- Confirm your device's touchscreen is functioning correctly with finger input.
- The stylus is passive and does not require power; if it's not working, the issue is likely with the screen or tip cleanliness.

- **Inaccurate Input:**

- For the FineTouch tip, ensure the clear disc is making full contact with the screen.
- Clean both the stylus tip and the device screen.

SPECIFICATIONS

Brand	BoxWave
Model	DualTip Capacitive Stylus
Compatibility	Universal for capacitive touchscreens (e.g., Sjoybring JOY-A018)
Tip Types	FiberMesh Tip, FineTouch Clear Disc Tip
Material	Metallic Aluminum Body
Weight	1.3 ounces

WARRANTY AND SUPPORT

BoxWave products are designed for quality and reliability. For support or inquiries regarding your DualTip Capacitive Stylus, please refer to the following:

- **Technical Support:** Limited 3rd party technical support for your device is included (up to 3 inquiries via messaging). This support is not affiliated with or endorsed by Sjoybring.
- **Manufacturer:** BoxWave Corporation
- **Contact:** For further assistance, please visit the official BoxWave website or contact their customer service through the retailer where the product was purchased.

© 2023 BoxWave Corporation. All rights reserved.

This manual is for informational purposes only. BoxWave reserves the right to make changes to product specifications without prior notice.