

Thule 10101976

Thule Urban Glide 4-Wheel Stroller User Manual

Model: 10101976

PRODUCT OVERVIEW

The Thule Urban Glide 4-wheel is an all-terrain stroller designed for urban environments and various terrains. It offers a blend of comfort, functionality, and ample storage, suitable for newborns and toddlers. Its design prioritizes maneuverability for navigating tight spaces and diverse surfaces.



Image: The Thule Urban Glide 4-Wheel Stroller in black, showcasing its sleek design and four large wheels.

Key Features:

- **All-Terrain Capability:** Designed for both city streets and rougher terrains with large 16-inch air-filled tires and a full-suspension system.
- **Adjustable Handlebar:** Ergonomic and adjustable handle for comfortable pushing, suitable for various user heights.
- **Compact Fold:** Features a one-handed compact fold with a self-standing design for easy storage and transport.
- **Enhanced Safety:** Includes a padded 5-point harness, foot-activated parking brake, and reflective details on the canopy and wheels for visibility.
- **Comfort for Child:** Offers a comfortable, near-flat reclining seat with a built-in leg rest and a large full-coverage canopy with a peek-a-boo window.
- **Ample Storage:** Equipped with a large storage basket with a zipper cover to secure belongings.

- **Car Seat Compatibility:** Can be used from birth with Thule Bassinet, Car Seat Adapter(s), or Newborn Inlay/Nest Accessories (sold separately).



Image: The stroller shown with a bassinet attachment, demonstrating its adaptability for newborns with separately sold accessories.

SETUP AND ASSEMBLY

Before first use, ensure all components are present and correctly assembled. Assembly is generally straightforward, primarily involving attaching the wheels and canopy.

1. **Unpacking:** Carefully remove all components from the packaging. Verify that all parts listed in the packing list are present.
2. **Wheel Attachment:**
Attach the rear wheels by pressing the release button (if present) and sliding the wheel axle into the designated slot until it clicks securely into place. Repeat for both rear wheels.
For the front wheels, align the wheel posts with the front fork openings and push firmly until they lock. Ensure all wheels rotate freely and are securely attached by gently pulling on them.



Image: Close-up view of the stroller's front wheels, highlighting their robust design for all-terrain use.

3. **Canopy Installation:** Attach the canopy to the designated points on the stroller frame. Ensure it is securely fastened and can be adjusted smoothly.
4. **Handlebar Adjustment:** Adjust the handlebar to a comfortable height using the adjustment mechanism. Refer to the "Operating" section for details on handlebar adjustment.
5. **Safety Check:** Before first use, perform a thorough safety check. Ensure all locking mechanisms are engaged, wheels are secure, and the harness functions correctly.

Opening and Folding the Stroller:

- **Opening:** Release the folding latch. Hold the handlebar and lift the stroller until it fully extends and locks into the open position. Ensure all frame locks are engaged before placing a child in the stroller.
- **Folding:** Locate the folding mechanism (typically near the handlebar or seat). Activate the release and guide the stroller frame downwards until it collapses into a compact, self-standing position.



Image: The stroller shown in its compact, folded state, demonstrating its ease of storage and transport.

Adjusting the Handlebar:

The handlebar height can be adjusted to suit the user's preference. Locate the adjustment buttons or levers on the sides of the handlebar. Press or release them and pivot the handlebar to the desired angle. Ensure it locks securely in place before use.



Image: A visual representation of the adjustable handlebar, showing its range of motion for ergonomic comfort.

Braking System:

- **Parking Brake:** The foot-activated parking brake is located near the rear wheels. Press down firmly on the brake pedal to engage it. Ensure the stroller is stationary before releasing your grip. To disengage, lift the pedal.
- **Hand Brake:** For speed control, especially during jogging or downhill travel, use the convenient twist hand brake located on the handlebar. Gently twist the lever to apply braking force.

Seat Recline and Harness:

- **Seat Recline:** The seat offers a near-flat recline position. Adjust the recline using the strap mechanism located

behind the seat. This allows for comfortable naps on the go.



Image: The stroller seat reclined, demonstrating the comfortable position for a child, ideal for naps.

- **5-Point Harness:** Always secure your child with the adjustable padded 5-point harness. Ensure the straps are snug but not too tight, and the buckle is fully engaged. Adjust shoulder strap height as your child grows.

Canopy and Storage:

- **Canopy:** Extend the full-coverage canopy to protect your child from sun and elements. Utilize the peek-a-boo window to check on your child without disturbing them.
- **Storage Basket:** The large storage basket beneath the seat features a zipper cover. Use this for carrying essentials. Do not exceed the maximum weight capacity of 34 kg (75 lbs) for the stroller, including cargo.



Image: A view of the stroller's spacious, covered cargo basket, designed for secure storage of personal items.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your Thule Urban Glide 4-Wheel Stroller.

- **Cleaning:**
 - **Fabric Parts:** Clean fabric parts with a mild soap and water solution. Do not use harsh detergents or bleach. Air dry thoroughly.
 - **Frame:** Wipe the frame with a damp cloth. Dry immediately to prevent rust.
 - **Wheels:** Keep wheels clean and free of dirt and debris. Periodically remove wheels for thorough cleaning of axles and bearings.
- **Lubrication:** Periodically lubricate moving parts such as wheel axles and folding mechanisms with a silicone-based

lubricant. Avoid lubricating brake components.

- **Tire Pressure:** Maintain proper air pressure in the tires as indicated on the tire sidewall. Under-inflated tires can affect maneuverability and ride comfort.
- **Storage:** Store the stroller in a dry, cool place away from direct sunlight and extreme temperatures. If storing for an extended period, ensure it is clean and dry.
- **Inspections:** Regularly inspect the stroller for any signs of wear, damage, or loose parts. Pay close attention to the harness, brakes, wheels, and frame connections. If any damage is found, discontinue use and contact customer support.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Stroller pulls to one side	Uneven tire pressure; Bent wheel axle; Debris in wheel mechanism.	Check and adjust tire pressure. Inspect wheels for damage or debris and clean if necessary. If problem persists, contact support.
Brake not engaging/disengaging properly	Debris in brake mechanism; Cable tension issue (hand brake); Worn brake components.	Clean brake mechanism. For hand brake, check cable tension (refer to specific instructions if available). If issues persist, seek professional service.
Stroller difficult to fold/unfold	Mechanism dirty or dry; Latch obstruction.	Clean and lubricate folding mechanisms. Ensure no fabric or debris is obstructing the latch.
Wheels squeak or are stiff	Lack of lubrication; Dirt/debris in bearings.	Clean wheels and axles. Apply silicone-based lubricant to axles.

SPECIFICATIONS

Feature	Detail
Model Number	10101976
UPC	872299049639
Stroller Type	Jogging Stroller, All-Terrain
Seating Capacity	1 Child
Maximum Child Weight	22 kg (48.5 lbs)
Maximum Stroller Capacity (Child + Cargo)	34 kg (75 lbs)
Stroller Weight	13 kg (28.7 lbs)
Dimensions (L x W x H)	43.3" x 27.2" x 44.9"
Folded Size (L x W x H)	34.6" x 22.8" x 11"
Wheel Diameter (Front/Rear)	16 inches (Air-filled tires)
Harness Type	5-Point Padded Harness

Feature	Detail
Frame Material	Aluminum
Seat Material	Fabric
Brake System	Foot-activated parking brake, Hand brake
Car Seat Compatible	Yes (with adapters, sold separately)



Image: Diagram showing the key dimensions of the Thule Urban Glide 4-Wheel Stroller.

WARRANTY AND SUPPORT

Warranty Information:

The Thule Urban Glide 4-Wheel Stroller comes with a **Limited Lifetime Warranty** from the manufacturer. This warranty covers defects in materials and workmanship under normal use and service. Please retain your proof of purchase for warranty claims.

For detailed warranty terms and conditions, please refer to the official Thule website or contact Thule customer service directly.

Customer Support:

For technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact Thule customer support:

- **Thule Official Website:** www.thule.com
- Refer to the website for regional contact information, phone numbers, and email support.

When contacting support, please have your stroller's model number (10101976) and UPC (872299049639) readily available.