

B0CVQL3BGY

The Zenith Multipurpose Vegetable Chopper User Manual

Model: B0CVQL3BGY

1. PRODUCT OVERVIEW

The Zenith Multipurpose Vegetable Chopper is designed for efficient and effortless chopping of various ingredients. It features sharp stainless steel blades, a comfortable grip lid, an anti-skid base, and an easy pull cord mechanism. This compact chopper is suitable for vegetables, fruits, herbs, spices, cooked meat, fish, nuts, and cheese, helping maintain consistency in your meals.

VISIBLE DETAILS



Image 1.1: Visible Details of the Zenith Chopper. This image highlights key components such as the pulling handle for a comfortable grip, an extra-thick rope for durability, an easy fasten lock for stability, a 2-cup capacity container for easy

storage, 3 curved blades for efficient chopping, and an anti-slip base for sturdy operation.

Key Features:

- **Effortless Chopping:** Designed for quick and easy preparation of vegetables and fruits.
- **Precision Blades:** Equipped with three sharp stainless steel blades for efficient and precise cutting.
- **Compact and Practical:** 400 ml capacity, ideal for smaller chopping tasks.
- **Controlled Consistency:** Manual pull cord mechanism allows users to achieve desired chopping texture.
- **Durable Construction:** Crafted from robust polypropylene material for long-lasting use.

2. SAFETY INSTRUCTIONS

- Always handle the blades with extreme care. They are very sharp.
- Keep the chopper out of reach of children.
- Ensure the lid is securely fastened before operating the chopper.
- Do not overfill the container.
- Avoid chopping extremely hard ingredients like ice or frozen foods, as this may damage the blades or mechanism.
- Do not immerse the lid mechanism in water. Clean with a damp cloth.
- Use on a stable, flat surface.

3. SETUP

Before first use, wash all parts that come into contact with food (container, blades, lid underside) with warm soapy water. Rinse thoroughly and dry.

1. Place the anti-slip base of the transparent container on a stable surface.
2. Carefully place the blade assembly onto the central pin inside the container.
3. Add your ingredients into the container, ensuring they are cut into smaller, manageable pieces (approximately 1-2 inches) to prevent jamming. Do not fill above the maximum fill line.
4. Align the lid with the container and twist or press down firmly to secure the easy fasten lock. Ensure it is properly sealed.

4. OPERATING INSTRUCTIONS

Once the chopper is assembled and filled with ingredients, you can begin chopping.



HOW
TO
USE



Image 4.1: Step-by-step guide on how to use the Zenith Chopper. This image illustrates placing ingredients, securing the lid, pulling the handle, and checking the chopped results.

1. Hold the chopper firmly with one hand on the lid.
2. With your other hand, grasp the pulling handle of the cord.
3. Pull the cord horizontally in a swift, continuous motion. The blades will rotate, chopping the ingredients.
4. Release the cord, allowing it to retract fully.
5. Repeat the pulling motion until the desired consistency is achieved. The more times you pull, the finer the chop.
6. After chopping, carefully remove the lid, then remove the blade assembly before emptying the contents.



	+15 PULL			+15 PULL	
	+20 PULL			+20 PULL	
	+25			+25	



Image 4.2: Chopping consistency guide for the Zenith Chopper. This image provides examples of different chopping results based on the number of pulls for various ingredients like tomatoes, garlic, onions, avocado, carrots, and cooked meat.

Tips for Best Results:

- For a coarse chop, pull the cord 5-10 times.
- For a medium chop, pull the cord 10-15 times.
- For a fine chop or puree, pull the cord 15-25 times.
- If the cord becomes difficult to pull, the container may be overfilled or ingredients are too large. Remove some ingredients or cut them smaller.
- Periodically shake the chopper gently to redistribute ingredients for even chopping.

5. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your chopper.

1. **Disassembly:** After use, carefully remove the lid and then the blade assembly.
2. **Blade Cleaning:** Rinse the blades under running water immediately after use to prevent food from drying on them. Use a brush if necessary, but avoid direct contact with hands due to sharpness.
3. **Container and Lid Cleaning:** The transparent container and the underside of the lid can be washed with warm soapy water. Rinse thoroughly.
4. **Lid Mechanism:** The top part of the lid containing the pull cord mechanism should **not** be immersed in water. Wipe it clean with a damp cloth and dry immediately.
5. **Drying:** Ensure all parts are completely dry before reassembling or storing to prevent rust on blades and bacterial growth.
6. **Storage:** Store the chopper in a dry place. For safety, always store the blade assembly inside the container with the lid secured.

6. TROUBLESHOOTING

- **Chopper not working / Cord stuck:**
 - Ensure the lid is securely fastened.
 - Check if the container is overfilled. Remove some ingredients.
 - Ingredients might be too large or too hard. Cut them into smaller, softer pieces.

- The blade assembly might be jammed. Carefully remove and re-insert it.
- **Uneven chopping:**
 - Ensure ingredients are evenly distributed. Gently shake the chopper during operation.
 - Do not overfill the container.
- **Blades not rotating:**
 - Check if the blade assembly is correctly seated on the central pin.
 - Ensure no large pieces of food are blocking the blade rotation.

7. SPECIFICATIONS

Brand	Generic (The Zenith)
Model Number	B0CVQL3BGY
Capacity	400 ml (2 Cup)
Material	Polypropylene (Plastic)
Blades	3 Stainless Steel Blades
Color	Multicolor (Peach chopper)
Product Dimensions (L x W x H)	12L x 12W x 9H Centimeters
Country of Origin	India

8. WARRANTY AND SUPPORT

This product is designed for durability and performance. For any manufacturing defects or issues, please contact the manufacturer directly.

- **Manufacturer:** #510, Randhwa Road Kharar
- **Contact Information:** 9855544636
- **Return Policy:** Please refer to your retailer's return policy for details regarding returns or exchanges.