

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Kenmore](#) /

› [Kenmore 46-75515 Counter-Depth French Door Refrigerator/Freezer User Manual](#)

Kenmore 46-75515

Kenmore 46-75515 Refrigerator/Freezer Instruction Manual

Counter-Depth French Door Refrigerator/Freezer with Fingerprint-Resistant Stainless Steel

INTRODUCTION

This manual provides detailed instructions for the installation, operation, maintenance, and troubleshooting of your Kenmore 46-75515 Counter-Depth French Door Refrigerator/Freezer. Please read this manual thoroughly before using your appliance to ensure safe and efficient operation. Keep this manual for future reference.





Image: Front view of the Kenmore 46-75515 Counter-Depth French Door Refrigerator/Freezer, showcasing its sleek stainless steel finish and French door design.

SETUP AND INSTALLATION

Unpacking

Carefully remove all packaging materials, tape, and protective film from the refrigerator. Dispose of packaging materials responsibly. Ensure no parts are left inside the appliance.

Location Requirements

Choose a location that is level, stable, and strong enough to support the refrigerator's weight (approximately 232 pounds). Allow adequate clearance for proper air circulation and door opening. Refer to the dimensions below:

- **Product Dimensions (D x W x H):** 30.36 x 36 x 70.3 inches



Image: A diagram illustrating the height, width, and depth measurements of the Kenmore 46-75515 refrigerator, crucial for proper installation planning.

Electrical Connection

Connect the refrigerator to a dedicated 115 Volt, 60 Hz, 15 Amp grounded electrical outlet. Do not use extension cords or adapter plugs. Ensure the power cord is not pinched or damaged.

Leveling

Use the adjustable leveling legs at the bottom of the refrigerator to ensure it is perfectly level. This prevents vibrations and ensures proper door sealing.

Initial Startup

After installation, plug in the refrigerator. Allow at least 4 hours for the internal temperature to stabilize before loading food. The ice maker will begin producing ice within 24 hours.

OPERATING INSTRUCTIONS

Control Panel

The internal control panel allows you to set and monitor the refrigerator and freezer temperatures. It also features the Accela Chill function for rapid cooling.



LED Lighting

Energy-efficient, long-lasting LED Lighting casts a warm, natural light on the refrigerator's interior making sure nothing is lost in dark corners.

Image: A detailed view of the refrigerator's internal control panel, displaying current temperature settings for both the refrigerator and freezer compartments.

Accela Chill Function

The Accela Chill feature uses fan-forced cool air to accelerate cooling, which is ideal when adding a large quantity of new items or after extended door openings. Activate this function via the control panel.

Ice Maker Operation

Your refrigerator is equipped with a factory-installed ice maker that produces up to 4 lbs of crescent-shaped ice per day. Ensure the water supply is connected and the ice maker is switched to the 'ON' position.



Stainless Steel Finish

Fingerprint-resistant finish that cleans easily with a damp cloth.

Image: The integrated ice maker, showing a bin full of crescent-shaped ice, ready for use.

Adjustable Shelves

The refrigerator features adjustable full-width glass shelves, allowing you to customize the interior space to accommodate taller items and optimize storage.



Customize Your Space

Adjustable glass shelving helps keep you organized and lets you make room for taller items, whenever needed.

Image: The interior of the refrigerator with clear glass shelves, demonstrating their adjustable nature for flexible storage.

Crisper and Pantry Drawer Usage

Utilize the clear humidity-controlled crisper drawers to keep fruits and vegetables fresh for longer. The full-width pantry drawer is ideal for storing deli trays and platters.



Storage For All Your Needs

Keep fruits and veggies fresh in the humidity-controlled crisper drawer, while the full-width pantry drawer provides easy access to platters and deli trays.

Image: A view of the refrigerator's lower section, highlighting the humidity-controlled crisper drawers and the spacious full-width pantry drawer, designed for optimal food storage.

LED Lighting

Energy-efficient LED lighting illuminates the refrigerator's interior, providing clear visibility of contents.

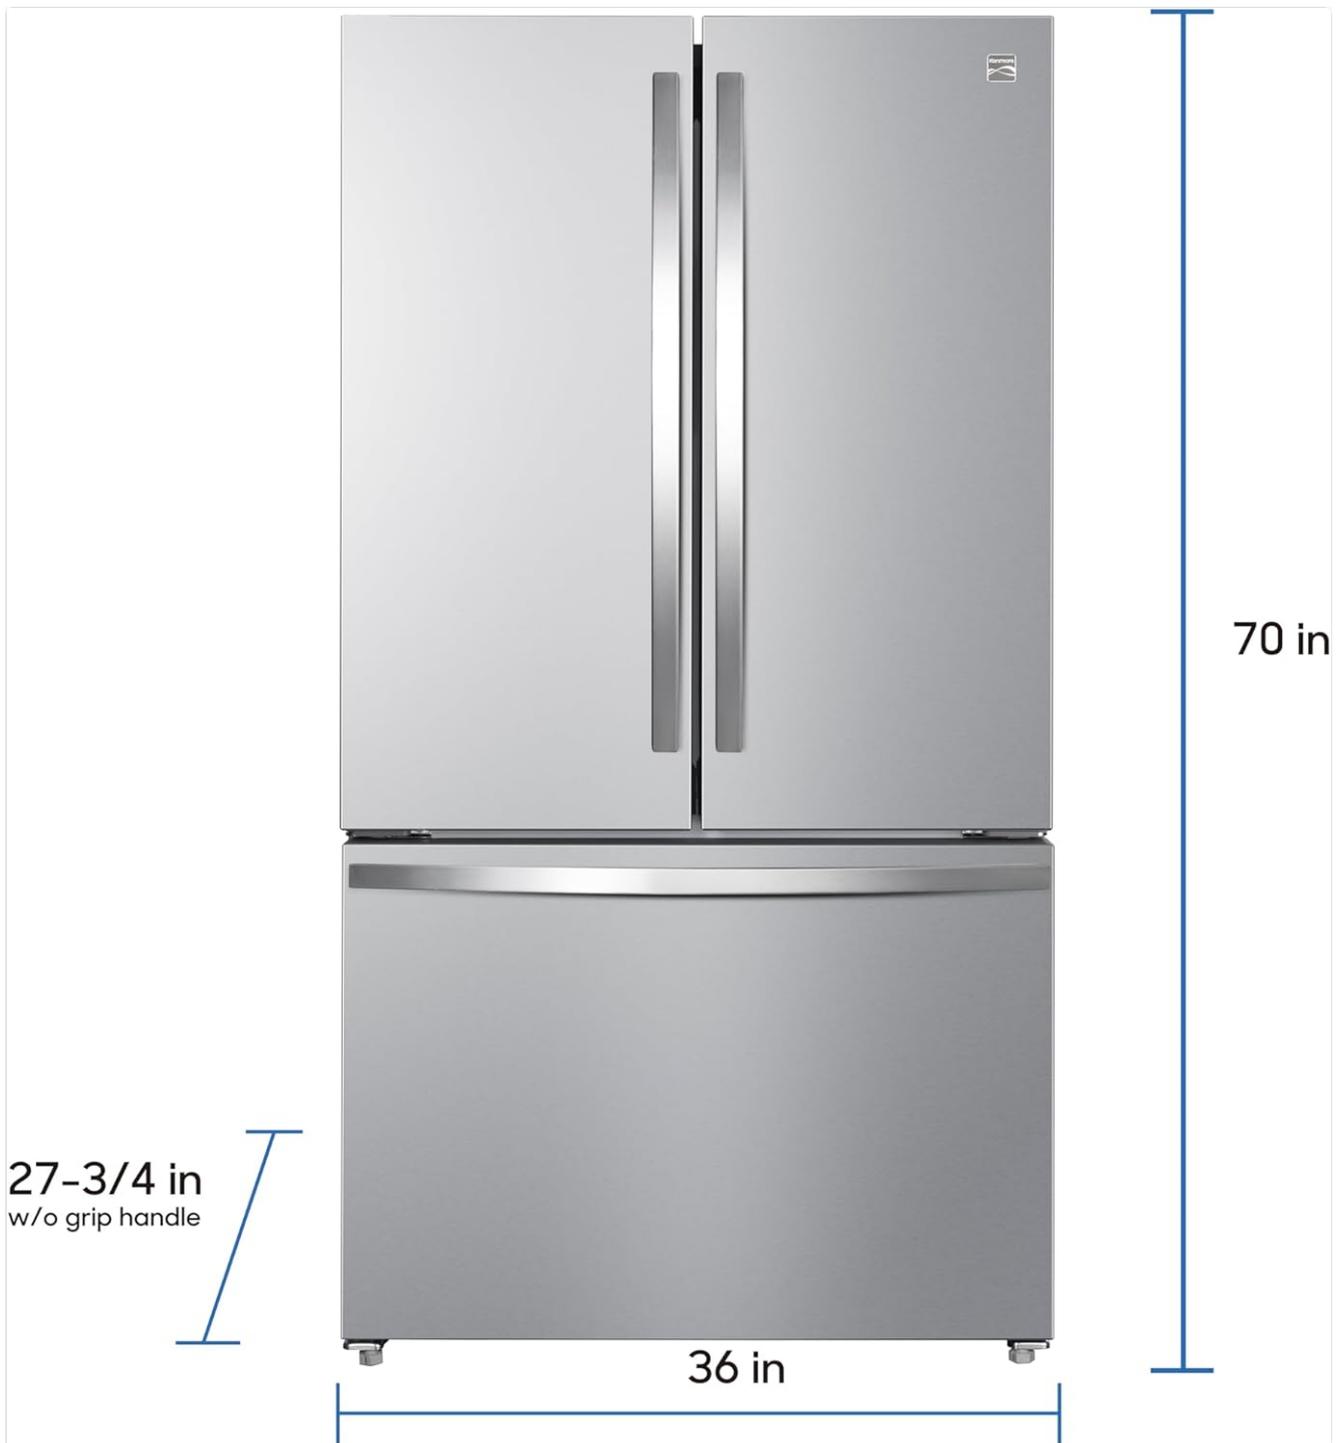


Image: A close-up of the bright, energy-efficient LED lighting strip located at the top of the refrigerator compartment, ensuring clear visibility.

CARE AND MAINTENANCE

Cleaning

The fingerprint-resistant stainless steel exterior can be cleaned easily with a damp cloth and mild detergent. For the interior, use a solution of baking soda and water. Avoid abrasive cleaners or harsh chemicals.



Image: A hand demonstrating the fingerprint-resistant quality of the refrigerator's stainless steel finish, highlighting its ease of cleaning.

Defrosting

This refrigerator features an automatic defrost system, eliminating the need for manual defrosting of the freezer compartment.

Energy Efficiency Tips

- Keep the refrigerator full but not overloaded for optimal energy use.
- Avoid frequent or prolonged door openings.
- Ensure the door seals are clean and intact.
- Clean the condenser coils regularly (refer to a professional if unsure).

TROUBLESHOOTING GUIDE

Before contacting customer service, review the following common issues and their solutions:

Problem	Possible Cause	Solution
Refrigerator not cooling	Power supply issue, temperature setting too high, blocked vents.	Check power connection, adjust temperature, ensure vents are clear.
Ice maker not producing ice	Water supply off, ice maker switch off, clogged water line.	Verify water supply, turn on ice maker switch, check for kinks in water line.
Unusual noises	Refrigerator not level, items vibrating inside, normal operating sounds.	Level the refrigerator, rearrange items, note that inverter compressors operate quietly but may have varied sounds.
Water leakage	Clogged drain tube, loose water connection.	Clear drain tube, tighten water connections.
Doors not closing properly	Obstruction, refrigerator not level, misaligned doors.	Remove obstruction, level the unit, adjust door hinges if necessary.

PRODUCT SPECIFICATIONS

Feature	Specification
Brand	Kenmore
Model Number	46-75515
Item Weight	232 pounds
Product Dimensions (D x W x H)	30.36 x 36 x 70.3 inches
Total Capacity	20.3 Cubic Feet
Refrigerator Fresh Food Capacity	14.2 Cubic Feet
Freezer Capacity	6.1 Cubic Feet
Annual Energy Consumption	539 Kilowatt Hours Per Year
Installation Type	Freestanding
Special Features	Adjustable Shelves, Energy Efficient, Frost Free
Color	Stainless Steel
Voltage	115 Volts
Crispers/Drawers	3
Defrost Type	Automatic
Door Material Type	Stainless Steel
Shelf Type	Glass
Number of Shelves	3

Feature	Specification
Certification	ENERGY STAR® Certified

WARRANTY AND CUSTOMER SUPPORT

For specific warranty details and terms, please refer to the warranty card included with your product or visit the official Kenmore website. Keep your purchase receipt as proof of purchase for any warranty claims.

If you require technical assistance or have questions not covered in this manual, please contact Kenmore customer support. Contact information can typically be found on the manufacturer's website or on your product registration materials.