

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Kenmore](#) /

› [Kenmore 46-75525 French Door Refrigerator/Freezer User Manual](#)

Kenmore 46-75525

Kenmore 46-75525 Counter-Depth French Door Refrigerator/Freezer User Manual

Model: 46-75525

INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Kenmore 46-75525 Counter-Depth French Door Refrigerator/Freezer. Please read all instructions carefully before using the appliance. The Kenmore 46-75525 is a 17.5 cu. ft. capacity refrigerator featuring a fingerprint-resistant stainless steel finish, French doors, and a counter-depth design. It includes an Accela Chill system, a factory-installed ice maker, adjustable glass shelves, and an energy-efficient inverter compressor.

SAFETY INFORMATION

Always follow basic safety precautions when using this appliance to reduce the risk of fire, electric shock, or injury. Keep flammable materials and vapors away from the refrigerator. Ensure proper grounding. Do not store explosive substances. Unplug the appliance before cleaning or performing maintenance.

SETUP AND INSTALLATION

Unpacking

Carefully remove all packaging materials, including tape and protective films. Inspect the refrigerator for any shipping damage. Retain packaging materials until you are satisfied with the product.

Location Requirements

Place the refrigerator on a level, sturdy floor capable of supporting its weight. Ensure adequate clearance around the unit for proper air circulation and door opening. Avoid direct sunlight or heat sources. The dimensions are approximately 31.77"D x 29.88"W x 70.3"H.



Stylish and Modern

Refrigeration in the world of Kenmore means the flexibility to organize just the way you like.

Front view of the Kenmore 46-75525 French Door Refrigerator, showcasing its sleek stainless steel finish and handles.





Diagram showing the front view of the Kenmore 46-75525 refrigerator with key dimensions: 70 inches height and 29-7/8 inches width.

Leveling the Appliance

Use the adjustable leveling legs at the bottom of the refrigerator to ensure it is stable and level. This prevents vibrations and ensures proper door sealing.

Electrical Connection

Connect the refrigerator to a dedicated, grounded 115 Volt, 60 Hz AC outlet. Do not use extension cords or adapter plugs.

Initial Cooling

Allow the refrigerator to cool for at least 4 hours before loading food. The inverter compressor ensures consistent temperature and quiet operation.

OPERATING INSTRUCTIONS

Temperature Control

The refrigerator features an internal control panel to set desired temperatures for both the refrigerator and freezer compartments. Adjust settings as needed for optimal food preservation.



Factory Installed Ice Maker

Keep drinks nice and cold with the pre-installed ice maker. This convenient integrated ice maker produces up to 4 lbs. of crescent shaped ice per day.

Close-up of the internal temperature control panel, displaying current refrigerator and freezer temperatures.

Accela Chill Feature

Activate Accela Chill for accelerated cooling, ideal when adding a large quantity of new items or after extended door openings. This feature uses fan-forced cool air to quickly lower temperatures.

Ice Maker Operation

The factory-installed ice maker produces up to 4 lbs. of crescent-shaped ice per day. Ensure the water supply is connected and the ice maker is switched on for operation.



Customize Your Space

Adjustable glass shelving helps keep you organized and lets you make room for taller items, whenever needed.

View of the ice maker bin filled with crescent-shaped ice, located within the freezer compartment.

Adjustable Shelving and Storage

The refrigerator features adjustable full-width glass shelves and deep gallon-sized door bins for flexible storage. The crisper drawers are designed to maintain optimal humidity for fruits and vegetables.



Storage For All Your Needs

Keep fruits and veggies fresh in the humidity-controlled crisper drawer, while the full-width pantry drawer provides easy access to platters and deli trays.

Interior view of the refrigerator showing the clear adjustable glass shelves, allowing for customized storage configurations.



LED Lighting

Energy-efficient, long-lasting LED Lighting casts a warm, natural light on the refrigerator's interior making sure nothing is lost in dark corners.

Two clear crisper drawers designed for storing fruits and vegetables, located at the bottom of the refrigerator compartment.

LED Lighting

Energy-efficient LED lighting illuminates the interior, providing clear visibility of contents.



Stainless Steel Finish


Fingerprint-resistant finish that cleans easily with a damp cloth.

Bright LED lighting strip located at the top of the refrigerator compartment, illuminating the contents.

MAINTENANCE AND CARE

Cleaning the Exterior

The fingerprint-resistant stainless steel finish can be cleaned with a soft cloth and mild detergent. Avoid abrasive cleaners or scouring pads.

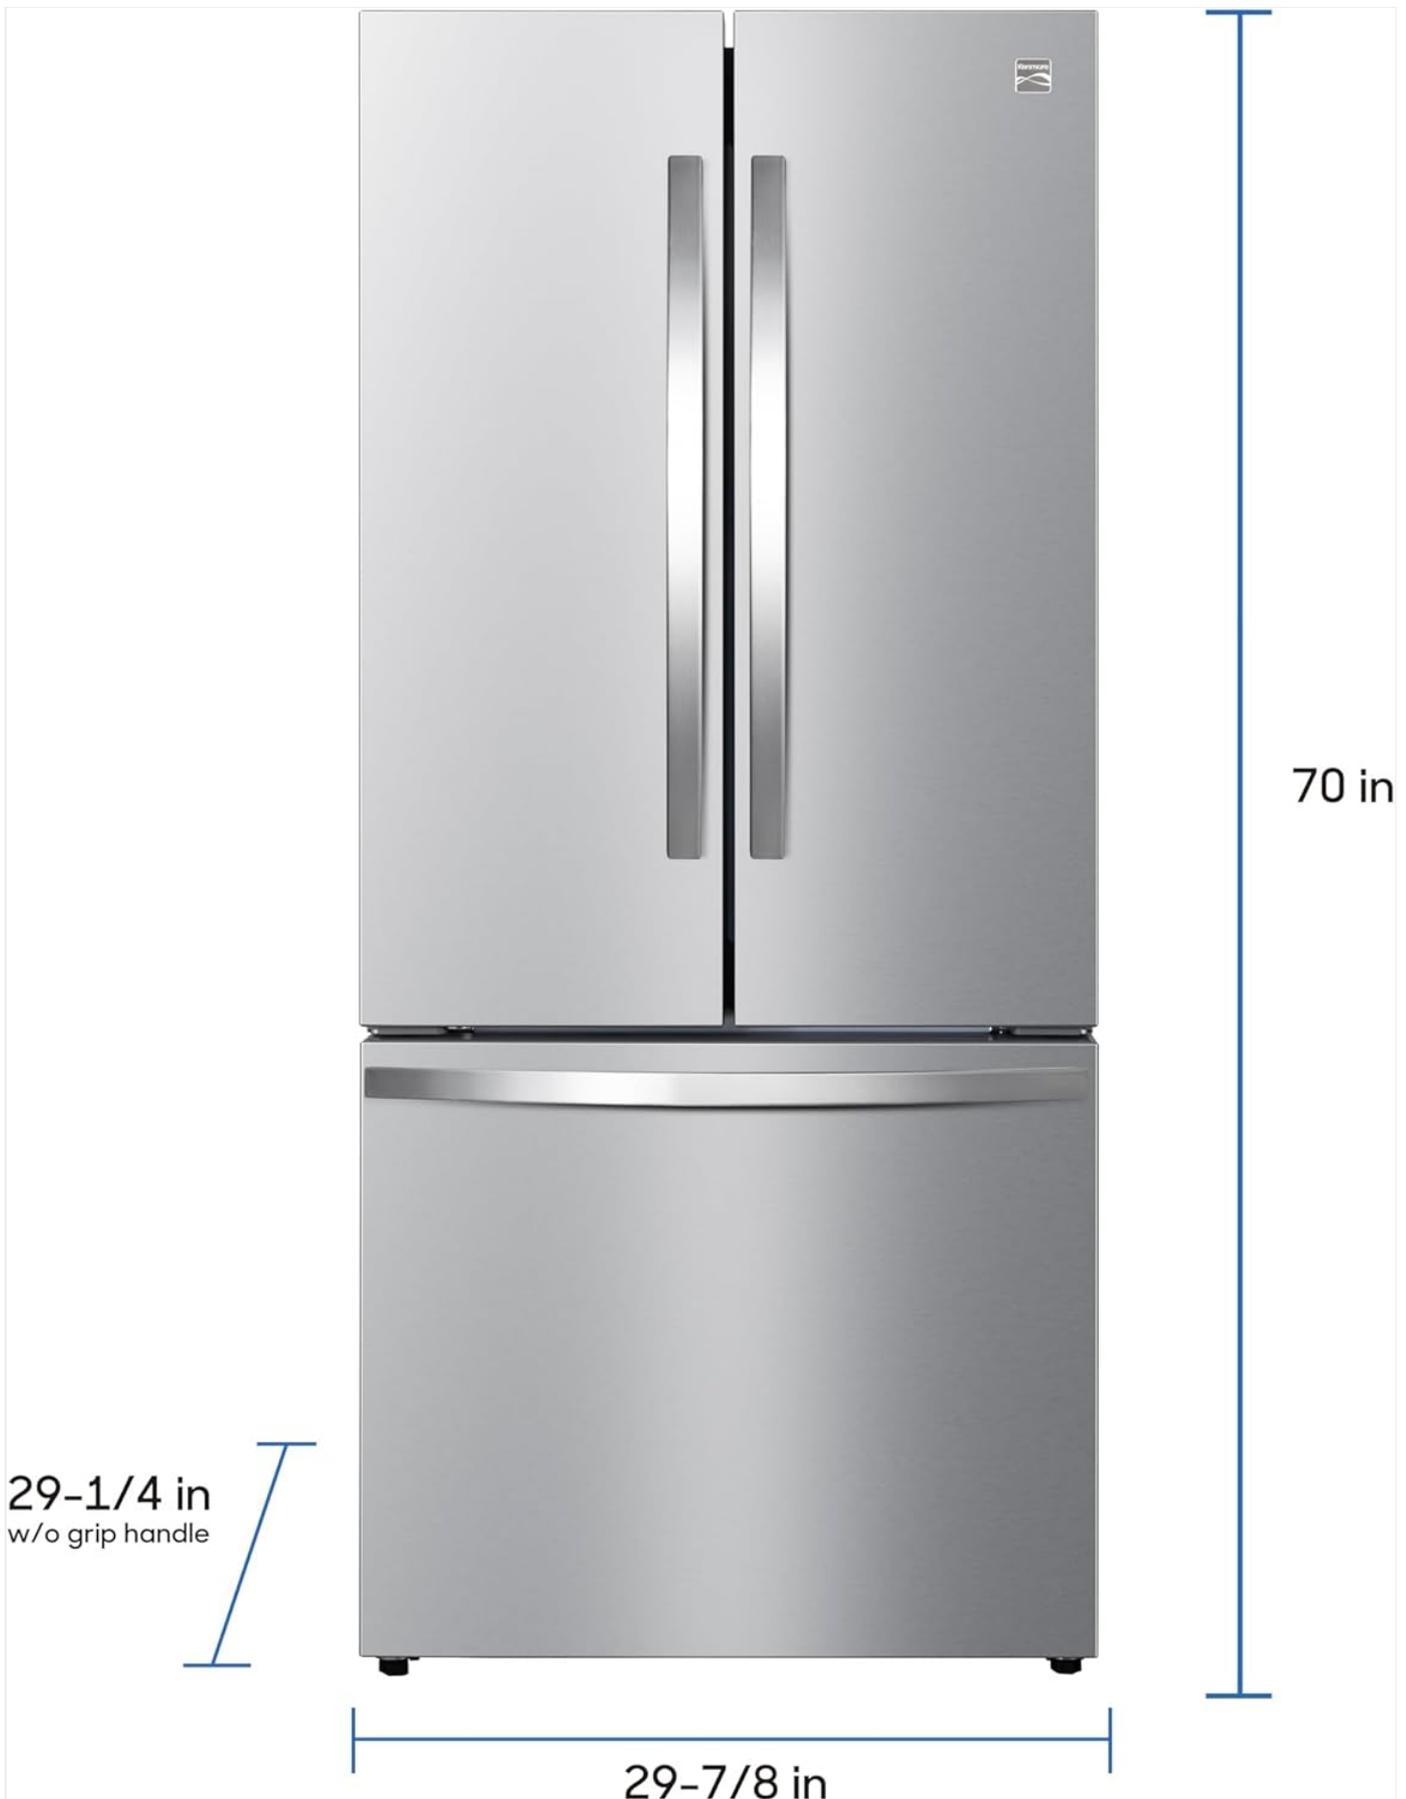

A hand demonstrating the fingerprint-resistant quality of the stainless steel finish on the refrigerator door.

Cleaning the Interior

Clean interior surfaces, shelves, and drawers regularly with a solution of mild soap and warm water. Rinse and dry thoroughly. Remove crisper drawers and door bins for easier cleaning.

Condenser Coil Cleaning

Periodically clean the condenser coils located at the back or bottom of the refrigerator to ensure efficient operation. Refer to the full service manual for detailed instructions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Refrigerator not cooling	Power supply issue, temperature setting too high, blocked vents, excessive door openings.	Check power connection, adjust temperature, ensure proper air circulation, minimize door openings. If problem persists, contact service.
Ice maker not producing ice	Water supply off, ice maker switch off, clogged water line.	Verify water supply connection, ensure ice maker switch is ON, check for kinks in water line.
Unusual noises	Appliance not level, items vibrating inside, normal operating sounds (e.g., refrigerant flow, defrost cycle).	Level the refrigerator, rearrange items, understand that some sounds are normal. If noise is excessive or unusual, contact service.
Water leakage	Clogged defrost drain, loose water line connection.	Clear defrost drain, tighten water line connections.

SPECIFICATIONS

- **Brand:** Kenmore
- **Model:** 46-75525 (also 897.75525320)
- **Capacity:** 17.5 Cubic Feet (Total)
- **Refrigerator Fresh Food Capacity:** 12.4 Cubic Feet
- **Freezer Capacity:** 5.1 Cubic Feet
- **Dimensions (D x W x H):** 31.77 x 29.88 x 70.3 inches
- **Item Weight:** 189.6 pounds
- **Installation Type:** Freestanding
- **Color:** Fingerprint Resistant Stainless Steel
- **Voltage:** 115 Volts
- **Annual Energy Consumption:** 512 Kilowatt Hours Per Year
- **Certification:** ENERGY STAR® Certified
- **Special Features:** Adjustable Shelves, Energy Efficient, Frost Free
- **Defrost System:** Frost Free
- **Number of Doors:** 2 (French Door)
- **Shelf Type:** Glass
- **Number of Shelves:** 3
- **Crispers/Drawers:** 2

WARRANTY INFORMATION

This Kenmore appliance comes with a limited warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included with your product or visit the official Kenmore website. Keep your proof of purchase for

warranty claims.

CUSTOMER SUPPORT

For technical assistance, parts, or service, please contact Kenmore customer support. Have your model number (46-75525) and serial number ready when contacting support.

Online Support: Visit the official Kenmore website for FAQs, troubleshooting guides, and service scheduling.

Phone Support: Refer to your product documentation for the most current customer service phone numbers.

