

[Manuals.plus](#) /

› [Goplus](#) /

› Goplus Electric Lawn Mower User Manual

Goplus 10033US



Goplus Electric Lawn Mower

MODEL: 10033US - USER MANUAL

1. Introduction

Thank you for choosing the Goplus Electric Lawn Mower. This manual provides essential information for the safe and efficient operation, assembly, maintenance, and troubleshooting of your new lawn mower. Please read this manual thoroughly before first use and keep it for future reference.



Image: The Goplus Electric Lawn Mower, featuring its compact design and red and black color scheme.

2. Safety Instructions

Always prioritize safety when operating electrical equipment. Failure to follow these instructions may result in serious injury or property damage.

- **Read the Manual:** Familiarize yourself with all controls and proper use before operating the mower.
- **Personal Protective Equipment:** Always wear appropriate eye protection, sturdy footwear, and long pants while operating the mower.
- **Clear the Area:** Before mowing, clear the area of any objects such as rocks, sticks, wires, or other debris that could be thrown by the blade.
- **Inspect the Mower:** Before each use, check the mower for any loose parts, damaged components, or worn blades. Do not operate if damaged.

- **Cord Management:** Be aware of the power cord's position at all times. Do not work towards the cable. Ensure the cord is not in the path of the cutting blade. Use a cord retainer to keep it tidy.
- **Avoid Wet Conditions:** Do not operate the mower in wet grass or rain.
- **Children and Bystanders:** Keep children and bystanders away from the mowing area.
- **Proper Storage:** Store the mower in a dry, secure place, out of reach of children.

3. Package Contents

Verify that all items are present and in good condition upon opening the package:

- 1 x Goplus Electric Lawn Mower Unit
- 1 x Grass Collection Box
- 1 x User Guide (This Manual)

4. Setup and Assembly

Follow these steps to assemble your Goplus Electric Lawn Mower:

1. **Attach the Wheels:** Securely attach the wheels to the mower body. Ensure they are firmly in place for stable operation.



Image: Close-up of the smooth wheels and the plastic coated pipe of the handle, indicating assembly points.

2. **Assemble the Handle:** Connect the handle sections and attach them to the mower unit. Use the provided fasteners to ensure a secure connection. The handle is designed to be foldable for storage.



Image: Diagram showing the foldable handle mechanism and how it attaches to the mower body.

3. **Install the Grass Collection Box:** The large 9.3-gallon (35 L) grass collection box easily detaches and attaches to the rear of the mower. Ensure it clicks securely into place.



Image: A person attaching the large grass collection box to the rear of the lawn mower.

4. **Secure the Power Cord:** Use the integrated cord retainer on the handle to manage and secure the electric cord, preventing it from interfering with operation.



14 Inch Cutting Range

Image: A close-up view of the cord retainer on the mower's handle, designed to keep the power cord tidy and out of the way.

Assembly Demonstration Video:

Your browser does not support the video tag.

Video: Official Goplus demonstration of the electric lawn mower, including assembly steps and key features.

5. Operating Instructions

Operating your Goplus Electric Lawn Mower is straightforward with its user-friendly design.

1. **Starting the Mower:** The mower features a safe double-switch operation. To start, press the safety button and then pull the switch lever. The switch lever will automatically return to its off position when released, ensuring safety.



Image: Instructions demonstrating how to press the safety button and pull the switch lever for safe electronic starting.

2. **Adjusting Cutting Height:** The mower offers 3 adjustable cutting positions (1", 1.8", 2.5") to suit different grass types and desired lawn heights. Adjust the height by moving the lever near the wheels. For thick grass, start by mowing at the highest setting before switching to a lower setting.



Image: Visual representation of the three adjustable cutting heights (1", 1.8", 2.5") and the mechanism for adjustment.

3. **Mowing Technique:** Push the mower steadily across your lawn. The 14-inch cutting deck ensures efficient coverage. Overlap each pass slightly to avoid missed strips. Always mow away from the power cord.



Image: A person demonstrating the use of the Goplus Electric Lawn Mower in a garden setting.



Image: An overhead view showing the 14-inch cutting range of the mower's blade.

4. **Emptying the Grass Collection Box:** When the grass collection box is full, detach it from the mower. The convenient carrying handle makes it easy to transport and empty. Reattach securely before continuing to mow.



Image: A person removing and emptying the large grass collection box, highlighting its ease of use.

6. Maintenance

Regular maintenance ensures the longevity and optimal performance of your lawn mower.

- **Cleaning:** After each use, disconnect the power and clean the mower deck and grass collection box. Remove any grass clippings or debris from the blade area and vents. Use a damp cloth; do not use water jets or harsh chemicals.
- **Blade Inspection:** Periodically inspect the cutting blade for sharpness and damage. A dull or damaged blade can affect cutting performance and may need sharpening or replacement. Always disconnect power before inspecting the blade.
- **Storage:** For compact storage, detach the grass collection box and fold the handle. Store the mower in a dry, covered area to protect it from the elements.



Image: Diagram illustrating the compact dimensions of the lawn mower when the handle is folded for storage.

7. Troubleshooting

If you encounter issues with your lawn mower, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mower does not start.	No power supply; Safety switch not engaged; Overload protection activated.	Check power connection; Ensure both safety button and switch lever are pressed; Allow motor to cool down if overheated.
Poor cutting performance.	Dull or damaged blade; Cutting height too low for grass type; Grass collection box full.	Sharpen or replace blade; Adjust cutting height higher; Empty grass collection box.
Excessive vibration or noise.	Loose blade; Debris caught in blade area; Damaged motor.	Tighten blade bolts (ensure power is off); Clear debris; Contact customer support if motor is damaged.
Motor stops during operation.	Overload protection; Power interruption.	Reduce load (raise cutting height, mow slower); Check power cord and outlet.

8. Specifications

Detailed technical specifications for the Goplus Electric Lawn Mower:

Feature	Detail
Product Model	10033US

Feature	Detail
Rated Power	12 Amp / 1500 W
Voltage	110 V 60 Hz
Speed	3800 rpm
Cutting Width	14 inches
Cutting Height Positions	3 positions (1" / 1.8" / 2.5")
Grass Collection Box Capacity	9.3 gallon / 35 L
Product Dimensions (L x W x H)	44.5" x 17.5" x 40"
Product Dimensions after Folding (L x W x H)	37.5" x 17.5" x 26.5"
Net Weight	15.5 lbs
Manufacturer	Goplus
Country of Origin	China



Image: Detailed diagram showing the various dimensions of the lawn mower in both operational and folded states.

31QT Large Grass Collection box



Image: Illustration highlighting the powerful 12 AMP motor, showing its 110V Voltage, 1500W Power, 3800rpm speed, and 1012W Output.

9. Warranty and Support

For information regarding warranty coverage, technical support, or replacement parts, please refer to the documentation included with your purchase or visit the official Goplus website. You may also contact Goplus customer service directly through their official channels for assistance.

Online Support: [Visit the Goplus Store on Amazon](#)

© 2024 Goplus. All rights reserved.
This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Will a 16-gauge, 120-foot extension cord be within the safety guidelines for use with a 10-Amp, 13-inch Goplus electric lawn mower (Model ET10081GN)?

Using a 16-gauge extension cord at a length of 120 feet for a 10-Amp Goplus mower is not recommended and falls outside of standard safety guidelines for electric outdoor power tools. While the mower is...

[Read full answer](#)