

[Manuals.plus](#) /

› [Tamagotchi](#) /

› Tamagotchi Connection True Friends - Blue Graffiti and Pink Graffiti Instruction Manual

Tamagotchi 44001

Tamagotchi Connection True Friends Instruction Manual

Brand: Tamagotchi | Model: 44001

1. PRODUCT OVERVIEW

The Tamagotchi Connection True Friends set brings back the original virtual reality pet with enhanced connection play features. This set includes two unique Tamagotchi devices, one in Blue Graffiti and one in Pink Graffiti design, allowing friends to share and interact.

Your Tamagotchi character's development is influenced by your care. Engage with your virtual pet by feeding it, playing games, and providing care when it's sick to foster a strong companionship.



Image: The Tamagotchi Connection True Friends set, featuring both the blue graffiti and pink graffiti devices. Each device includes a small keychain.

Key Features:

- Nurture your Tamagotchi character and discover over 50 unique characters.
- Participate in more than 10 mini-games to keep your character happy and earn Gotchi Points.
- Collect over 150 different items for your Tamagotchi.
- Use Gotchi Points to purchase new food and other items.
- Find special passwords to unlock exclusive in-game items.
- Connect with other Tamagotchi devices to make friends, play games, and exchange gifts.
- Raise multiple generations of Tamagotchi characters through connection and marriage.

2. SETUP GUIDE

Before you begin playing with your Tamagotchi Connection, follow these steps to set up your device.

2.1. Battery Installation

Your Tamagotchi Connection device requires one LR44 battery, which is included with the product. The device also uses a CR2032 battery for internal functions.

1. Locate the battery compartment on the back of the Tamagotchi device.
2. Using a small screwdriver (not included), carefully open the battery compartment cover.
3. Insert the LR44 battery, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

2.2. Initial Device Settings

Upon first power-on or after battery replacement, you may need to set the time and date. Follow the on-screen prompts using the device's buttons to navigate and confirm your selections.



Image: A detailed view of the blue graffiti Tamagotchi Connection device, highlighting its screen and the three control buttons at the bottom.

3. OPERATING YOUR TAMAGOTCHI CONNECTION

Learn how to interact with your virtual pet and utilize all the features of your Tamagotchi Connection device.

3.1. Basic Care and Nurturing

- **Feeding:** Select the food icon to feed your Tamagotchi. Provide meals and snacks to keep its hunger and happiness levels up.

- **Playing:** Engage in mini-games to increase your Tamagotchi's happiness and earn Gotchi Points.
- **Discipline:** Discipline your Tamagotchi when it misbehaves to help it grow into a well-behaved character.
- **Curing Sickness:** If your Tamagotchi becomes sick, select the medicine icon to administer care. Prompt treatment is essential for its health.
- **Cleaning:** Clean up after your Tamagotchi to maintain a hygienic environment.

3.2. Connection Play

The Tamagotchi Connection allows you to interact with other Tamagotchi Connection devices. This feature enhances gameplay and allows for unique experiences.

- **Making Friends:** Connect with another Tamagotchi device to establish friendships between your characters.
- **Playing Games Together:** Engage in cooperative games with connected devices.
- **Exchanging Gifts:** Share items and gifts with friends' Tamagotchi characters.
- **Marriage and Generations:** Compatible Tamagotchi characters can marry and raise new generations, expanding your Tamagotchi family tree.



Image: Two Tamagotchi Connection devices, held by hands, demonstrating the connection feature between the blue and pink graffiti units.

3.3. Gotchi Points and Items

Earn Gotchi Points by playing mini-games. These points can be used to purchase various items for your Tamagotchi, including food, toys, and accessories, from the in-game shop.

3.4. Unlocking Special Items

Certain items can be unlocked by entering specific passwords. For example, a password for a "PENCIL" item is included with your product packaging. Look for it on the side flap inside the box.



Image: The rear packaging of the Tamagotchi Connection True Friends set, illustrating various features such as the number of characters, games, and items, along with details on connection play. This image also indicates where to find the "PENCIL" password.

4. MAINTENANCE

Proper care and maintenance will ensure the longevity of your Tamagotchi Connection device.

4.1. Cleaning Your Device

To clean your Tamagotchi, gently wipe the exterior with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water, as it is not waterproof.

4.2. Battery Replacement

When the screen dims or the device stops responding, it may be time to replace the LR44 battery. Follow the instructions in Section 2.1 for safe battery replacement. Dispose of used batteries responsibly.

4.3. Storage

Store your Tamagotchi Connection in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, it is recommended to remove the batteries to prevent leakage.

5. TROUBLESHOOTING

If you encounter any issues with your Tamagotchi Connection, refer to the following common troubleshooting tips.

- **Device Not Turning On:** Check if the LR44 battery is correctly installed and has sufficient charge. Try replacing the battery with a new one.
- **Screen is Blank or Dim:** This often indicates a low battery. Replace the LR44 battery.
- **Buttons Not Responding:** Ensure there is no debris lodged around the buttons. If the issue persists, try resetting the device by removing and reinserting the battery. Note that resetting may erase current game progress.
- **Connection Issues:** Ensure both devices are within close proximity and properly aligned for connection. Refer to the in-game instructions for specific connection procedures.
- **Character Not Responding:** Your Tamagotchi may be sleeping or in a specific state. Check its status. If it's sick, administer medicine.

For persistent issues not covered here, please contact customer support as detailed in Section 7.

6. SPECIFICATIONS

Feature	Detail
Model Number	44001
ASIN	B0CVSJKJXT
UPC	045557440015
Product Dimensions	1.9"L x 2.13"W x 0.75"H
Item Weight	2.08 ounces
Power Source	Battery Powered
Batteries Required	1 LR44 (included), CR2032 (included)
Display Type	LCD
Screen Size	2.15 inches
Controller Type	Push Button
Material	Acrylonitrile Butadiene Styrene, Metal, Polycarbonate, Silicone
Form Factor	Handheld
Recommended Age	6 years and up
Manufacturer	Bandai Namco Toys & Collectibles America
Release Date	July 10, 2024

7. WARRANTY AND SUPPORT

7.1. Warranty Information

Specific warranty details for the Tamagotchi Connection True Friends product are typically provided at the point of purchase or within the product packaging. Please retain your proof of purchase for any warranty claims. For the most up-to-date warranty information, please refer to the official Bandai Namco Toys & Collectibles America website or contact their customer service.

7.2. Customer Support

For further assistance, technical support, or inquiries regarding your Tamagotchi Connection, please contact Bandai Namco Toys & Collectibles America. You can often find contact information on their official website. Additionally, you may find helpful resources and FAQs on the official Tamagotchi website:

[Visit the Official Tamagotchi Connection Website](#)

8. SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

Please ensure that children playing with this product are within the recommended age range of 6 years and up. Keep small parts, such as batteries, out of reach of young children to prevent accidental ingestion.

© 2024 Tamagotchi. All rights reserved. Product of Bandai Namco Toys & Collectibles America.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

