

DIGIQUEST TLC094

DIGIQUEST Universal Remote Control

MODEL: TLC094 USER MANUAL

Brand: DIGIQUEST

1. Introduction

This manual provides essential instructions for the proper setup, operation, and maintenance of your DIGIQUEST Universal Remote Control, model TLC094. This remote is designed as an original replacement and is compatible with various DIGIQUEST devices, including DGQ700, DGQ800, DGQ790, DGQ890, DGQ960, DGQ990, SH, G, VOICE, and INVISIBLE series. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

2. Setup

2.1 Battery Installation

The remote control requires two AAA alkaline batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards in the direction indicated by the arrow to open the compartment.
3. Insert two AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



This image displays the rear of the remote control, highlighting the battery cover. An arrow indicates the direction to slide the cover for battery access. Below it, the crossed-out wheeled bin symbol signifies that the product should not be disposed of with household waste, promoting proper electronic waste recycling. The CE mark confirms compliance with European health, safety, and environmental protection standards.

2.2 Initial Use

As an original replacement remote for specific DIGIQUEST models, the TLC094 is typically ready for use immediately after battery installation. Point the remote control directly at your DIGIQUEST device (e.g., TV, set-top box) and press the Power button to test functionality. If the device does not respond, ensure the remote has a clear line of sight to the device's infrared receiver.

3. Operating Instructions

The DIGIQUEST TLC094 remote control features 20 buttons for comprehensive control of your compatible television. Below are the general functions:

- **Power Button:** Turns the device on or off.
- **Number Buttons (0-9):** For direct channel selection or inputting numerical values.
- **Channel Up/Down:** Navigates through channels sequentially.
- **Volume Up/Down:** Adjusts the audio volume.
- **Mute Button:** Silences the audio output.
- **Menu/Settings Button:** Accesses the device's main menu or settings.
- **Navigation Buttons (Up, Down, Left, Right, OK/Enter):** Used to navigate menus and confirm selections.
- **Back/Exit Button:** Returns to the previous screen or exits a menu.
- **Source/Input Button:** Selects the input source (e.g., HDMI 1, AV).
- *Other buttons may vary in function depending on the specific DIGIQUEST device model.*

4. Maintenance

4.1 Cleaning

To clean your remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries. Dispose of used batteries according to local regulations; do not discard them with household waste.

4.3 Storage

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

5. Troubleshooting

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with new AAA alkaline batteries.
 - Ensure there is a clear line of sight between the remote's infrared emitter and the device's receiver. Obstructions can block the signal.
 - Verify that the remote is pointed directly at the device.
- **Buttons are unresponsive or sticky:**
 - Clean the remote control as described in the Maintenance section.
 - If cleaning does not resolve the issue, the remote may require replacement.

- **Remote controls some functions but not others:**

- This remote is designed for specific DIGIQUEST models. Ensure your device is fully compatible.
- Some advanced functions might be specific to the original remote that came with your device.

6. Specifications

Brand	DIGIQUEST
Model Number	TLC094
Manufacturer	Digiquest
Special Feature	Universal
Color	Black
Maximum Supported Devices	1
Compatible Devices	Television
Connectivity Technology	Infrared
Number of Buttons	20
Controller Type	Button Control
Battery Description	Alkaline (AAA)

7. Compliance Information

This product bears the CE mark, indicating its conformity with European health, safety, and environmental protection standards. The crossed-out wheeled bin symbol on the product signifies that, at the end of its life, it should be disposed of separately from household waste. Please use designated collection points for electronic waste to ensure proper recycling and minimize environmental impact.

8. Warranty

Specific warranty information for the DIGIQUEST TLC094 remote control may vary by region and retailer. Please refer to the purchase documentation or contact your point of sale for details regarding warranty coverage and terms. Keep your proof of purchase for any warranty claims.

9. Support

For further assistance, technical support, or inquiries regarding your DIGIQUEST Universal Remote Control TLC094, please visit the official DIGIQUEST website or contact their customer service department. Contact information can typically be found on the manufacturer's website or product packaging.