

[Manuals.plus](#) /

› [Ihomekee](#) /

› Ihomekee Programmable Drip Coffee Maker - User Manual

Ihomekee CM9428C

Ihomekee Programmable Drip Coffee Maker

Model: CM9428C

Brand: Ihomekee

1. INTRODUCTION

Thank you for purchasing the Ihomekee Programmable Drip Coffee Maker. This manual provides essential information for the safe operation, proper use, and maintenance of your new coffee machine. Please read all instructions carefully before use and retain this manual for future reference.



Figure 1.1: Ihomekee Programmable Drip Coffee Maker.

2. SAFETY INSTRUCTIONS

To ensure safe operation, always follow these basic safety precautions:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.

- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The carafe is designed for use with this appliance. It must never be used on a range top.
- Do not place a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive material.
- This appliance is for household use only.

3. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your lhomekee coffee maker.

3.1 Components

- Water Reservoir
- Control Panel with LCD Display
- Brew Basket
- Reusable Filter
- Glass Carafe
- Warming Plate
- Power Cord

SMART TOUCHSCREEN

III



Figure 3.1: Smart Touchscreen Control Panel for brew settings.



Figure 3.2: Digital display and control buttons including Hour, Minute, Brew Later, Brew Now, Strong/Iced, and Clean.

4. SETUP

Before first use, follow these steps:

1. Unpack the coffee maker and remove all packaging materials.
2. Wipe the exterior of the coffee maker with a damp cloth.
3. Wash the carafe, lid, and reusable filter in warm, soapy water. Rinse thoroughly and dry.
4. Place the coffee maker on a flat, stable, heat-resistant surface.
5. For initial cleaning, fill the water reservoir to the MAX line with clean water. Run a brew cycle without coffee grounds. Discard the water. Repeat this process 2-3 times to ensure the system is clean.



Figure 4.1: Filling the water reservoir.

5. OPERATING INSTRUCTIONS

5.1 Brewing Regular or Strong Coffee

1. Open the top lid and fill the water reservoir with fresh, cold water to your desired level (up to 12 cups). The water level indicator is on the side.
2. Place the reusable filter into the brew basket. Add your desired amount of ground coffee into the filter. For regular strength, use approximately 1 tablespoon of coffee per cup. For strong coffee, use slightly more grounds or select the 'Strong' brew option.
3. Close the top lid securely and place the empty glass carafe on the warming plate.
4. Plug the coffee maker into a standard electrical outlet. The LCD display will illuminate.

5. To brew immediately, press the 'Brew Now' button. If you desire strong coffee, press the 'Strong/Iced' button once to select 'Strong' before pressing 'Brew Now'.
6. The brewing process will begin. Once complete, the coffee maker will automatically switch to the 'Keep Warm' mode for 40 minutes, then auto shut-off after 2 hours for safety.



Figure 5.1: Choose between Iced Coffee and Strong Coffee brew options.

5.2 Brewing Iced Coffee

The Ihomekee coffee maker features a dedicated iced coffee function.

1. Add approximately 2 pounds of ice to the glass carafe.
2. Place the insulated silicone pad (if included) on the warming plate before placing the carafe with ice.
3. Fill the water reservoir with fresh, cold water according to the 'Max Iced' line on the water level indicator.
4. Add your desired amount of ground coffee to the reusable filter.
5. Close the top lid and place the carafe with ice on the warming plate.
6. Press the 'Strong/Iced' button twice until 'Iced' is illuminated on the display.
7. Press 'Brew Now' to start the iced coffee brewing cycle.

ICED COFFEE IS ALSO AVAILABLE

Add 2 Pounds Of Ice In To The Glass

III



Figure 5.2: Add ice to the carafe for the iced coffee function.

5.3 Setting the Timer (Brew Later)

Program your coffee maker to brew at a specific time.

1. Prepare the coffee maker with water and coffee grounds as described in Section 5.1.
2. Press the 'Brew Later' button. The display will show 'SET BREW LATER'.
3. Use the 'Hour' and 'Minute' buttons to set your desired brew time.
4. Once the time is set, the display will revert to the current time, and a small indicator light will show that the 'Brew Later' function is active.
5. The coffee maker will automatically start brewing at the programmed time.

TIME PROGRAMMABLE 24H

Wake Up to Fresh Coffee

III



Figure 5.3: The coffee maker features a 24-hour programmable timer.

Your browser does not support the video tag.

Video 5.1: Demonstration of setting the brew later function and general operation of the iHomekee CM9428 Coffee Machine.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

6.1 Daily Cleaning

- After each use, unplug the coffee maker and allow it to cool.
- Remove the reusable filter and discard any used coffee grounds. Rinse the filter and brew basket under running water.
- Wash the glass carafe and its lid in warm, soapy water.
- Wipe the exterior of the coffee maker and the warming plate with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.



Figure 6.1: The reusable filter is easily removable for cleaning.

6.2 Descaling

Mineral deposits (scale) can build up in your coffee maker over time, affecting performance. Descale every 2-3 months, or more frequently if you have hard water.

1. Fill the water reservoir with a mixture of 1 part white vinegar and 2 parts cold water.
2. Place an empty carafe on the warming plate.
3. Press the 'Clean' button on the control panel. The coffee maker will run a cleaning cycle.
4. Once the cycle is complete, discard the vinegar solution.
5. Run 2-3 full cycles with fresh, cold water to rinse the coffee maker thoroughly and remove any residual vinegar taste.

7. TROUBLESHOOTING

If you encounter issues with your coffee maker, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Coffee does not brew.	No water in reservoir; Coffee maker not plugged in; Brew cycle not started.	Fill water reservoir; Ensure power cord is securely plugged in; Press 'Brew Now' or check 'Brew Later' setting.
Coffee is too weak.	Not enough coffee grounds; Grounds too coarse; Descaling needed.	Add more coffee grounds; Use finer grind; Perform descaling procedure.
Coffee overflows from filter.	Too many coffee grounds; Filter not seated correctly; Clogged brew basket.	Reduce coffee grounds; Ensure filter is properly seated; Clean brew basket and descaling.

Problem	Possible Cause	Solution
Coffee is not hot enough.	Descaling needed; Warming plate issue.	Perform descaling procedure; Ensure carafe is properly on warming plate.
LCD display is off.	Power saving mode; Power disconnected.	This is a feature to save power when not in use; Check power connection.

8. SPECIFICATIONS

- **Model Name:** CM9428C Coffee maker
- **Brand:** Ihomekee
- **Color:** Black
- **Product Dimensions:** 14.8"D x 7.5"W x 11.2"H
- **Coffee Maker Type:** Drip Coffee Machine
- **Capacity:** 12 Cups
- **Special Features:** Auto Shut-Off, Timer, Cup Warmer, Iced Coffee Function, Programmable
- **Filter Type:** Reusable
- **Human Interface Input:** Touchscreen
- **Item Weight:** 4.91 pounds
- **Manufacturer:** ihomekee
- **Country of Origin:** China

2 HOURS AUTO SHUT-OFF

Keep Coffee Hot for 2 Hours

|||



Figure 8.1: The coffee maker features a 2-hour auto shut-off function for safety.

9. WARRANTY AND SUPPORT

Ihomekee stands behind the quality of its products.

- **Warranty:** This product comes with a 2-year hassle-free replacement warranty.
- **Customer Service:** For any questions, concerns, or warranty claims, please contact Ihomekee customer service. Refer to the product packaging or the official Ihomekee website for the most current contact information.

© 2024 Ihomekee. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question