

Devoko 0358

Devoko 3x3m Folding Garden Gazebo Instruction Manual

Model: 0358

1. INTRODUCTION AND SAFETY INFORMATION

This manual provides essential instructions for the safe assembly, operation, and maintenance of your Devoko 3x3m Folding Garden Gazebo. Please read all instructions carefully before use and retain this manual for future reference.

The Devoko 3x3m Folding Garden Gazebo is designed for temporary outdoor use, offering sun protection and shelter from light rain. It features a durable, waterproof, and UV-protective polyester fabric (UPF 50+) and a sturdy metal frame. Its foldable design ensures easy transport and quick setup.

Safety Warnings:

- Do not use in strong winds, heavy rain, or snow. Disassemble and store the gazebo during adverse weather conditions to prevent damage or injury.
- Ensure all parts are securely fastened during assembly and before use.
- Keep children and pets away from the gazebo during assembly and disassembly.
- Do not use open flames or heating appliances inside or near the gazebo.
- Always anchor the gazebo securely using the provided ropes and ground stakes.
- Regularly inspect the gazebo for any signs of wear or damage. Do not use if damaged.



Figure 1: Gazebo demonstrating waterproof and anti-UV capabilities. The left side shows sun protection, and the right side shows water resistance.

2. SETUP INSTRUCTIONS

The Devoko Folding Garden Gazebo is designed for quick and easy installation, typically taking only a few minutes with two people.

2.1. Package Contents

Before starting, ensure all components are present:

LISTE DE COLISAGE



Figure 2: Package contents including the canopy, frame, carry bag, 4 ropes, and 8 ground stakes.

- 1 x Folding Gazebo Frame
- 1 x Gazebo Canopy (Polyester fabric)
- 1 x Carry Bag
- 4 x Ropes
- 8 x Ground Stakes
- 4 x Side Walls (if included in your model)

2.2. Assembly Steps

1. **Unpack Components:** Remove all items from the carry bag and lay them out on a flat, clear surface.
2. **Expand the Frame:** With a partner, gently pull the frame outwards from opposite corners until it is partially open.
3. **Attach the Canopy:** Place the canopy fabric over the partially opened frame. Secure the corners of the canopy to the frame's corner posts.
4. **Fully Extend the Frame:** Continue to pull the frame outwards until it is fully extended and locked into place. Ensure all locking mechanisms click securely.
5. **Adjust Height:** The gazebo features 3 adjustable height positions. Press the release buttons on each leg and extend the legs to your desired height. Ensure all legs are set to the same height.



Figure 3: Adjustable height mechanism on the gazebo leg. Press the red button to adjust the height.

6. **Secure the Canopy:** Fasten any remaining canopy attachments (e.g., Velcro straps) to the frame for a snug fit.
7. **Install Side Walls (if applicable):** Attach the side walls to the gazebo frame using the integrated zippers or Velcro fasteners.
8. **Anchor the Gazebo:** Use the provided ropes and ground stakes to secure the gazebo firmly to the ground. Attach ropes to the gazebo's corners and stake them into the ground at an angle.

Installation facile, **moins de 10 minutes**

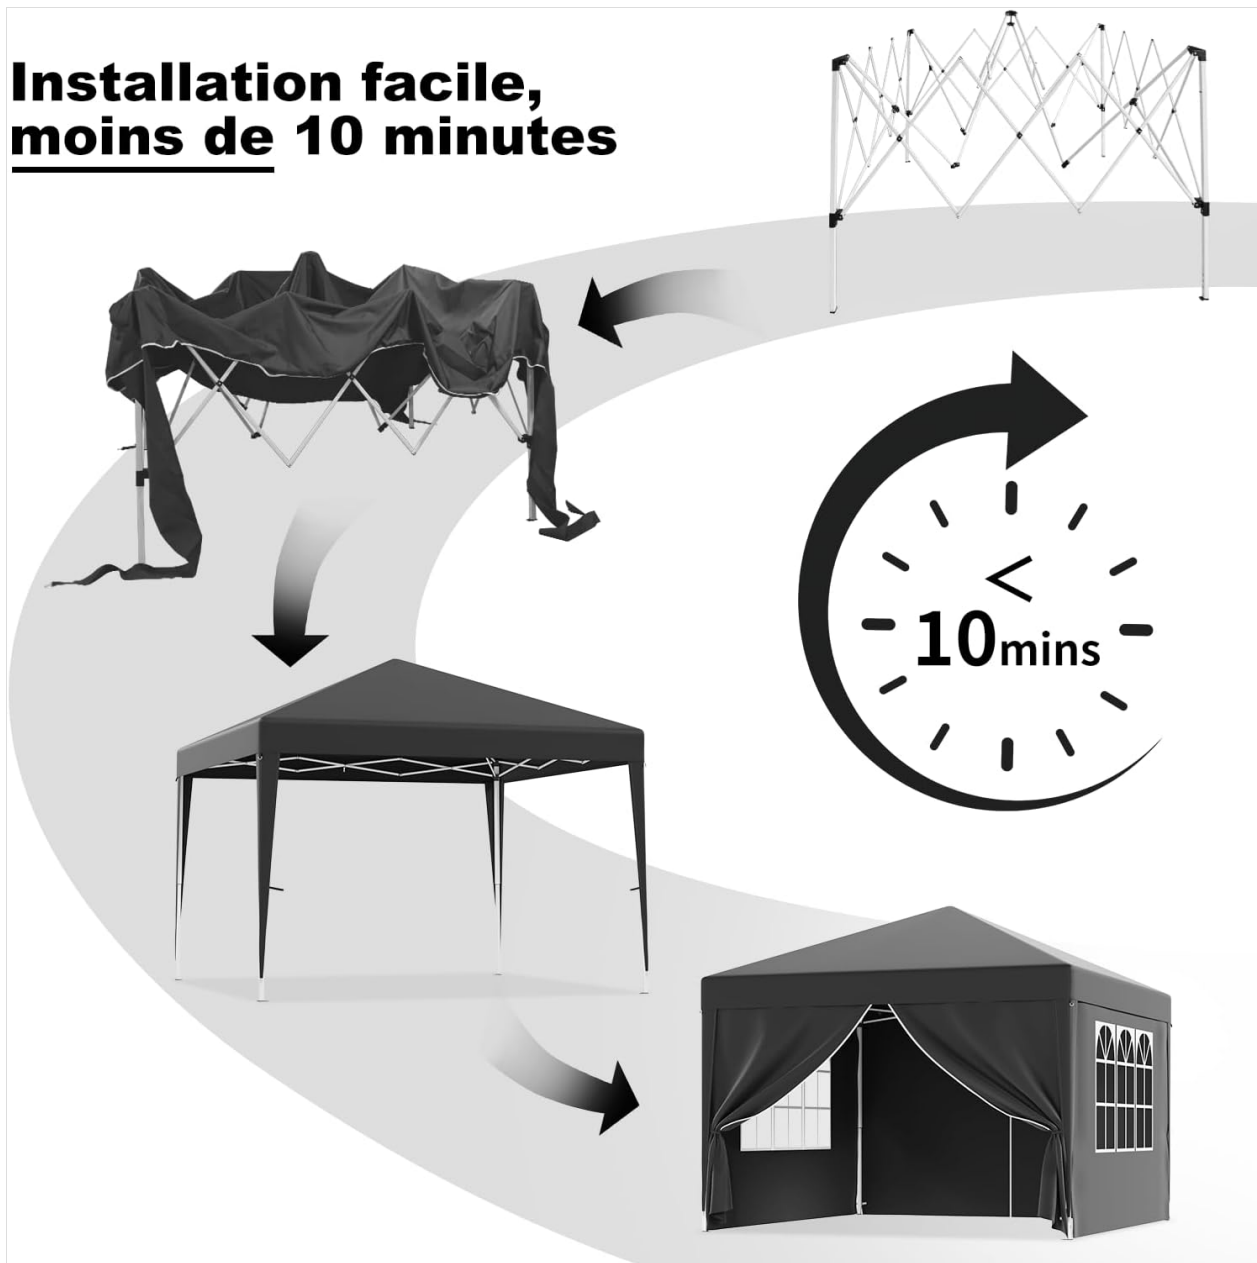


Figure 4: Visual guide for quick installation, showing the frame expanding and canopy attaching.

3. OPERATING INSTRUCTIONS

Once assembled and securely anchored, your Devoko Gazebo is ready for use.

- **Usage Environment:** This gazebo is intended for temporary outdoor use in calm weather conditions.
- **Adjustable Height:** The gazebo offers three height settings (1.75m, 1.86m, 1.95m to the lowest point of the frame, with a peak height up to 2.7m). Adjust the height as needed for your event or comfort.

TROIS HAUTEURS RÉGLABLES

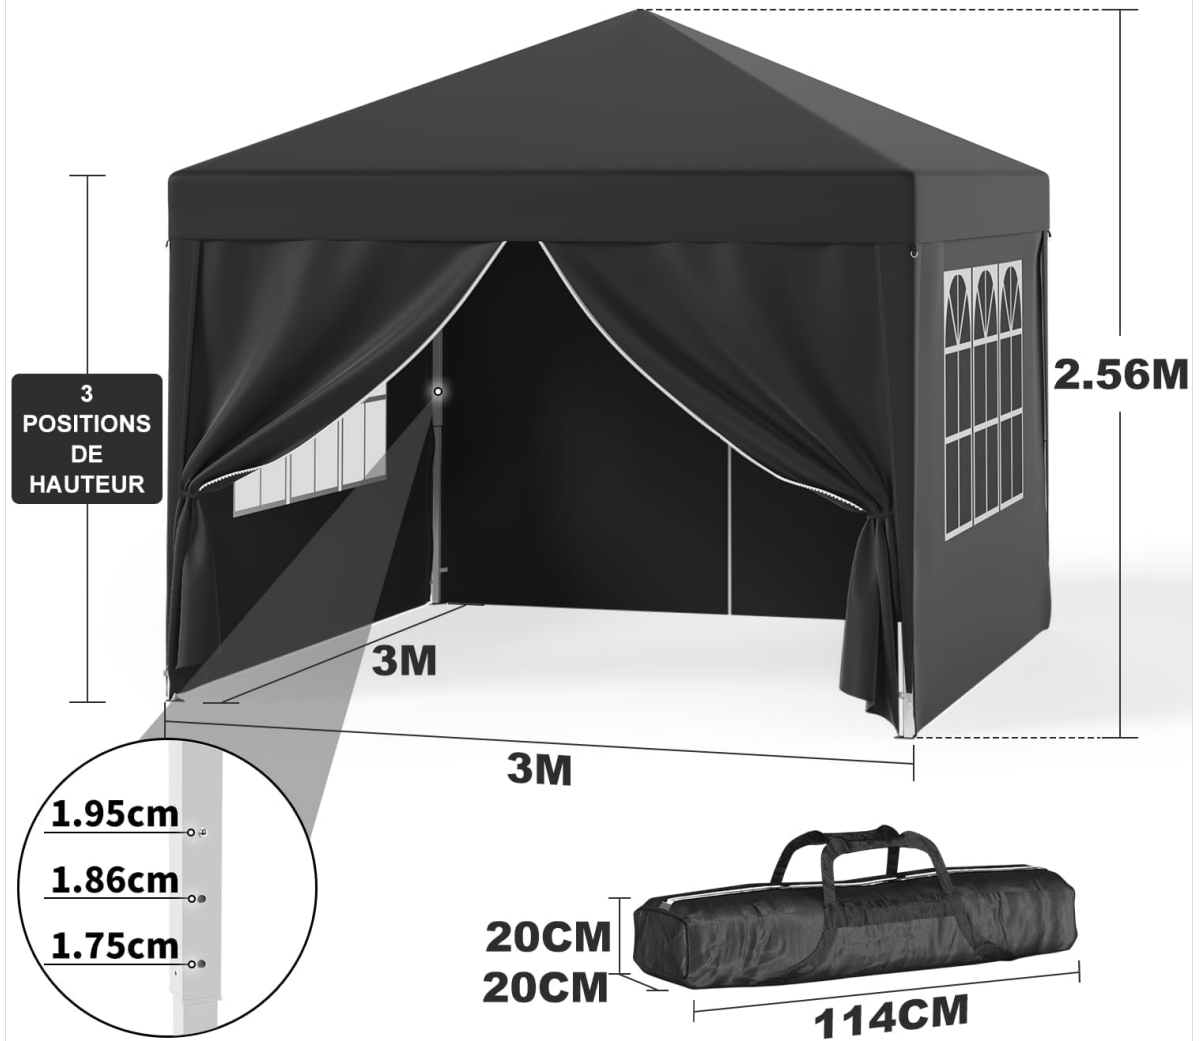



Figure 5: Gazebo dimensions and three adjustable height positions.

- **Side Walls:** Utilize the side walls for additional privacy or protection from sun and light wind. They can be easily opened or closed using the smooth zippers.
- **Disassembly:** To disassemble, reverse the assembly steps. Ensure all locking mechanisms are released before folding the frame. Store the gazebo in its carry bag in a dry place.


4. MAINTENANCE

Proper maintenance will extend the lifespan of your gazebo.


- **Cleaning:** Clean the canopy fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Allow the fabric to air dry completely before folding and storing.
- **Frame Care:** Wipe the metal frame with a damp cloth to remove dirt. Ensure the frame is dry before storage to prevent rust.
- **Storage:** Always store the gazebo in its carry bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the fabric for tears or damage, and the frame for bent parts or loose connections. Address any issues promptly.

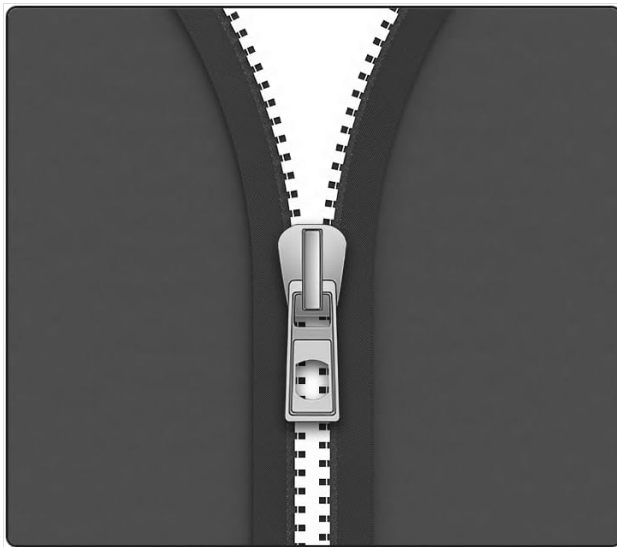

GLATTER REIßVERSCHLUSS

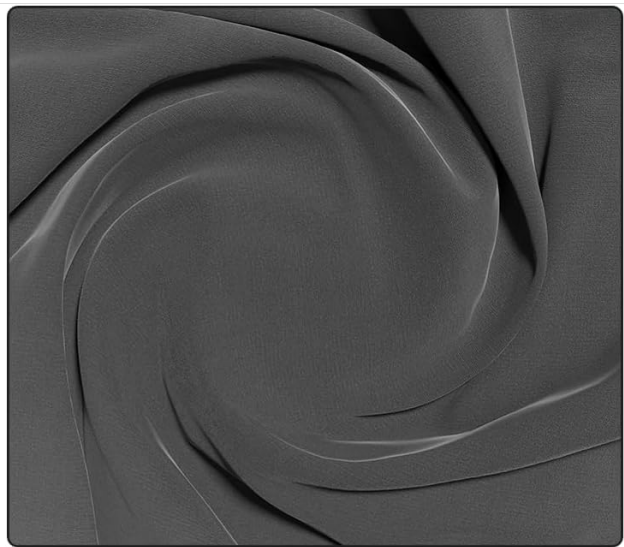

WASSERDICHTES GEWEBE IST NICHT LEICHT ZU KNITTERN

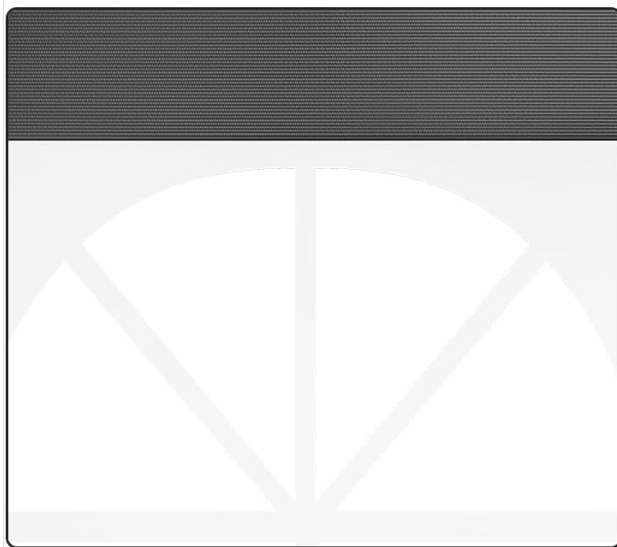

FEINE NAHTDETAILS



STAHLRAHMEN MIT PULVERBESCHICHTUNG

Figure 6: Details of the gazebo's construction, including the smooth zipper, waterproof fabric, fine seams, and powder-coated steel frame.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Gazebo is unstable or wobbly.	Not properly anchored; legs not fully extended or locked; uneven ground.	Ensure all ground stakes and ropes are securely fastened. Verify all leg locking mechanisms are engaged and legs are at the same height. Move to a level surface if possible.
Difficulty extending or folding the frame.	Frame joints are stiff; locking mechanisms are stuck.	Apply a silicone-based lubricant to moving parts if necessary. Ensure all release buttons are pressed when folding/extending. Do not force the frame.
Water pooling on the canopy.	Canopy not taut enough; heavy rainfall.	Ensure the canopy is stretched tightly over the frame. Adjust leg height if possible to create more slope. Disassemble in heavy rain.

Problem	Possible Cause	Solution
Side walls do not attach correctly.	Incorrect alignment; zippers/Velcro damaged.	Check alignment of zippers/Velcro. Ensure the canopy is fully extended. Inspect fasteners for damage.

6. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Devoko
Model Number	0358
Dimensions (L x W x H)	3 x 3 x 2.7 meters (Peak Height)
Material (Canopy)	Polyester
Material (Frame)	Metal
Color	Dark Grey
Water Resistance Level	Waterproof
UV Protection	Yes (UPF 50+)
Adjustable Height	3 positions (1.75m, 1.86m, 1.95m to frame lowest point)
Included Accessories	1 Carry Bag, 4 Ropes, 8 Ground Stakes, 4 Side Walls
Assembly Required	Yes

7. WARRANTY AND SUPPORT

Devoko products are manufactured to high-quality standards. For any questions, concerns, or support needs regarding your Devoko 3x3m Folding Garden Gazebo, please contact Devoko customer service.

Please refer to your purchase documentation for specific warranty terms and conditions. Keep your proof of purchase for warranty claims.

For further assistance, visit the official Devoko store on Amazon: [Devoko Store](#)