



Manuals.plus /

› Devoko /

› Devoko 3x3m Pop-up Garden Gazebo Instruction Manual

Devoko 0358

Devoko 3x3m Pop-up Garden Gazebo Instruction Manual

Model: 0358 | Brand: Devoko

1. INTRODUCTION

Thank you for choosing the Devoko 3x3m Pop-up Garden Gazebo. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new gazebo. Please read these instructions carefully before use and retain them for future reference.

2. IMPORTANT SAFETY INFORMATION

Your safety and the safety of others are paramount. Always follow these safety guidelines to prevent injury or damage to the product.

- **Anchoring:** Always secure the gazebo firmly to the ground using the provided ropes and stakes, especially in windy conditions. Failure to do so can result in the gazebo being lifted by wind, causing damage or injury.
- **Weather Conditions:** This gazebo is designed for temporary use in fair weather. It is not intended for use in strong winds, heavy rain, thunderstorms, or snowy conditions. Disassemble and store the gazebo during adverse weather.
- **Fire Safety:** Keep all flame and heat sources away from the gazebo fabric. The fabric is not fireproof.
- **UV Protection:** While the fabric offers UPF 50+ UV protection, prolonged exposure to direct sunlight should still be limited.
- **Assembly:** Ensure all parts are correctly assembled and secured before use. Do not force components.
- **Children:** Keep children away from the gazebo during assembly and disassembly. Adult supervision is required when children are near the gazebo.

3. PACKAGE CONTENTS

Before assembly, please verify that all components listed below are present in your package.

LISTE DE COLISAGE



Figure 3.1: All components included in the package.

- 1 x Gazebo Frame (pre-assembled pop-up mechanism)
- 1 x Canopy Fabric (Waterproof and Anti-UV)
- 4 x Side Walls (if included in your model)
- 1 x Carry Bag
- 4 x Guy Ropes
- 8 x Ground Stakes
- 1 x Instruction Manual

4. SETUP INSTRUCTIONS

Follow these steps for quick and easy assembly of your pop-up gazebo. It is recommended that two people perform the setup.

1. **Unpack:** Remove the frame and canopy from the carry bag. Place the folded frame in the center of your desired setup area.
2. **Expand Frame:** With a person at each end, gently pull the frame outwards until it is partially open.
3. **Attach Canopy:** Drape the canopy fabric over the partially opened frame. Secure the corners of the canopy to the frame's corner legs using the hook-and-loop fasteners.

4. **Fully Extend Frame:** Continue to pull the frame outwards until it is fully extended and the top mechanism locks into place.
5. **Adjust Height:** Press the push-button sliders on each leg to adjust the gazebo to your desired height. Ensure all four legs are set to the same height for stability.



Figure 4.1: Gazebo dimensions and adjustable height options.



Figure 4.2: Detail of the height adjustment mechanism.

6. **Secure Legs:** Extend the lower part of each leg until the spring button locks into place.
7. **Attach Side Walls (Optional):** If using side walls, attach them to the frame using the zippers and hook-and-loop fasteners.
8. **Anchor Gazebo:** Use the provided guy ropes and ground stakes to firmly anchor the gazebo to the ground. Attach ropes to the canopy corners and stake them into the ground at an angle.

5. OPERATING GUIDELINES

The Devoko gazebo is designed for various outdoor events, providing shade and protection.

- **Intended Use:** Suitable for outdoor events, commercial events, camping, weddings, picnics, and barbecues.
- **Sun Protection:** The canopy offers UPF 50+ protection against harmful UV rays.
- **Water Resistance:** The waterproof polyester fabric provides protection against light rain.



Figure 5.1: Gazebo demonstrating Anti-UV and Waterproof features.

- **Ventilation:** Ensure adequate ventilation, especially if using the side walls, to prevent heat buildup.

6. CARE AND MAINTENANCE

Proper care will extend the life of your gazebo.

- **Cleaning:** Clean the canopy fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Rinse thoroughly and allow to air dry completely before storage.
- **Frame Maintenance:** Wipe the aluminum frame with a damp cloth to remove dirt. Ensure all moving parts are free of debris.
- **Storage:** Always disassemble the gazebo and store it in its carry bag in a dry, cool place when not in use. Ensure the fabric is completely dry to prevent mold and mildew.
- **Inspection:** Periodically inspect the frame, fabric, ropes, and stakes for any signs of wear or damage. Replace damaged parts immediately.

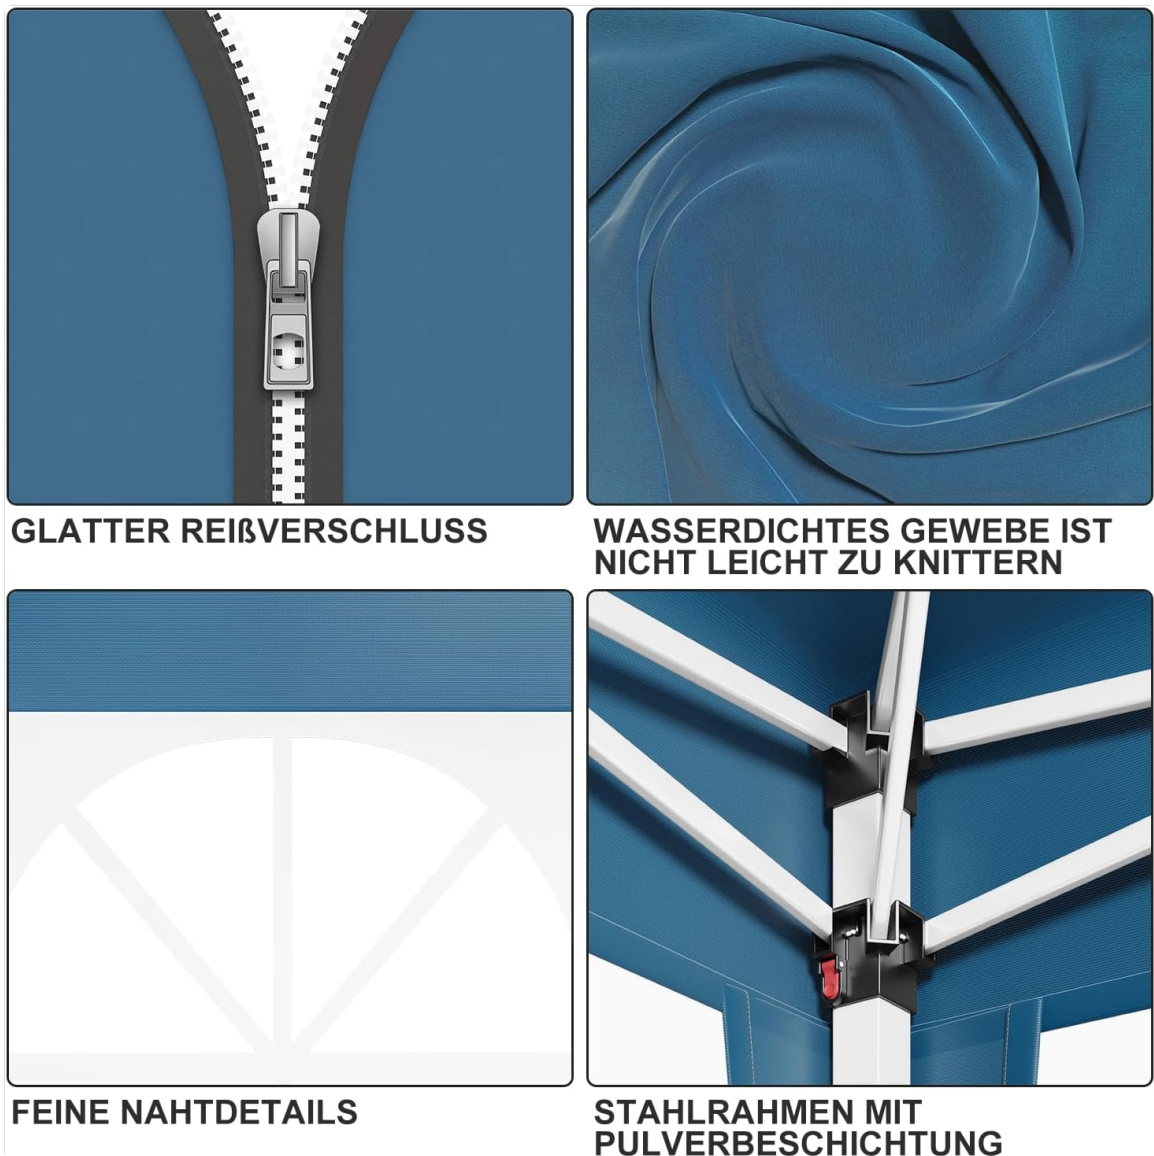


Figure 6.1: Details of the gazebo's construction, including zipper, fabric, seams, and frame.

7. TROUBLESHOOTING

Refer to this section for solutions to common issues.

Problem	Possible Cause	Solution
Gazebo is unstable or sways.	Not properly anchored; uneven ground; legs not fully extended.	Ensure all ropes and stakes are securely fastened. Move to level ground. Verify all legs are fully extended and locked.
Difficulty opening/closing the frame.	Frame components are stiff or misaligned.	Ensure two people are operating the frame. Gently wiggle components to align. Do not force. Check for debris in joints.
Water pooling on canopy.	Canopy not taut enough; heavy rain.	Ensure canopy is stretched tightly over the frame. Disassemble during heavy rain.
Side walls do not fit correctly.	Incorrect orientation; frame not fully extended.	Check the orientation of the side walls. Ensure the gazebo frame is fully extended and locked at the correct height.

8. PRODUCT SPECIFICATIONS

Feature	Specification
Product Dimensions (L x W x H)	300 x 300 x 270 cm (3L x 3W x 2.7H meters)
Model Number	0358
Brand	Devoko
Material (Canopy)	Polyester
Material (Frame)	Aluminum
Color	Blue
Recommended Uses	Outdoor events, commercial events, camping, weddings, picnics, barbecues
UV Protection Level	UPF 50+
Water Resistance Level	Waterproof
Number of Guy Ropes	4
Assembly Required	Yes

9. WARRANTY AND CUSTOMER SUPPORT

Devoko products are manufactured to high-quality standards. For warranty information, product support, or to inquire about replacement parts, please contact your retailer or visit the official Devoko website. Please have your model number (0358) and purchase details ready when contacting support.