

Angrox RC813

Angrox RC813 Voice Replacement Remote for TCL Google TV User Manual

Model: RC813



INTRODUCTION

This manual provides comprehensive instructions for the Angrox RC813 Voice Replacement Remote Control, designed specifically for TCL Google TV models. It covers setup, operation, maintenance, and troubleshooting to ensure a seamless user experience. Please read this manual carefully before using your new remote control.

Note: This remote control is not applicable to Roku TVs.



Image: The Angrox RC813 Voice Replacement Remote Control, showcasing its ergonomic design and button layout.

1. Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the indicators inside the compartment.
4. Close the battery cover securely.

2. Pairing the Remote Control with Your TCL Google TV

The Angrox RC813 remote uses Bluetooth for voice control and enhanced functionality. Follow these steps to pair it with your TCL Google TV:

1. Ensure your TCL Google TV is powered on.
2. On the remote, **short press the "Google Assistant" button** (microphone icon).
3. Immediately after, **press and hold the "HOME" button and the "OK" button simultaneously for approximately 5 seconds**.
4. Release the buttons when a pairing message appears on your TV screen, indicating that the pairing process has begun.
5. Follow any on-screen prompts to complete the pairing. The TV screen will confirm when pairing is successful.

2 STEPS TO PAIR THE REMOTE:

1. Short press the  button at first.

2. Press and hold the  and  buttons at the same time.



Image: Visual guide demonstrating the two-step pairing process: first short press the Google Assistant button, then press and hold the Home and OK buttons.



Image: A television screen displaying a 'Searching for accessories...' message with a Bluetooth icon, illustrating the pairing process for the remote control.

OPERATING INSTRUCTIONS

Remote Control Layout and Functions

The Angrox RC813 remote is designed for intuitive navigation and control of your TCL Google TV. Below is a description of its key buttons and their functions:

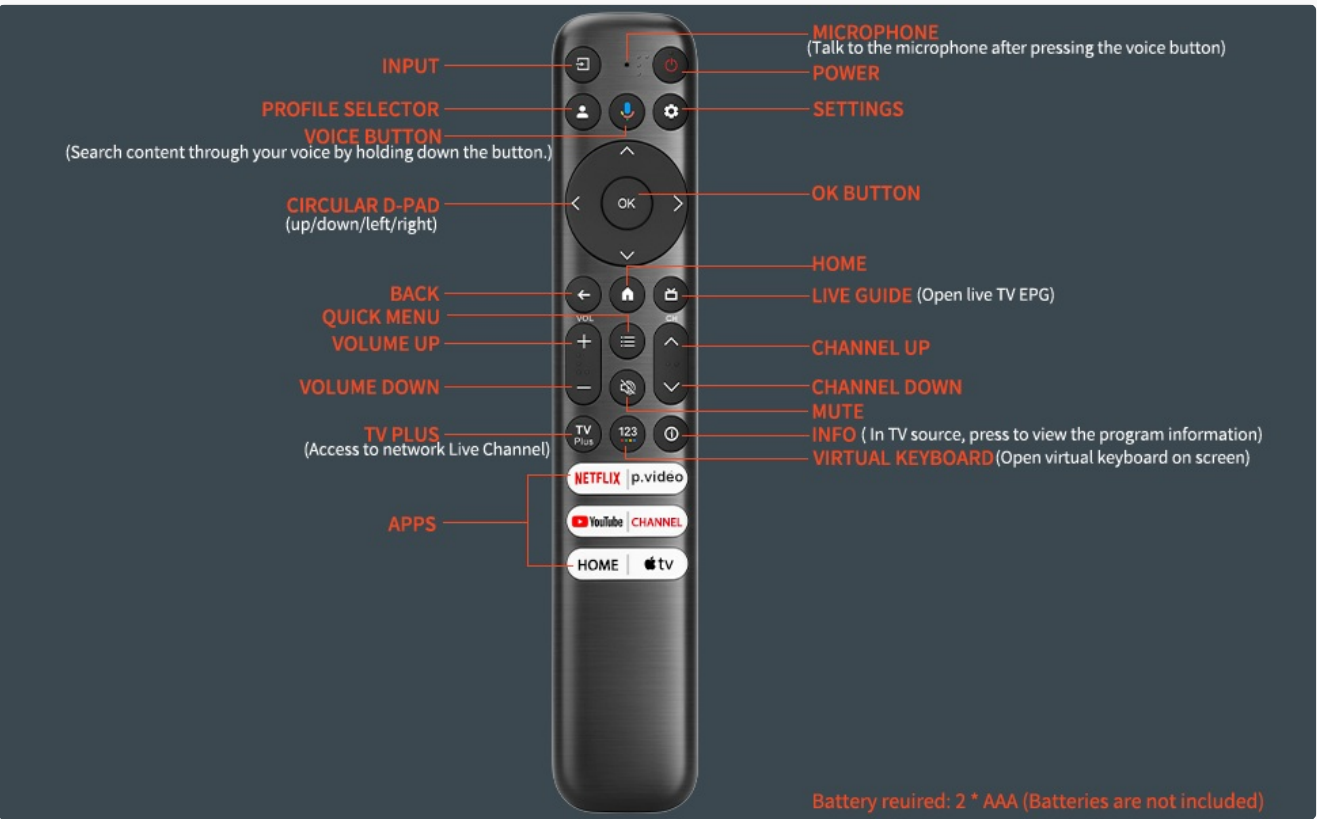 


Image: A detailed diagram of the Angrox RC813 remote control with labels for each button, including Power, Input, Settings, Microphone, Voice Button, Profile Selector, Circular D-Pad, OK Button, Back, Home, Live Guide, Quick Menu, Mute, Volume Up/Down, Channel Up/Down, TV Plus, Info, Virtual Keyboard, and dedicated App buttons.

- **Power Button:** Turns the TV on or off.
- **Input Button:** Selects the input source (HDMI, AV, etc.).
- **Settings Button:** Accesses the TV's settings menu.
- **Microphone:** Integrated microphone for voice commands.
- **Voice Button:** Activates the voice search function. Hold to speak your command.
- **Profile Selector:** Switches between user profiles.
- **Circular D-Pad (Up/Down/Left/Right):** Navigates through menus and content.
- **OK Button:** Confirms selections.
- **Back Button:** Returns to the previous screen.
- **Home Button:** Returns to the TV's home screen.
- **Live Guide:** Opens the electronic program guide (EPG).
- **Quick Menu:** Accesses a quick settings menu.
- **Volume Up/Down:** Adjusts the TV volume.
- **Channel Up/Down:** Changes TV channels.
- **TV Plus:** Accesses network Live Channels.
- **Info:** Displays program information (in TV source).
- **Virtual Keyboard:** Opens an on-screen virtual keyboard.
- **Dedicated App Buttons:** Direct access to popular streaming services like Netflix, Prime Video, YouTube, Channel, Home, and Apple TV+.

Voice Control Functionality

The voice control feature allows you to easily find, launch, and control content using spoken commands. To use voice control:

1. Press and hold the **Voice Button** (microphone icon).
2. Speak clearly into the microphone located on the remote control.
3. Release the button once you have finished speaking your command.

Examples of voice commands include: "Play music," "Open YouTube," "Fast-forward to 30 minutes," or "Show me Popular Movies."

SMART VOICE REMOTE CONTROL

Use your voice to easily find, launch and control content. voice remote brings your favorite movies, shows, and live shows together.



"Play music"

"Open YouTube"

"Fast-forward to 30 minutes"

"Show me Popular Movies"



Image: A hand holding the Angrox RC813 remote, with an overlay illustrating various voice commands like "Play music" and "Open YouTube."



Image: A family watching television, with a thought bubble above one person saying "Hey, volume up," demonstrating the voice control feature of the remote.

Dedicated App Access

The remote features six dedicated buttons for quick access to popular applications:

- Netflix
- Prime Video
- YouTube
- Channel
- Home
- Apple TV+

Simply press the corresponding button to launch the desired application directly.



Image: The Angrox RC813 remote control shown next to a TV screen displaying various app icons, highlighting the six dedicated quick-access buttons for streaming services.

MAINTENANCE

Battery Replacement

Replace the AAA batteries when the remote control's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as these may damage the surface or internal components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Voice control not working.	Remote not paired via Bluetooth.	Perform the pairing procedure described in the Setup section.
Remote not pairing.	Incorrect pairing steps or interference.	Ensure TV is on. Repeat pairing steps carefully. Move closer to the TV. Remove other Bluetooth devices temporarily.
Buttons are unresponsive.	Obstruction between remote and TV's IR receiver (for basic functions).	Ensure a clear line of sight between the remote and the TV.
Remote is for TCL Roku TV.	This remote is not compatible with Roku TVs.	Verify your TV is a TCL Google TV, not a TCL Roku TV. This remote is specifically for TCL Google TV models.



Image: A visual warning indicating that the remote control is not compatible with TCL Roku TVs, showing a remote next to a TV with a red 'X' over it.

SPECIFICATIONS

- **Model Number:** RC813
- **Brand:** Angrox
- **Compatible Devices:** TCL Google TV (Q6, Q7, QM8, S3, S4 series)
- **Product Dimensions:** 8.18 x 1.45 x 0.59 inches
- **Item Weight:** 2.39 ounces
- **Batteries Required:** 2 x AAA batteries (not included)
- **Special Features:** Ergonomic design, No programming required (after pairing), Universal (for specified TCL Google TV models), Voice Search
- **Max Number of Supported Devices:** 1





1.45 inch

8.18 inch



0.59 inch

Image: A diagram showing the dimensions of the Angrox RC813 remote control: 8.18 inches in length, 1.45 inches in width, and 0.59 inches in thickness.



COMPATIBLE WITH TCL GOOGLE TVS

S3 series 32S370G 40S370G 43S370G

Q7 series 55Q750G 65Q750G 75Q750G 85Q750G

QM8 series 65QM850G 75QM850G 85QM850G 98QM850G

Q6 series 55Q670G 65Q670G 75Q670G 85Q670G 85Q650G 75Q650G 65Q650G 55Q650G

S4 series 55S470G 43S470G 50S470G 58S470G 65S470G 70S470G 75S470G 85S470G
43S450G 50S450G 55S450G 58S450G 65S450G 75S450G 85S450G



Image: A list of compatible TCL Google TV series and specific models for the Angrox RC813 remote, including S3, Q7, QM8, Q6, and S4 series.

WARRANTY INFORMATION

Please refer to the product packaging or the official Angrox website for specific warranty details. General warranty terms typically cover manufacturing defects for a limited period from the date of purchase.

SUPPORT

For further assistance, troubleshooting, or product inquiries, please visit the official Angrox store or contact customer support through the retailer where the product was purchased.


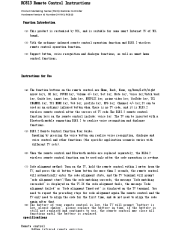 
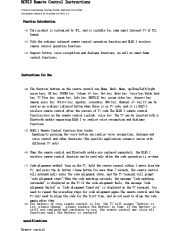 
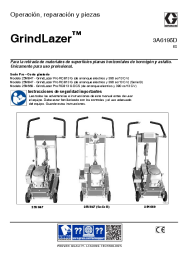 

Angrox Store: <https://www.amazon.com/stores/Angrox/page/A1560020-463E-4EF3-992F-7A4C9B868B0F>

PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product video demonstrating the features and compatibility of the Angrox Voice Replacement Remote for TCL Google TV.

Related Documents - RC813

	<p>Angrox Universal Remote Control for LG Smart TVs - User Guide</p> <p>Comprehensive user guide for the Angrox Universal Remote Control, compatible with all LG Smart TV models. Learn about specifications, setup, features, and FAQs.</p>
	<p>RC813 Remote Control Instructions and User Guide</p> <p>Comprehensive instructions for the TCL RC813 Remote Controller, covering its functions, setup, and precautions for use with TCL smart TVs. Learn about infrared and BLE5.2 wireless operation, voice control, and troubleshooting.</p>
	<p>TCL RC813 Remote Controller Instructions and Specifications</p> <p>Comprehensive guide to the TCL RC813 Remote Controller, covering its functions, usage instructions, pairing methods, and technical specifications. Includes information on infrared and BLE5.1 wireless operation, voice control, and FCC/IC compliance.</p>
	<p>Manual Graco GrindLazer™: Operación, Reparación y Piezas (Modelos 25M847, 25N669)</p> <p>Manual completo de operación, reparación y lista de piezas para los equipos Graco GrindLazer™ Pro RC813 G, modelos 25M847 y 25N669. Detalla la configuración, el funcionamiento, el mantenimiento y la resolución de problemas para la retirada de materiales de hormigón y asfalto.</p>
	<p>Graco GrindLazer™ Pro RC813 G Manuel d'Utilisation : Fonctionnement, Réparation, Pièces</p> <p>Manuel complet pour le Graco GrindLazer™ Pro RC813 G, couvrant le fonctionnement, la réparation, la maintenance, les pièces détachées et les instructions de sécurité pour l'enlèvement de matériaux sur béton et asphalte. Conçu pour un usage professionnel.</p>