

[Manuals.plus](#) /

> [Voltas Beko](#) /

> Voltas Beko WTL6504UEA/BPB 6.5 kg Fully Automatic Top Load Washing Machine User Manual

Voltas Beko WTL6504UEA/BPB

Voltas Beko WTL6504UEA/BPB 6.5 kg Fully Automatic Top Load Washing Machine User Manual

1. INTRODUCTION

Thank you for choosing the Voltas Beko WTL6504UEA/BPB 6.5 kg Fully Automatic Top Load Washing Machine. This manual provides essential information for the safe and efficient operation, installation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before using the washing machine and keep it for future reference.

This washing machine is designed for user convenience, offering efficient and effective cleaning for your laundry. It features a 6.5 kg capacity, suitable for small to medium-sized households, and a 700 RPM spin speed for reduced drying times.



The washing machine features a durable toughened glass lid, designed for gentle and controlled closure using hydraulics.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Read all instructions before using the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Keep the area around the washing machine clear of flammable materials.
- Do not allow children to play on or in the appliance. Close supervision is necessary when the appliance is used near children.
- Do not install or store this appliance where it will be exposed to the weather or freezing temperatures.
- Always disconnect the appliance from the power supply before cleaning, servicing, or performing any maintenance.
- Ensure the washing machine is properly grounded.

3. SETUP AND INSTALLATION

3.1 Unpacking


Carefully remove all packaging materials. Ensure all components are present and undamaged. Keep packaging materials away from children.

3.2 Location Requirements

Place the washing machine on a firm, level surface. Ensure there is adequate space around the machine for ventilation and access. Avoid direct sunlight or extreme temperatures.

3.3 Leveling the Machine

Proper leveling is crucial for stable operation and to prevent excessive vibration. Adjust the leveling feet at the bottom of the machine until it is perfectly stable. The machine features an Auto Balance Detection system to assist in maintaining stability during operation.

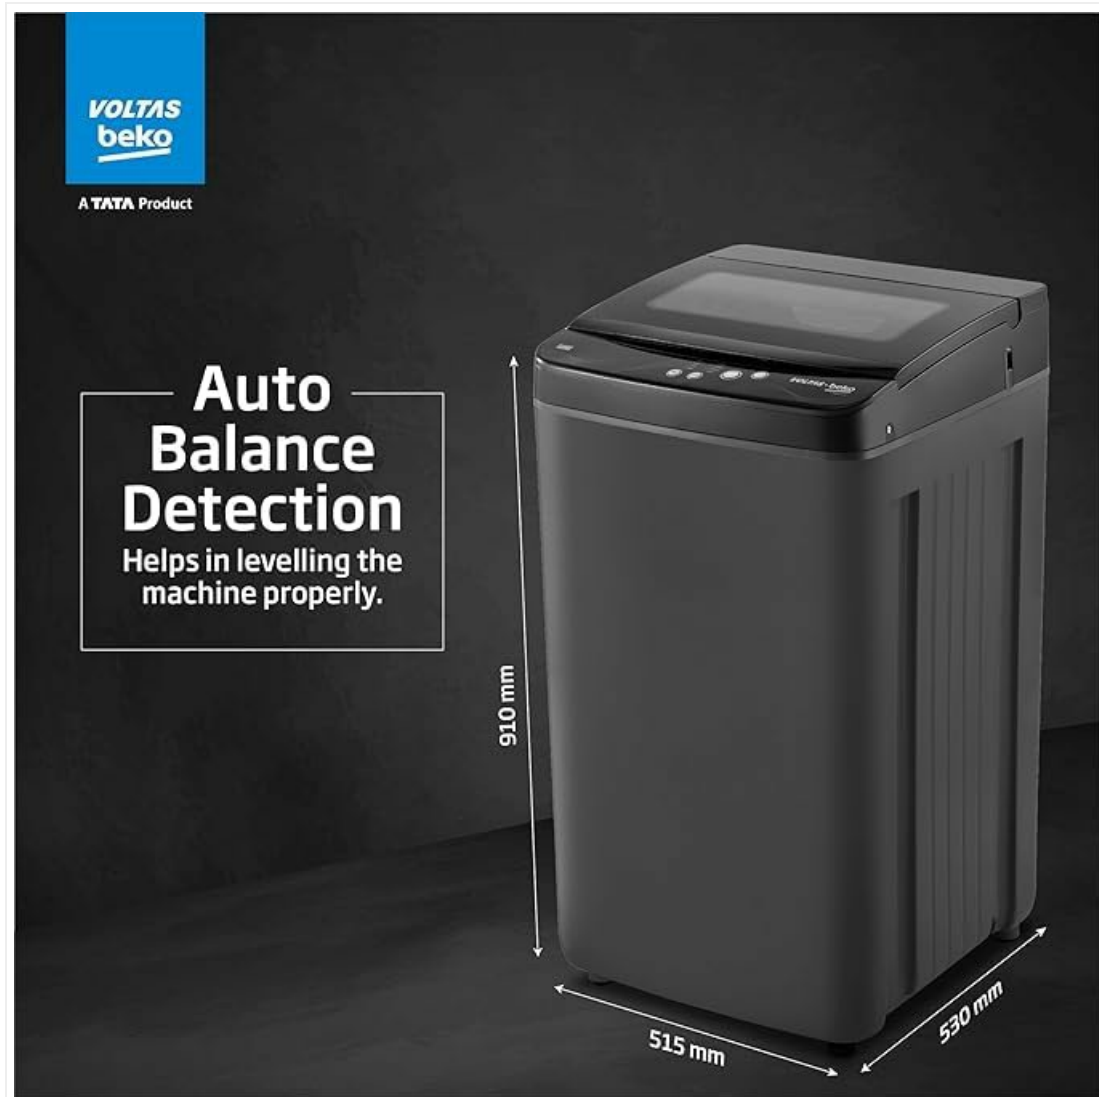

The Auto Balance Detection system helps in leveling the machine properly, ensuring stable operation. Dimensions are shown as 910 mm height, 515 mm width, and 530 mm depth.

3.4 Water Connection

Connect the water inlet hose to a cold water tap with a 3/4-inch thread. Ensure connections are tight to prevent leaks. Position the drain hose into a standpipe or laundry tub, ensuring it is securely fastened and allows for proper drainage.



Rear view of the washing machine, illustrating the water inlet connection point and the drain hose routing.

3.5 Power Connection

Plug the power cord into a grounded 240V, 50Hz electrical outlet. Do not use extension cords or adapters.


4. OPERATING INSTRUCTIONS

4.1 Loading Laundry

Open the lid and load clothes loosely into the drum. Do not overload the machine; the maximum capacity is 6.5 kg. Overloading can reduce washing efficiency and cause damage to the machine.

4.2 Adding Detergent and Softener

Add the appropriate amount of detergent to the detergent dispenser. If using fabric softener, add it to the designated softener compartment. Refer to detergent packaging for recommended quantities.

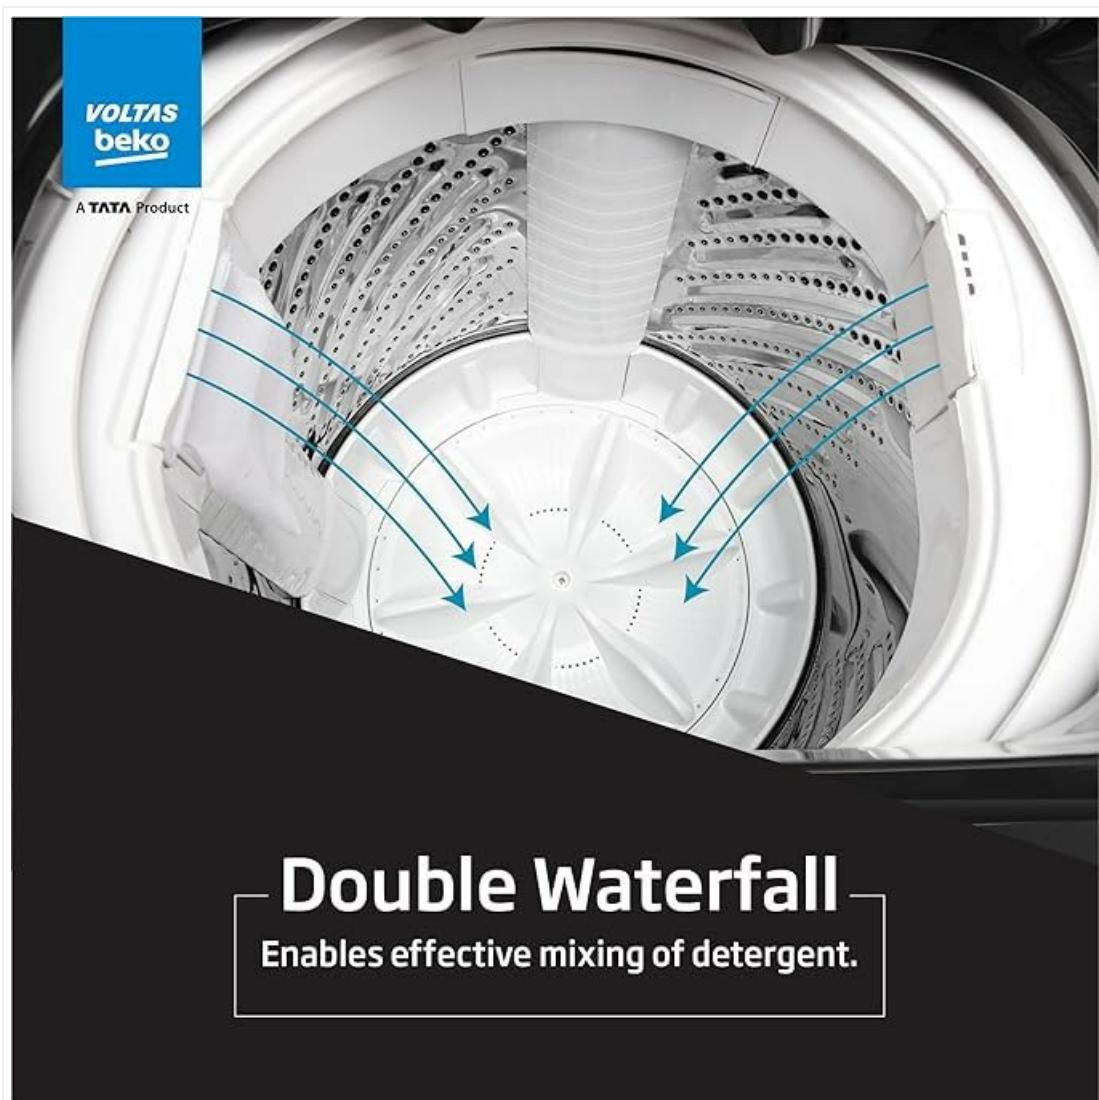


The Double Waterfall feature inside the drum ensures effective mixing of detergent with water for thorough cleaning.

4.3 Selecting a Wash Program

This washing machine offers 8 wash programs to cater to various fabric types and laundry needs. Use the control panel to select the desired program. Common programs include Normal, Delicate, Heavy, Quick Wash, etc. Refer to the control panel for specific program names.

4.4 Water Level Selection

The machine provides 4 water level options, allowing you to save water by choosing the appropriate level for your laundry load. Select the water level based on the amount of clothes in the drum.

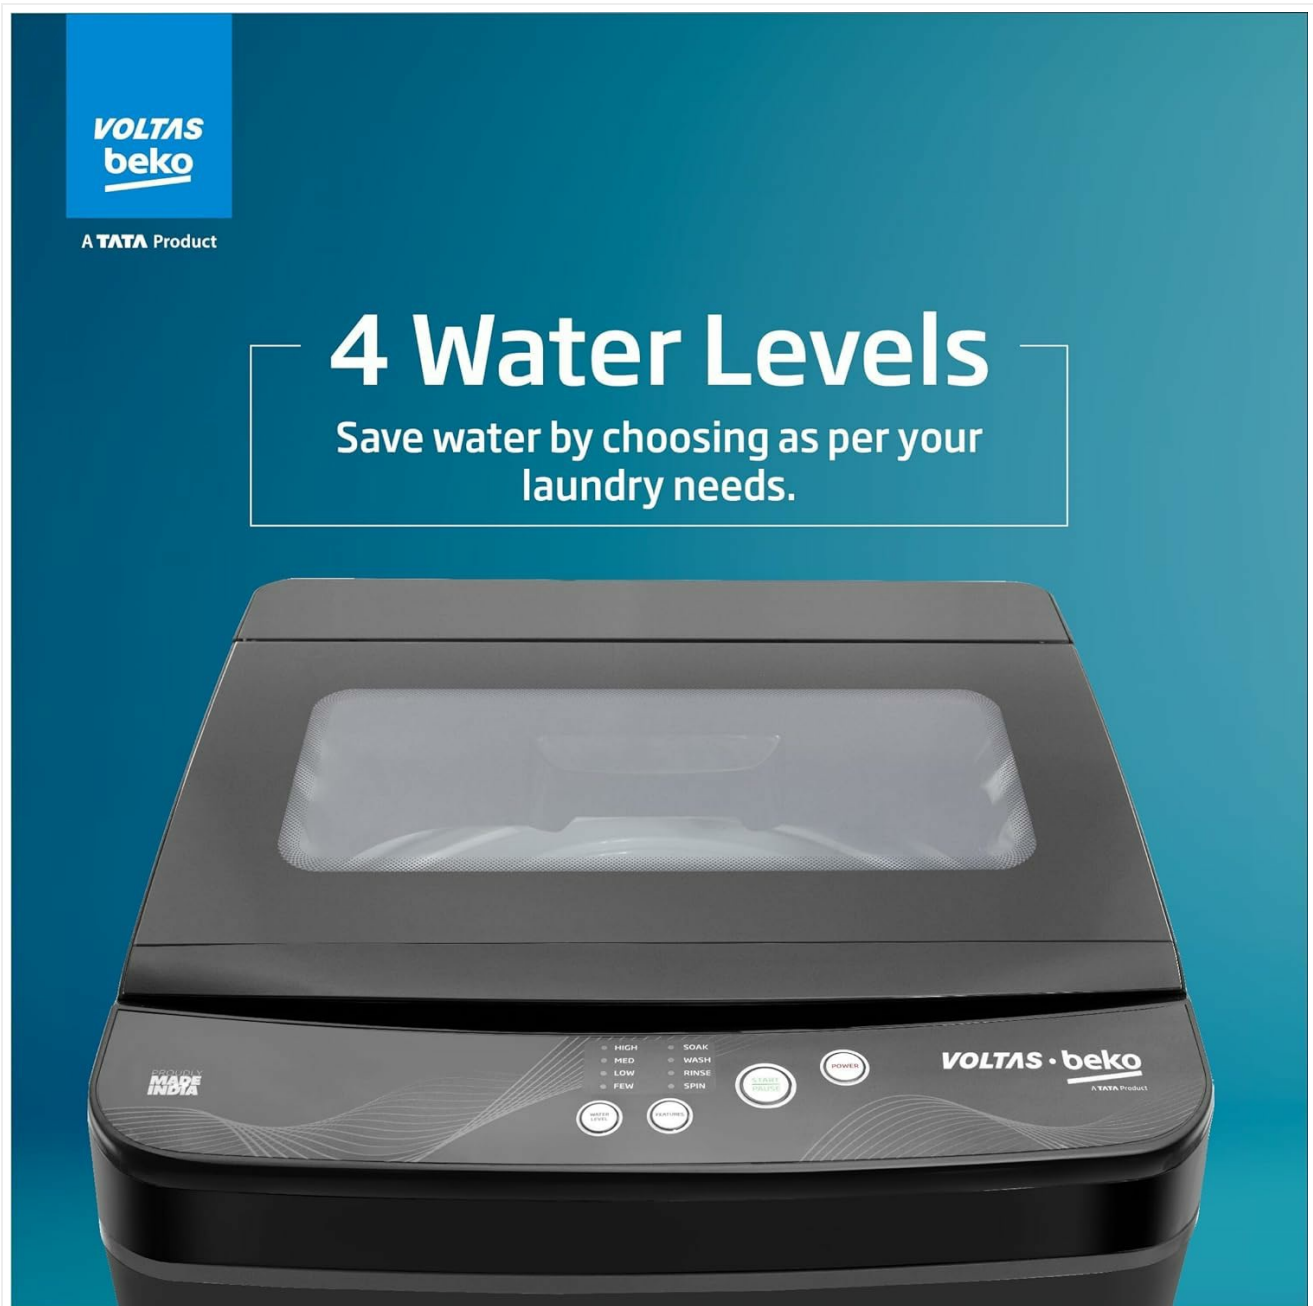

The control panel allows selection of 4 distinct water levels (High, Medium, Low, Few) to optimize water usage based on laundry volume.

4.5 Starting the Wash Cycle

Close the lid and press the 'Start/Pause' button to begin the wash cycle. The machine will automatically proceed through the selected program.

4.6 End of Cycle

At the end of the wash cycle, the machine will signal with a buzzer, and LED indicators will confirm completion. Open the lid and remove your laundry promptly.



The control panel includes LED indicators for cycle status and a buzzer that signals the end of the wash cycle.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

5.1 Cleaning the Lint Filter

The lint filter collects lint and debris from the water during the wash cycle. It should be cleaned regularly, ideally after every few washes, to maintain washing efficiency and prevent clogging.

1. Locate the lint filter inside the drum (usually on the side or center agitator).
2. Remove the filter by pulling it out or unlatching it.
3. Open the filter and remove any accumulated lint.
4. Rinse the filter under running water to clean it thoroughly.
5. Reinsert the clean filter securely into its position.

VOLTAS
beko

A **TATA** Product



Lint Filter

Collects lint from water during the wash cycle.



The lint filter effectively collects lint from the water during the wash cycle, ensuring cleaner clothes and preventing drain issues.

5.2 Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser to prevent residue buildup. Rinse it with warm water and a soft brush, then reinsert.

5.3 Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

5.4 Drum Cleaning

Run a 'Tub Clean' or 'Drum Clean' cycle (if available) periodically, or run an empty hot water cycle with a washing machine cleaner to remove detergent residue and odors.

6. TROUBLESHOOTING

Before contacting customer service, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Lid not closed properly; Power outage.	Check power connection; Ensure lid is fully closed; Check household circuit breaker.
Water not filling	Water tap closed; Water inlet hose kinked; Water supply pressure too low.	Open water tap; Straighten hose; Check water supply.
Water not draining	Drain hose kinked or clogged; Lint filter clogged.	Straighten or clear drain hose; Clean lint filter.
Excessive vibration/noise	Machine not level; Load unbalanced; Shipping bolts not removed.	Adjust leveling feet; Redistribute laundry; Ensure shipping bolts are removed (if applicable).
Clothes not clean	Too much laundry; Insufficient detergent; Incorrect wash program.	Reduce load size; Use correct detergent amount; Select appropriate wash program.

7. SPECIFICATIONS

Detailed technical specifications for the Voltas Beko WTL6504UEA/BPB washing machine.

Feature	Specification
Model Name	WTL6504UEA/BPB
Brand	Voltas Beko
Capacity	6.5 Kilograms
Operation Mode	Fully Automatic
Max Rotational Speed	700 RPM
Product Dimensions (D x W x H)	53D x 51.5W x 93.5H Centimeters
Item Weight	31.1 Kilograms
Voltage	240 Volts
Material Type	ABS (Body), Plastic (Drum)
Finish Type	Painted - Black
Controls Type	Push Button, Dial
Installation Type	Freestanding
Special Feature	Ergonomic Design

8. WARRANTY INFORMATION

Your Voltas Beko WTL6504UEA/BPB washing machine comes with a comprehensive warranty to ensure your

peace of mind.

- **Product Warranty:** 2 Years Comprehensive Warranty on the entire product.
- **Motor Warranty:** 10 Years Warranty on the motor.

Please retain your purchase receipt as proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use conditions. It does not cover damage caused by misuse, improper installation, or unauthorized repairs.

9. CUSTOMER SUPPORT

For any queries, service requests, or technical assistance, please contact Voltas Beko customer support.

- **Contact Number:** 1860 599 4444
- **Manufacturer:** Voltas Beko (Deemed), Voltbek Home Appliances Pvt. Ltd.
- **Address:** Voltas House A, Chinchpokli, Mumbai-400033
- **Online Store:** [Visit the Voltas Beko Store on Amazon](#)