#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- AULCMEET /
- AULCMEET GB326WJSA Voice Remote Control User Manual for Sharp AQUOS Smart 4K UHD TVs

## **AULCMEET GB326WJSA**

# **AULCMEET GB326WJSA Voice Remote Control User Manual**

For Sharp AQUOS Smart 4K UHD TVs

# 1. Introduction

This manual provides comprehensive instructions for the setup, operation, and maintenance of your AULCMEET GB326WJSA Voice Remote Control. This remote is designed as a replacement and compatible with various Sharp AQUOS Smart 4K UHD TV models, offering convenient control and voice search functionality.

#### 2. PRODUCT OVERVIEW

The AULCMEET GB326WJSA remote control features a standard layout with dedicated buttons for common functions, streaming services, and an integrated voice search capability. Its ergonomic design ensures comfortable handling.





Image 1: Front view of the AULCMEET GB326WJSA remote control. This image displays the front of the remote, showing all buttons including power, number pad, navigation, volume, channel, and dedicated buttons for YouTube and Netflix, as well as the voice assistant button.

# 2.1 Key Features:

- Voice Search: Utilize voice commands for quick content discovery and TV control.
- Dedicated App Buttons: Direct access to popular streaming services like YouTube and Netflix.
- Comprehensive Control: Full functionality for power, volume, channel, input selection, and menu navigation.

# 3. SETUP

# 3.1 Battery Installation

- 1. Locate the battery compartment cover on the back of the remote control.
- 2. Slide the cover downwards or press the latch and lift to open.
- 3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
- 4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

**Note:** Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

#### 4. OPERATING INSTRUCTIONS

#### 4.1 Basic Functions

- Power Button: Press to turn the TV on or off.
- Number Buttons (0-9): Use to directly select channels or input numerical data.
- Volume Up/Down (VOL +/-): Adjust the TV's volume level.
- Channel Up/Down (CH +/-): Change TV channels sequentially.
- Mute Button: Mute or unmute the TV's audio.
- Input Button: Cycle through available input sources (HDMI, AV, etc.).
- Navigation Pad (Up, Down, Left, Right, ENTER): Navigate through on-screen menus and confirm selections.
- Back Button: Return to the previous menu or screen.
- Home Button: Access the TV's main smart hub or home screen.

#### 4.2 Voice Search Function

To use the voice search feature, press the dedicated voice assistant button (often depicted as a microphone icon or Google Assistant logo) on the remote. Speak clearly into the remote's microphone when prompted. This allows you to search for content, control smart home devices, or ask questions directly to your TV.

#### 4.3 TV Compatibility

This remote control is compatible with the following Sharp AQUOS Smart 4K UHD TV models:

- 4T-C60BJ3T
- 4T-C60BK1X
- 2T-C42BG8X
- 4T-C50BK1X
- 2T-C50BG1X
- 2T-C50BG1I
- 4T-C50BJ1T
- 4T-C50BJ3T
- 4T-C60BK1T
- 4T-C60BJ1T
- 4T-C70BK1T
- 4T-C70BK1X
- 4T-C70BJ1T
- 42BG1 C42BG1 42BG C42BG1i
- 2T-C42BG1I
- 4T-C70Bj3T
- 4T-C60BJ5T

- 4T-C70BJ5T
- 2T-C32BE1T
- 2T-C32BG1X
- 2T-C32BG1I
- 2T-C40BG1X
- 2T-C42BE1T
- 2T-C42BG1X
- 2T-C42BG1I
- 4T-C50BK1I
- 4T-C60CK1X
- 4T-C80CL1X

#### 5. MAINTENANCE

- Cleaning: Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- Storage: Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- Battery Care: Remove batteries if the remote will not be used for an extended period to prevent leakage.

# 6. TROUBLESHOOTING

#### Remote is not responding:

- Ensure batteries are inserted correctly with the correct polarity.
- Replace old batteries with new AAA batteries.
- Check for any obstructions between the remote and the TV's infrared sensor.
- Verify that the remote is pointed directly at the TV.

#### Voice search is not working:

- Ensure the TV is connected to the internet.
- Check the TV's settings to confirm voice control is enabled.
- Speak clearly and close to the remote's microphone.
- Some TV models may require initial pairing for voice functionality. Refer to your TV's user manual for specific pairing
  instructions if needed.

## 7. SPECIFICATIONS

Feature	Detail
Model Number	GB326WJSA
Product Dimensions	7.8 x 2 x 0.7 inches
Item Weight	2.5 ounces
Power Source	2 x AAA Batteries (not included)
Special Feature	Voice Search
Compatible Devices	Sharp AQUOS Smart 4K UHD Televisions

# 8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the manufacturer, AULCMEET, directly through their official support channels. Keep your purchase receipt for warranty claims.		
© 2024 AULCMEET. All rights reserved.		

Documents - AULCMEET – GB326WJSA no relevant documents