

kurener KR1260

Kurener KR1260 Electric Rotary Shaver User Manual

Model: KR1260 | Brand: Kurener

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Kurener KR1260 Electric Rotary Shaver. This versatile grooming device features a 4D floating head, dual-track stainless steel blades, and multiple interchangeable attachments for shaving, nose trimming, sideburn shaping, and facial cleansing. Please read this manual thoroughly before first use and retain it for future reference.

SAFETY INFORMATION

- Always hold the shaver gently and use it with care to avoid skin irritation or injury.
- Do not submerge the shaver in water, even though it is waterproof.
- Be cautious when handling the rechargeable battery, especially while charging.
- Always keep the flexible head in sight while using to prevent injury.
- After each use, clean the shaver thoroughly to prevent bacterial growth, especially if used with soap or cream.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Kurener KR1260 Electric Rotary Shaver body
- Rotary Shaver Head (pre-installed)
- Nose Trimmer Attachment
- Sideburns Trimmer Attachment

- Facial Cleansing Brush Attachment
- 3 Limit Combs (for sideburns trimmer: 3mm, 5mm, 7mm)
- Charging Stand
- USB Charging Cable
- Cleaning Brush
- Protective Cap for Rotary Head



Figure 1: Kurener KR1260 Electric Rotary Shaver and its accessories.

SETUP AND CHARGING

Initial Charge

Before first use, fully charge the shaver. The device features a numeric display for battery tracking and a charging icon that illuminates upon connection.

1. **Using the Charging Stand:** Connect the USB cable to the charging stand, then place the shaver onto the stand.
2. **Direct USB Charging:** Connect the USB cable directly to the charging port on the shaver body.

A full charge takes approximately 1 hour and provides up to 60 minutes of shaving time. Note: A USB wall adapter is not included.



Figure 2: Two charging methods for the Kurener KR1260 shaver.

Attaching/Detaching Heads

To change attachments, gently pull the current head upwards to detach it from the shaver body. Align the desired attachment with the shaver body and press down until it clicks into place.

Your browser does not support the video tag.

Video 1: Demonstrates how to attach and detach the various heads and accessories for the Kurener electric razor, including the rotary shaver head, nose trimmer, sideburns trimmer, and facial cleansing brush. This video also shows the cleaning process for the rotary head.

OPERATING INSTRUCTIONS

Power On/Off and Travel Lock

- **Power On/Off:** Press the power button once to turn the shaver on or off.
- **Travel Lock:** To activate the travel lock, press and hold the power button for approximately 3-5 seconds until a red lock icon appears on the display. This prevents accidental activation during travel. To deactivate, press and hold the power button again until the lock icon disappears.

Using the Rotary Shaver Head

The 4D floating head with dual-track stainless steel blades adapts to facial contours for a close shave.

- Can be used for both wet and dry shaving. For a wet shave, apply shaving foam or gel.
- Move the shaver in small, circular motions over your face and neck.
- Ensure the shaver maintains contact with the skin without applying excessive pressure.



Figure 3: The 4D flexible head design for effective shaving.

Using the Nose Trimmer Attachment

Attach the nose trimmer head to the shaver body.

- Gently insert the trimmer tip into your nostril or ear.
- Move it slowly to trim unwanted hair. Do not insert too deeply.

Using the Sideburns Trimmer Attachment

Attach the sideburns trimmer head. This attachment is ideal for shaping sideburns, beards, and mustaches.

- For longer facial hair, use the trimmer without a comb first.
- Select one of the three limit combs (3mm, 5mm, 7mm) and attach it to the trimmer head for desired hair length.

- Move the trimmer against the direction of hair growth for an even trim.

Using the Facial Cleansing Brush Attachment

Attach the facial cleansing brush head.

- Dampen your face and apply your preferred facial cleanser.
- Gently move the brush in circular motions across your face to deeply clean pores, remove dirt, and oil.
- Rinse your face thoroughly after use.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and hygiene. Refer to Video 1 in the Setup section for a visual guide on cleaning the rotary head.

1. **Cleaning the Rotary Shaver Head:**

- Open the shaver head by pressing the release button or gently prying open the individual blade covers.
- Use the provided cleaning brush to remove loose hair from the blades and inner chamber.
- Rinse the shaver head under running water while the shaver is running to flush out debris. Ensure the shaver is turned off before reassembling.

2. **Cleaning Other Attachments:** Rinse the nose trimmer, sideburns trimmer, and facial cleansing brush attachments under running water after each use. Allow them to air dry completely before storing.

3. **Drying:** After cleaning, shake off excess water and allow all parts to air dry thoroughly before reattaching or storing.



Figure 4: Cleaning the shaver head under running water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted or travel lock is active.	Charge the shaver. Deactivate travel lock by pressing and holding the power button.
Poor shaving performance / pulling hair.	Blades are dull or clogged with hair/debris.	Clean the shaver head thoroughly. Consider replacing the shaver head if performance does not improve.
Shaver not charging.	Improper connection or faulty cable/adapter.	Ensure the USB cable is securely connected to both the shaver/stand and the power source. Try a different USB adapter.

SPECIFICATIONS

- **Model Name:** KR1260
- **Power Source:** Battery Powered

- **Special Features:** Cordless, 4-in-1 Multi-Functional, Flexible Floating Head, Wet & Dry Use, Waterproof, Lightweight, Stand or Direct Charging, 100-240V Universal Voltage
- **Recommended Uses:** Beard, Nose Hair, Face, Sideburn Trimmer
- **Brand:** Kurener
- **Batteries:** 1 A battery required (included)
- **Charging Time:** Approximately 1 hour
- **Operating Time:** Up to 60 minutes on a full charge
- **Manufacturer:** Zhengzhou Bailong Ma technology Co., LTD

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the contact details provided with your purchase or visit the official Kurener website. Keep your purchase receipt as proof of purchase.