

[Manuals.plus](#) /

› [BEISAR](#) /

› BEISAR Prostate Massager with App Control (Model B0CVX3P47S)

BEISAR B0CVX3P47S

BEISAR Prostate Massager with App Control

Model: B0CVX3P47S

INTRODUCTION

This manual provides comprehensive instructions for the BEISAR Prostate Massager, a versatile device designed for personal wellness. It features 12 distinct vibration modes, 3 thrusting modes, and advanced app control capabilities. Crafted from soft, body-safe silicone, the device is engineered for comfort, ease of use, and is fully waterproof for convenient cleaning and hygiene.

SETUP

1. Charging the Device

Before first use, fully charge the device. Connect the magnetic USB charging cable to the charging port on the device. Plug the USB end into a compatible power source (e.g., computer, USB wall adapter, power bank). The indicator light will show charging status and turn off when fully charged. A full charge provides approximately 1 hour of working time.



Figure 1: USB Fast Charging and IPX6 Waterproofing. The device features a magnetic charging port for easy power replenishment and is designed to be waterproof for safe use and cleaning.

2. App Installation and Connection

Download the dedicated control app from your smartphone's app store. Ensure Bluetooth is enabled on your device. Open the app and follow the on-screen instructions to pair with your BEISAR Prostate Massager. The app allows for advanced control and customization of modes.

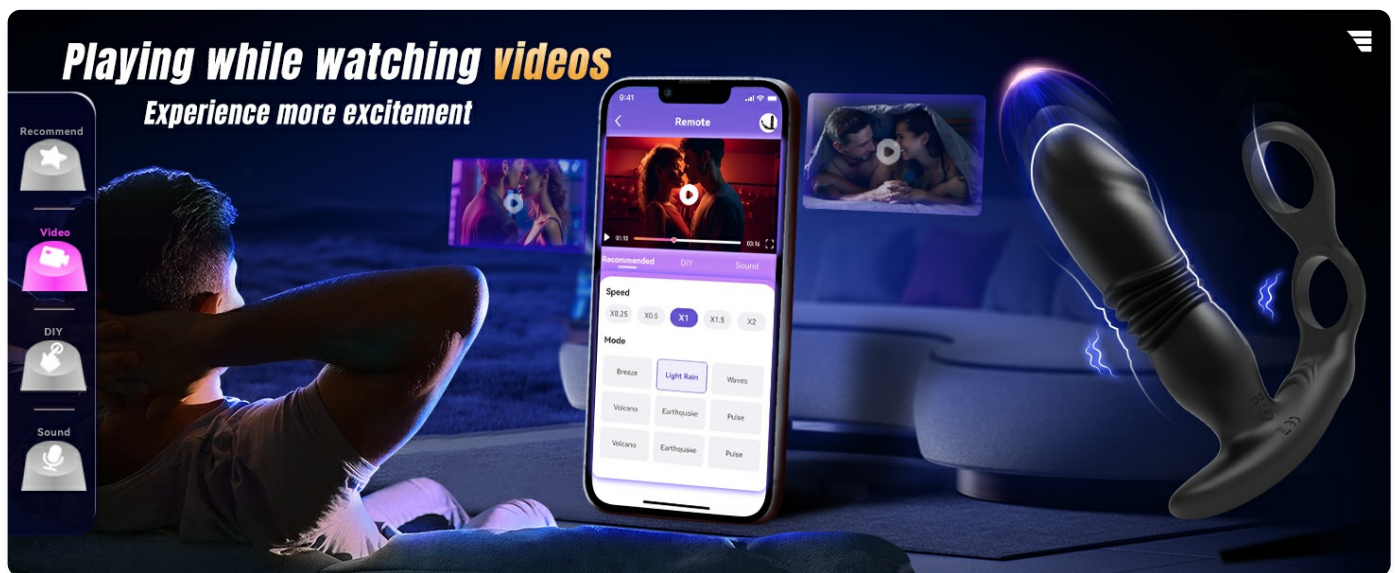


Figure 2: Smart App Control Interface. The app provides various modes including recommended patterns, DIY customization, video synchronization, and sound-activated functions for a personalized experience.

OPERATING INSTRUCTIONS

1. Basic Controls

The device features integrated buttons for direct control. One button controls the thrusting modes, and another controls the vibration modes. Press and hold the power button to turn the device on/off. Short presses cycle through the available modes.

Perfect Fit for Most Size



Figure 3: Device and Remote Control. The device can be operated directly via its buttons or wirelessly using the included remote control.

2. Thrusting Modes

The BEISAR Prostate Massager offers 3 distinct thrusting modes. Each mode provides a unique rhythmic sensation. The thrusting mechanism extends approximately 0.5 inches to target specific areas.

3 Thrusting Modes & 12 Vibrating

The different modes of the anal vibrator can easily stimulate your sensitive parts.



Figure 4: Thrusting and Vibration Modes. The device features 3 thrusting modes with a 0.5-inch extension and 12 vibration patterns for varied stimulation.

3. Vibration Modes

Explore 12 unique vibration patterns designed to provide diverse sensations. These modes can be used independently or combined with thrusting for enhanced experiences.



Figure 5: Seven Powerful Vibrating Modes. The device offers a range of vibration patterns to suit individual preferences.

4. App Control Features

The dedicated app unlocks advanced functionalities:

- **Recommended Modes:** Access curated patterns for various experiences.
- **DIY Mode:** Create and customize your own vibration and thrusting patterns.
- **Video Sync:** Synchronize the device's sensations with video content.
- **Sound Mode:** The device responds to ambient sounds, with intensity increasing with volume.



Figure 6: Video Sync Feature. Experience enhanced sensations by synchronizing the device with video content through the app.



Figure 7: Sound Mode. The device's intensity can be controlled by ambient sound levels, offering a dynamic and responsive experience.

5. Wearable Design

The ergonomic design includes a double penis ring to ensure the device stays securely in place during use, providing continuous stimulation.



Figure 8: Secure Wearable Design. The device is designed to be worn comfortably and discreetly, with low noise operation for various settings.

MAINTENANCE

1. Cleaning

The BEISAR Prostate Massager is IPX6 waterproof, allowing for easy cleaning. Wash the device thoroughly with mild soap and warm water after each use. Rinse completely and allow to air dry. Avoid using harsh chemicals or abrasive cleaners, as these can damage the silicone material.

2. Storage

Store the device in a clean, dry place away from direct sunlight and extreme temperatures. Keep it separate from other toys made of different materials to prevent potential reactions or damage.

TROUBLESHOOTING

- **Device not turning on:** Ensure the device is fully charged. Connect it to the charger and wait for the indicator light.
- **App connectivity issues:** Make sure Bluetooth is enabled on your phone and the device is within range. Try restarting both the app and the device.
- **Weak or inconsistent vibrations/thrusts:** Check battery level. If the issue persists after charging, contact customer support.

SPECIFICATIONS

- **Brand:** BEISAR
- **Model:** B0CVX3P47S
- **Material:** Silicone
- **Color:** App Light Black
- **Thrusting Modes:** 3
- **Vibration Modes:** 12
- **Water Resistance Level:** IPX6 Waterproof
- **Noise Level:** Below 45dB
- **Charging:** Magnetic USB
- **Working Time:** Approximately 1 hour (after full charge)
- **Package Dimensions:** 7.05 x 6.1 x 1.93 inches
- **Item Weight:** 11.68 ounces

WARRANTY & SUPPORT

For any product inquiries, technical support, or warranty claims, please refer to the contact information provided with your product packaging or visit the official BEISAR website. Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question