

HAUSHOF StainZapper Air

HAUSHOF StainZapper Air Portable Carpet Cleaner User Manual

Model: StainZapper Air

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the HAUSHOF StainZapper Air Portable Carpet Cleaner. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow the appliance to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not handle the plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Always disconnect from electrical outlet before connecting or disconnecting hose.
- Store the appliance indoors in a cool, dry place.

PRODUCT OVERVIEW

The HAUSHOF StainZapper Air is a portable, cordless carpet and upholstery cleaner designed for effective spot and stain removal. It features a powerful brushless motor, dual tank system, and specialized brushes for versatile cleaning.

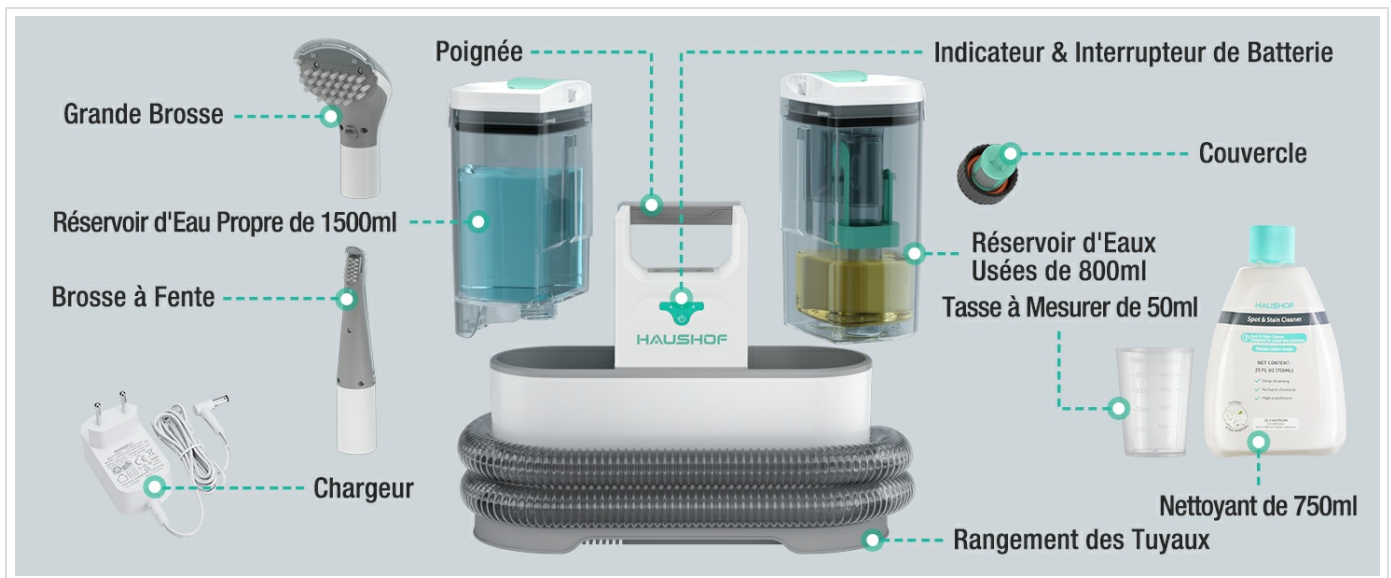


Figure 1: Product Components. This image shows an exploded view of the HAUSHOF StainZapper Air, highlighting its main components: the clean water tank (1500ml), dirty water tank (800ml), handle, large brush, crevice tool, charger, and integrated hose storage. A 50ml measuring cup and 750ml cleaning solution are also depicted.

Key Features:

- **Advanced Brushless Motor:** Provides 12,000 Pa suction power with a noise level of 75 dB. Ideal for various surfaces including carpets, upholstery, and car interiors.
- **Dual Tank System:** Separate 1500 ml clean water tank and 800 ml dirty water tank. Equipped with safety floats in the dirty water tank to prevent leaks and automatic shut-off when full.
- **Deep Cleaning Capability:** Effectively loosens and removes stubborn dirt from fabric fibers.
- **Versatile Brushes:** Includes a large brush for general cleaning and a specialized crevice tool for hard-to-reach areas.
- **Cordless Convenience:** Powered by a 24V battery for portable use anywhere.

SETUP

1. Charging the Battery

Before first use, fully charge the appliance. The unit is powered by 6 x 2000mAh Lithium-ion batteries, providing approximately 25 minutes of runtime. A full charge takes about 2.5 hours.

1. Connect the charger to the waterproof charging port on the unit.
2. Plug the charger into a power outlet. The battery indicator will show charging status.
3. Once fully charged, disconnect the charger.

NETTOYEUR RECHARGEABLE



Figure 2: Charging the Unit. This image illustrates the charging process, highlighting the waterproof charging port and the battery indicator. It also provides a tip to press the power button to activate a 3-second suction boost to clear water from the hose after use.

2. Filling the Clean Water Tank

The clean water tank has a capacity of 1500 ml.

1. Remove the clean water tank from the main unit.
2. Open the tank cap.
3. Fill the tank with clean water. For enhanced cleaning, add the provided detergent at a 1:33 ratio (detergent to water). It is recommended to use low-foaming electrolytic water or detergent. High-foaming detergents may cause leaks.
4. Securely close the tank cap and reattach the tank to the main unit.



Figure 3: Filling the Clean Water Tank. This image shows the process of adding cleaning solution to the clean water tank, emphasizing the recommended 1:33 detergent-to-water ratio.

3. Attaching the Cleaning Brush

Select the appropriate brush for your cleaning task.

- **Large Brush:** For general carpet and upholstery cleaning.
- **Crevice Tool:** For narrow spaces, corners, and sofa crevices.

Securely attach the chosen brush head to the end of the integrated hose.



Figure 4: Available Brush Heads. This image displays the two brush heads included with the cleaner: a large brush for broad surfaces and a crevice tool for detailed cleaning in tight areas.

OPERATING INSTRUCTIONS

The HAUSHOF StainZapper Air operates in three steps: spray, brush, and vacuum.

FONCTION TOUT-EN-UN

3 Étapes pour Éliminer les Taches



Figure 5: Three-Step Cleaning Process. This diagram visually explains the cleaning function: first, spray the cleaning solution, then brush to agitate dirt, and finally, vacuum to extract the dirty liquid.

1. Spot Cleaning

1. Turn on the appliance using the power button.
2. Position the brush head over the stained area.
3. Press the spray trigger on the brush handle to release cleaning solution onto the stain.
4. Gently brush the stained area to agitate the dirt and allow the solution to penetrate the fibers.
5. Release the spray trigger and slowly pull the brush head over the wet area to vacuum up the dirty solution. Repeat as necessary until the stain is removed.



Figure 6: Spraying Cleaning Solution. This image demonstrates spraying the cleaning solution directly onto a stain.



Figure 7: Brushing the Stain. This image shows the brush head being moved over a stain to agitate and loosen dirt.

2. Cleaning Different Surfaces

- **Carpets:** Use the large brush head for general carpet areas. For pet stains, pre-treat if necessary, then follow the spot cleaning steps.



Figure 8: Cleaning Pet Stains on Carpet. This image shows the cleaner effectively removing a pet stain from a carpet.

- **Upholstery/Sofas:** Use either the large brush or the crevice tool depending on the area. Test on an inconspicuous area first to ensure colorfastness.



Figure 9: Cleaning Sofa Crevices. This image demonstrates using the crevice tool to clean tight spots on a sofa.

- **Stairs:** The portable design makes it easy to clean carpeted stairs.



Figure 10: Cleaning Stairs. The portable nature of the cleaner allows for easy cleaning of carpeted stairs.

- **Car Interiors:** Ideal for cleaning car seats and floor mats.



MAINTENANCE

1. Emptying and Cleaning the Dirty Water Tank

The dirty water tank has a capacity of 800 ml. The appliance will automatically shut off when the dirty water reaches the MAX line (800 ml). A sudden loud noise is normal when this occurs.

1. Remove the dirty water tank from the main unit.
2. Carefully open the tank and dispose of the dirty water.
3. Rinse the dirty water tank thoroughly with clean water.
4. Allow the tank to air dry before reattaching it to the unit.



Figure 12: Emptying the Dirty Water Tank. This image shows the dirty water tank being removed, filled with discolored water after cleaning.

2. Cleaning the Brushes and Hose

After each use, clean the brush heads and rinse the hose.

1. Detach the brush head from the hose.
2. Rinse the brush head under running water to remove any debris or residue.
3. To clear the hose, press the power button for 3 seconds after turning off the unit to activate a suction boost, which will draw any remaining water from the hose into the dirty water tank.
4. Allow all parts to air dry completely before storing.

3. Storage

The integrated hose can be wrapped around the base for compact storage.



Figure 13: Compact Storage. This image illustrates the cleaner being easily carried and stored in a small space, highlighting its lightweight (3.5 kg) and compact dimensions (38x20x30cm).



TROUBLESHOOTING

Problem	Possible Cause	Solution
No suction or weak suction	Dirty water tank is full.	Empty the dirty water tank. The unit automatically shuts off when full.
	Hose or brush head is clogged.	Check and clear any blockages in the hose or brush head.
	Battery is low.	Recharge the battery.

Problem	Possible Cause	Solution
Water leakage from clean water tank	Tank not securely tightened.	Ensure the clean water tank cap is tightly closed.
	Missing sealing ring.	Check if the sealing ring is properly in place. Replace if missing or damaged.
	Clogging by debris.	Clean any debris from the sealing area or valve.
	Blocked valve.	Inspect and clear any blockages in the valve mechanism.
Appliance does not turn on	Battery is not charged.	Charge the battery fully.
	Power button not pressed correctly.	Ensure the power button is pressed firmly.

SOLUTION CONTRE LES FUITES D'EAU PROPRE

Non Serré

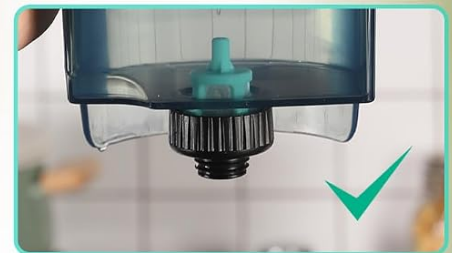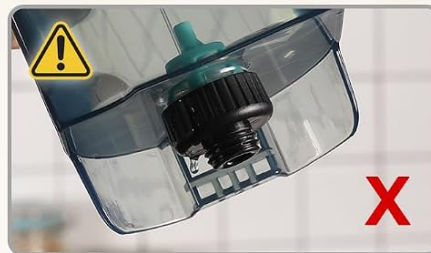

Bague d'Étanchéité Manquante



Colmatage par des Taches



Valve Bloquée

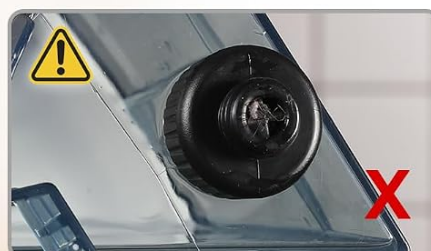


Figure 14: Solutions for Clean Water Leaks. This visual guide helps identify and resolve common issues leading to clean water leaks, such as an untightened cap, a missing sealing ring, clogging by debris, or a blocked valve.

SPECIFICATIONS

- **Model:** StainZapper Air
- **Brand:** HAUSHOF
- **Power Source:** Battery powered (1 Lithium-ion battery included)
- **Motor:** Advanced Brushless Motor
- **Suction Power:** 12,000 Pa
- **Noise Level:** ≤75 dB
- **Clean Water Tank Capacity:** 1.5 Liters (1500 ml)
- **Dirty Water Tank Capacity:** 0.8 Liters (800 ml)
- **Product Dimensions (L x W x H):** 20 x 38 x 30 cm
- **Weight:** 5.36 kg
- **Manufacturer:** Hang Zhou Great Star Industrial Co.,LTD
- **Country of Origin:** China
- **UPC/GTIN:** 820909604365

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official HAUSHOF website or contact your retailer. Keep your purchase receipt as proof of purchase.

Return Policy: This product is subject to a 30-day refund/replacement policy from the date of purchase.