

SONGMICS ULTS518B01

SONGMICS Fabric Dresser with Power Outlets and LED Lights

Model: ULTS518B01

1. INTRODUCTION

Thank you for choosing the SONGMICS Fabric Dresser with Power Outlets and LED Lights. This versatile furniture piece is designed to provide ample storage, a convenient charging station, and ambient lighting for your bedroom, living room, or hallway. It can also function as a TV stand for televisions up to 60 inches. Please read this manual carefully before assembly and use to ensure safe and proper operation.



Figure 1.1: The SONGMICS Fabric Dresser in a room setting, showcasing its functionality as a TV stand with integrated charging and LED lighting.

2. SAFETY INFORMATION

To prevent injury or damage to the product, please adhere to the following safety guidelines:

- **Weight Capacity:** Do not exceed the maximum weight capacity of 100 lb (45.5 kg) on the top surface and 10 lb (4.5 kg) per drawer. The total weight capacity for the unit is 180 lb (81.6 kg). Overloading can cause structural failure.
- **Anti-Tip Kit:** Always install the included anti-tip kit to secure the dresser to the wall. This is crucial to prevent tipping, especially in households with children or pets.
- **Stable Placement:** Ensure the dresser is placed on a flat, stable, and level surface. Use the adjustable feet to compensate for slightly uneven floors.
- **Electrical Safety:** Only use the integrated power outlets and USB ports for compatible devices. Do not overload the charging station. Keep liquids away from electrical components.

- **Assembly:** Follow all assembly instructions carefully. Do not force parts. If you encounter difficulties, refer to the troubleshooting section or contact customer support.
- **Children:** Keep small parts and packaging materials away from children during assembly.



Figure 2.1: Diagram illustrating the installation of the anti-tip kit to secure the dresser to the wall.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Metal Frame Components
- Wooden Top Panel
- Wooden Middle Shelf
- Fabric Drawers (8 units)
- Drawer Knobs
- Adjustable Feet
- Integrated Power Outlet and LED Light Strip with Controller
- Remote Control for LED Lights
- Anti-Tip Kit (Wall anchor, screw, strap)
- Assembly Hardware (Screws, Allen wrench)

4. ASSEMBLY INSTRUCTIONS

Assembly is designed to be straightforward. It is recommended to assemble the unit on a soft, clean surface to prevent scratches. An extra person may be helpful for certain steps.

1. **Assemble the Metal Frame:** Connect the metal frame components using the provided screws and Allen wrench. Ensure all connections are secure but do not overtighten until the frame is fully assembled.
2. **Install Adjustable Feet:** Screw the adjustable feet into the bottom of the metal frame. Adjust them later to ensure stability.
3. **Attach Wooden Panels:** Secure the wooden top panel and the middle wooden shelf to the metal frame using the designated screws.
4. **Install Power Outlet and LED Light:** Carefully place the integrated power outlet and LED light strip into their designated slots on the top panel and middle shelf. Route the power cord as instructed.

5. **Prepare Fabric Drawers:** Unfold each fabric drawer and insert the bottom panel to create a rigid structure. Attach the drawer knobs to the front of each drawer.
6. **Insert Drawers:** Slide the assembled fabric drawers into their respective compartments in the dresser frame.
7. **Install Anti-Tip Kit:** Following the instructions provided with the anti-tip kit, secure the dresser to a wall stud using the wall anchor, screw, and strap. This step is critical for safety.
8. **Final Adjustments:** Adjust the feet to ensure the dresser is level and stable.



Figure 4.1: Visual guide showing the overall dimensions of the dresser and the simple steps for assembling the fabric drawers.



Easy to Assemble

With only 4 pieces and easy-to-follow instructions.



Figure 4.2: The dresser frame partially assembled, highlighting the ease of construction with minimal pieces.

5. OPERATING INSTRUCTIONS

5.1. LED Lights Operation

The integrated LED lights offer customizable illumination for your space. They are controlled via a remote control and a wired controller.

- **Power On/Off:** Use the power button on the remote control or the wired controller to turn the lights on or off.
- **Color Selection:** The remote control allows selection from 25 different colors. Use the color buttons or color wheel on the remote to choose your desired hue.
- **Brightness Adjustment:** Adjust the brightness through 6 levels using the brightness control buttons on the remote.
- **Flash Modes:** Select from 3 different flash modes for dynamic lighting effects.
- **Blink Rates:** Choose from 6 different blink rates to customize the speed of the flashing modes.

Multi-Color Adjustable Lights

7 colors on the remote control + 18 other colors



Savor Charging Convenience



USB-A Port x 2



AC Outlet x 2



4.9 ft (1.5 m) Cord



Figure 5.1: The dresser's LED lights in operation, showing the remote control for various settings and the charging station in use.

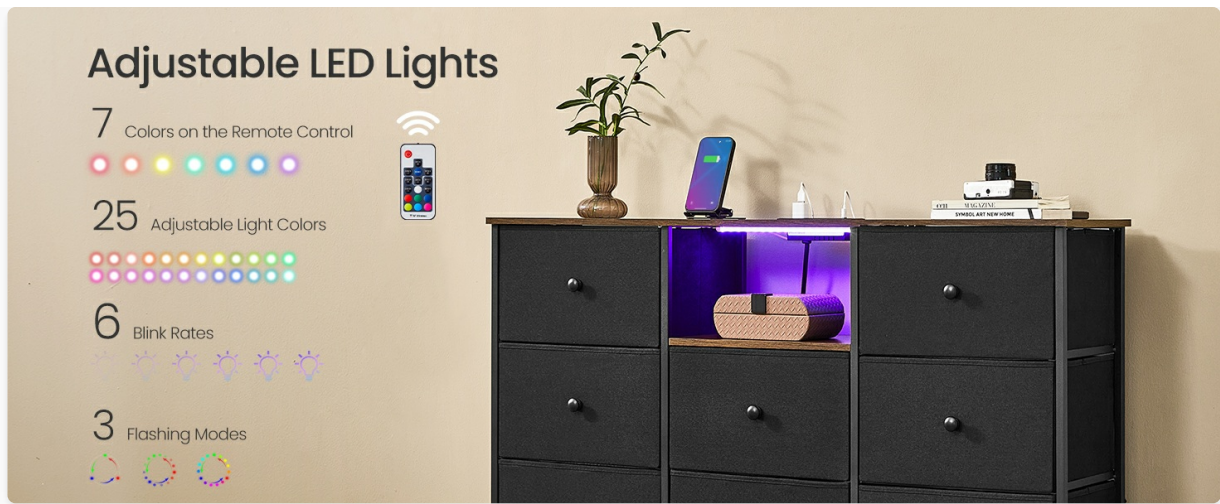


Figure 5.2: Detailed view of the LED light remote control, illustrating the range of 25 adjustable light colors and various modes.



Figure 5.3: The handy 4.9 ft (1.5 m) wired control, showing the on/off button and the change button for colors, brightness, and blink rate.

5.2. Charging Station Usage

The dresser features a built-in charging station on the top surface to keep your devices powered up.

- **USB-A Ports:** Two USB-A ports are available for charging compatible devices such as smartphones, tablets, or other USB-powered gadgets.
- **AC Outlets:** Two standard AC outlets are provided for plugging in electronic devices that require a wall adapter.
- **Power Cord:** The charging station is powered by a 4.9 ft (1.5 m) power cord that plugs into a standard wall outlet.

Charging Convenience

Built-in charging station keeps your devices powered up



USB-A Port x 2



AC Outlet x 2



Figure 5.4: Detailed view of the charging station, showing the two USB-A ports and two AC outlets, with devices connected.

6. CARE AND MAINTENANCE

Proper care will extend the life and appearance of your dresser.

- **Cleaning:** Wipe the wooden and metal surfaces with a damp cloth. For fabric drawers, spot clean with a mild detergent and allow to air dry. Avoid harsh chemicals or abrasive cleaners.
- **Dusting:** Regularly dust all surfaces with a soft, dry cloth.
- **Spills:** Immediately wipe up any spills to prevent staining or damage to the surfaces.
- **Drawer Care:** Do not overstuff the fabric drawers, as this can deform them or damage the fabric.
- **Electrical Components:** Ensure the charging station and LED lights remain dry. Do not immerse in water or expose to excessive moisture.

7. TROUBLESHOOTING

If you encounter issues with your dresser, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dresser is wobbly/unstable.	Uneven floor; loose connections.	Adjust the leveling feet at the bottom of the frame. Check and tighten all screws on the metal frame. Ensure the anti-tip kit is properly installed.
LED lights are not turning on.	Power cord unplugged; remote battery dead; faulty connection.	Ensure the dresser's power cord is securely plugged into a working wall outlet. Check the battery in the remote control. Verify all LED light connections are secure.
Charging station not working.	Power cord unplugged; device not compatible; overloaded circuit.	Confirm the dresser's power cord is plugged in. Test with a different device. Ensure the total power draw does not exceed the charging station's capacity.
Drawers do not slide smoothly.	Overstuffed drawer; drawer not assembled correctly.	Reduce the contents of the drawer. Ensure the bottom panel is fully inserted and the drawer is properly unfolded.

If the problem persists after attempting these solutions, please contact SONGMICS customer support.

8. SPECIFICATIONS

Detailed specifications for the SONGMICS Fabric Dresser:

- **Brand:** SONGMICS
- **Model:** ULTS518B01
- **Color:** Ink Black + Rustic Brown
- **Product Dimensions (Overall):** 47.2" W x 11.8" D x 31.3" H (120 cm x 30 cm x 79.5 cm)
- **Number of Drawers:** 8
- **Material:** Particleboard, Thick Steel, MDF, Non-woven Fabric, Oxford Fabric
- **Top Surface Weight Capacity:** 100 lb (45.5 kg)
- **Per Drawer Weight Capacity:** 10 lb (4.5 kg)
- **Total Weight Capacity:** 180 lb (81.6 kg)
- **Charging Station:** 2x USB-A Ports, 2x AC Outlets
- **LED Lights:** 25 Colors, 6 Brightness Levels, 3 Flash Modes, 6 Blink Rates (Remote Controlled)
- **Power Cord Length:** 4.9 ft (1.5 m)
- **Assembly Required:** Yes
- **Item Weight:** Approximately 29 pounds (13.2 kg)

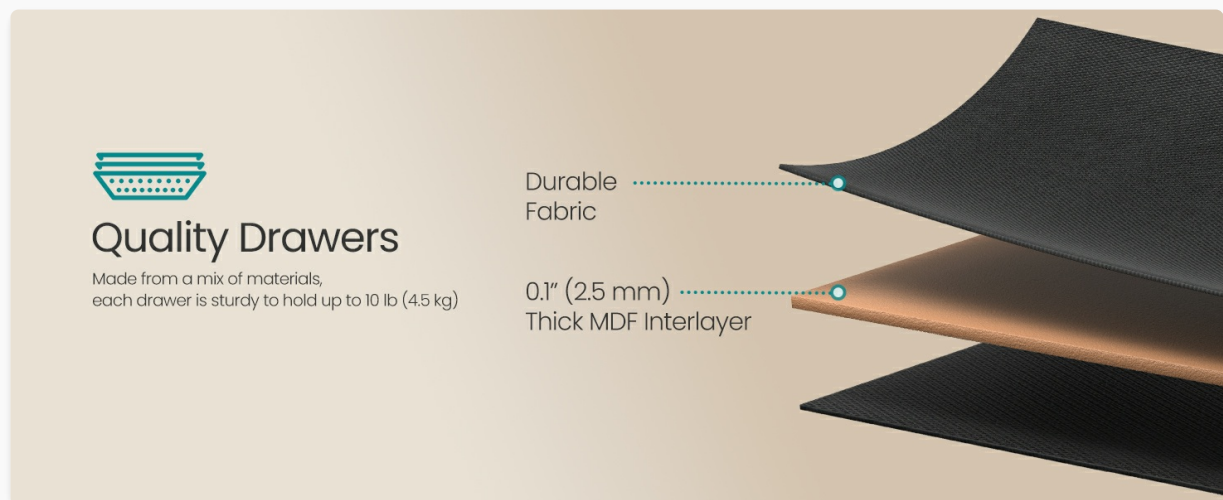


Figure 8.1: Cross-section view of the quality drawer construction, highlighting the durable fabric and 0.1" (2.5 mm) thick MDF interlayer.

8 Spacious Drawers

For sorting various types of clothing



16+
T-Shirts



14+
Shirts



10+
Pants



40+
Ties



60+
Socks



4+
Scarves

Figure 8.2: Illustration of the spacious drawers, demonstrating their capacity for various clothing items like t-shirts, shirts, pants, ties, socks, and scarves.

9. WARRANTY AND SUPPORT

For warranty information, product support, or to order replacement parts, please contact SONGMICS customer service directly. Refer to the contact information provided with your purchase or visit the official SONGMICS website.

Contact Information: Please refer to the contact details provided on the product packaging or the official SONGMICS website for the most up-to-date support information.

